

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Minolta](#) /

> [Minolta MND20 44MP Digital Camera User Manual](#)

## Minolta MND20

# Minolta MND20 44MP Digital Camera User Manual

Your guide to capturing high-quality photos and videos.

## INTRODUCTION

---

The Minolta MND20 Digital Camera is designed for ease of use, allowing you to capture high-resolution photos and 2.7K Ultra HD videos. This compact camera features a 44MP CMOS sensor, 16x digital zoom, anti-shake stabilization, and a 2.9-inch LCD display. This manual provides essential information to help you get started and make the most of your camera's capabilities.



Figure 1: Key features of the Minolta MND20 Digital Camera.

## SETUP

---

### What's in the Box

Your Minolta MND20 camera package includes:

- Minolta MND20 Digital Camera Body
- Rechargeable Battery
- USB Charging Cable

- Wall Adapter
- Wrist Lanyard
- Memory Card (32GB SD/SDXC)
- User Manual
- Carrying Pouch

Video 1: Unboxing the Minolta MND20 Digital Camera and its included accessories.

## Battery Installation and Charging

1. Locate the battery compartment on the bottom of the camera.
2. Slide the latch to open the compartment cover.
3. Insert the rechargeable battery, ensuring the contacts align correctly.
4. Close the compartment cover until it clicks securely.
5. To charge, connect the camera to the wall adapter using the provided USB cable. The charging indicator light will illuminate.

## Memory Card Installation

1. Open the battery compartment cover.
2. Locate the SD card slot next to the battery.
3. Insert the 32GB SD/SDXC memory card with the metal contacts facing the front of the camera until it clicks into place.
4. Close the battery compartment cover.

## OPERATING THE CAMERA

---

### Power On/Off and Basic Controls

To power on the camera, press and hold the power button located on the top. The 2.9-inch LCD display will activate. To power off, press and hold the power button again.

# Effortless Everyday Shooting

Designed to make capturing moments feel simple



Figure 2: Rear view of the camera with LCD screen and control layout.

## Capturing Photos

The Minolta MND20 captures high-resolution 44MP photos. Frame your shot using the LCD display and press the shutter button firmly to take a picture. The camera features:

- **16x Digital Zoom:** Use the zoom controls to get closer to your subject.
- **Anti-Shake Stabilization:** Reduces blur from camera movement.
- **Face Detection & Smile Capture:** Automatically optimizes settings for portraits.
- **Photo Burst:** Captures a rapid sequence of images.
- **Panorama:** Stitch multiple photos together for a wide-angle view.
- **Color Filters & Scene Modes:** Apply creative effects and optimize settings for various environments.



Figure 3: Explore versatile shooting modes for creative photography.

## Recording Videos

The camera supports 2.7K Quad HD video recording for clear and vivid footage, as well as 1080p Full HD. To start recording, switch to video mode and press the record button. The Time Lapse feature allows you to condense long sequences of events into short videos.



Figure 4: Visual representation of video resolution differences.

## MAINTENANCE

---

### Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens and LCD screen, use a specialized lens cleaning cloth and solution to avoid scratches.
- Do not use harsh chemicals or abrasive materials.

### Battery Care

- Store the battery in a cool, dry place when not in use.
- Avoid fully discharging the battery frequently to prolong its lifespan.
- Use only the provided charger and cable.

### Memory Card Handling

- Always format new memory cards in the camera before first use.

- Safely eject the memory card from the camera or computer to prevent data corruption.
- Keep memory cards in their protective cases when not in use.

## TROUBLESHOOTING

### Common Issues and Solutions

Problem	Possible Cause	Solution
Camera not turning on	Low or depleted battery; improperly inserted battery.	Charge the battery fully. Ensure the battery is inserted correctly.
Poor image quality (blurry, noisy)	Low light conditions; excessive digital zoom; camera shake; dirty lens.	Shoot in well-lit environments. Avoid maximum digital zoom. Use anti-shake stabilization. Clean the lens.
Battery drains quickly	Frequent use of flash or video recording; continuous LCD display use.	Reduce flash usage. Limit continuous video recording. Adjust LCD brightness or set shorter auto-off time.
Memory card error	Improperly inserted card; corrupted card; incompatible card.	Reinsert the card. Try formatting the card (this will erase data). Ensure it's an SD/SDXC card.
Controls unresponsive	Temporary software glitch; low battery.	Remove and reinsert the battery. Charge the battery.

## SPECIFICATIONS

Feature	Detail
Model Name	MND20
Photo Sensor Resolution	44 MP
Video Resolution	2.7K Quad HD, 1080p Full HD
Digital Zoom	16x
Image Stabilization	Digital
Screen Size	2.9 Inches LCD
Photo Sensor Technology	CMOS
Supported File Format	JPEG (Photos), MP4 (Video)
Connectivity Technology	USB
External Memory Size	Up to 32 GB (SD/SDXC)
Item Weight	0.24 Pounds
Battery Type	Rechargeable Li-ion

## WARRANTY AND SUPPORT

---

### Manufacturer's Warranty

The Minolta MND20 Digital Camera comes with a Limited 1 Year Manufacturer's Warranty. Please retain your proof of purchase for warranty claims.

### Customer Support

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please visit the official Minolta support website or contact their customer service department. Contact information can typically be found on the product packaging or the Minolta brand website.