

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY ZC/LW-01 Replacement Remote Control User Manual for Chigo AC Air Conditioners

ALLIMITY ZC/LW-01

ALLIMITY ZC/LW-01 Replacement Remote Control User Manual

For Chigo AC Air Conditioner Models ZCLW-01, ZC-LW-03, ZH/LW-01, ZH/LW-03, ZHF/LW-15, ZCF/LW-15, ZCF/LF-15

[Introduction](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. INTRODUCTION

This manual provides instructions for the ALLIMITY ZC/LW-01 Replacement Remote Control, designed for use with various Chigo AC Air Conditioner models. This remote control is a direct replacement and requires no programming for operation. Please read this manual thoroughly before use to ensure proper functionality and to familiarize yourself with its features.



Image 1.1: Front view of the ALLIMITY ZC/LW-01 Replacement Remote Control, showing the display and various control buttons.

2. SETUP

2.1 Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.

2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: Remove batteries if the remote control will not be used for an extended period to prevent leakage and damage.





Image 2.1: Back view of the remote control with the battery compartment open, showing where to insert AAA batteries.

3. OPERATING INSTRUCTIONS

This section describes the functions of the buttons on your ALLIMITY ZC/LW-01 remote control.





Image 3.1: Close-up view of the remote control's buttons and display for reference during operation.

Button	Function
ON/OFF	Powers the air conditioner on or off.
Temperature Up/Down (Triangle buttons)	Adjusts the desired temperature setting.
MODE	Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
FAN SPEED	Adjusts the fan speed (e.g., Low, Medium, High, Auto).
SWING	Activates or deactivates the automatic swing function of the air conditioner's louvers.
VANE CONTROL	Adjusts the vertical position of the air conditioner's louvers.
SLEEP	Activates the sleep mode, which typically adjusts temperature and fan speed for comfortable sleep.
AUTOSTART	Sets a timer for the air conditioner to automatically turn on. Use with HOUR and MIN buttons.
AUTOSTOP	Sets a timer for the air conditioner to automatically turn off. Use with HOUR and MIN buttons.

Button	Function
HOURL	Used to set the hour for timer functions (AUTOSTART/AUTOSTOP) or the current time (CLK).
MIN	Used to set the minute for timer functions (AUTOSTART/AUTOSTOP) or the current time (CLK).
CLK (Clock)	Sets the current time on the remote control's display.
RST (Reset)	Resets the remote control settings or clears timer settings.

4. MAINTENANCE

4.1 Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these may damage the remote control.

4.2 Battery Replacement

Replace the batteries when the remote control's display becomes dim or its operating range decreases. Refer to Section 2.1 for battery installation instructions.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not working.	<ul style="list-style-type: none">• Batteries are dead or incorrectly installed.• Obstruction between remote and AC unit.• Remote control is too far from the AC unit.	<ul style="list-style-type: none">• Replace batteries and ensure correct polarity.• Remove any obstructions.• Move closer to the AC unit.
Display is dim or blank.	Low battery power.	Replace batteries.
AC unit does not respond to commands.	<ul style="list-style-type: none">• Remote control is not compatible with the specific AC unit model.• AC unit's infrared receiver is blocked or faulty.	<ul style="list-style-type: none">• Verify compatibility with your AC model (refer to product description).• Ensure the AC unit's receiver is clear. Consult your AC unit's manual.

6. SPECIFICATIONS

Model: ZC/LW-01

Brand: ALLIMITY

Compatible AC Brands: Chigo

Compatible AC Models: ZCLW-01, ZC-LW-03, ZH/LW-01, ZH/LW-03, ZHF/LW-15, ZCF/LW-15, ZCF/LF-15

Power Source: 2 x AAA Batteries (not included)
Dimensions: 0.72 x 6.5 x 1.38 inches (approx.)
Weight: 2.5 ounces (without batteries)
Special Feature: No Programming Required

7. WARRANTY AND SUPPORT

This ALLIMITY remote control is designed for reliable performance. For any issues or questions regarding its operation, please refer to the troubleshooting section of this manual or contact the seller directly through the platform where the purchase was made. Specific warranty details may vary by retailer; please consult your purchase documentation for more information.

© 2023 ALLIMITY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question