

TOSHIBA AW-700Z2

TOSHIBA AW-700Z2 7kg Fully Automatic Washing Machine

INSTRUCTION MANUAL

1. Introduction

Thank you for purchasing the TOSHIBA AW-700Z2 7kg Fully Automatic Washing Machine. This manual provides essential information for safe and efficient operation, installation, maintenance, and troubleshooting. Please read it thoroughly before using your new washing machine and keep it for future reference.

2. Safety Information

For your safety and to prevent damage to the appliance, please observe the following precautions:

- Always connect the washing machine to a grounded power outlet.
- Do not operate the machine if the power cord or plug is damaged.
- Keep children and pets away from the washing machine during operation.
- Do not wash items that are waterproof or water-repellent, as this may cause abnormal vibrations.
- Ensure the water supply hoses are securely connected to prevent leaks.
- Do not attempt to repair or modify the appliance yourself. Contact qualified service personnel.

3. Product Overview

The TOSHIBA AW-700Z2 is a 7kg fully automatic washing machine designed for efficient and thorough cleaning. Key features include:



Figure 3.1: Front view of the TOSHIBA AW-700Z2 washing machine.

- **W-Shower Wash:** Two powerful showers ensure detergent penetrates deep into fabrics for even and clean results.

ダブル Wシャワー洗浄

2本のシャワーで洗剤液を衣類全体にしっかり浸透させるから、ムラを抑えてキレイに洗います。



〈イメージ図〉



洗浄前



洗浄後

●AW-7GM2、標準コースで3kg洗濯時。●衣類の量・汚れ・洗剤の種類などによって効果は異なります。(東芝ライフスタイル株式会社調べ)

Figure 3.2: Illustration of the W-Shower Wash system.

- **Room Dry Mode:** Extends spin time to remove more moisture using air, reducing indoor drying time for up to 3kg of laundry.



Figure 3.3: Clothes drying indoors, demonstrating the benefit of Room Dry Mode.

- **Speed Course:** Washes 1kg of laundry in approximately 10 minutes, ideal for small, lightly soiled loads (up to 2.5kg).

スピードコース (洗濯容量2.5kgまで)

1kgの衣類なら
約10分でお洗濯。
お急ぎの時でも
手軽にお洗濯
できます。



●すすぎ1回対応の洗剤をお使いください。

Figure 3.4: Visual representation of the 10-minute Speed Course.

- **Cassette Lint Filter:** Easy to remove and clean, ensuring efficient lint collection.
- **Durable Stainless Steel Tub:** Provides a hygienic washing environment and long-lasting performance.
- **Minimum Water Level (12L):** Manual setting for washing small loads with less water.
- **Protective Cover:** Included to help prevent objects from falling into the machine's base, especially when installed on a raised waterproof pan.



Figure 3.5: Diagram of the included protective cover.

4. Setup

Proper installation is crucial for the performance and longevity of your washing machine. Please ensure sufficient space and correct connections.

Installation Space Requirements:

- Allow at least 10cm clearance around the product dimensions for proper ventilation and door opening.
- Ensure at least 1cm clearance from the left/right walls and 1cm from the rear wall for drain hose connection.
- When opening the lid, ensure 10-15cm of overhead clearance.
- The washing machine can be installed on a waterproof pan with an inner depth of 540mm or more.

商品寸法+10cm以上の幅が必要です。

《搬入における確認項目》

 
※段差やコーナー箇所があり、直線ではない場合、+10cm以上の幅が必要となります。
※手すり・照明・装飾物などがある場合、そこから+10cmの幅が必要となります。

〈商品の寸法〉




〈玄関の高さ〉

商品寸法+10cm

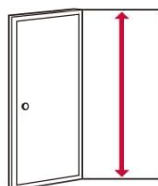


〈玄関の幅〉

 商品寸法+10cm

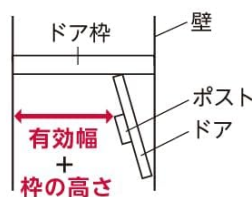

〈廊下の幅〉

 商品寸法+10cm

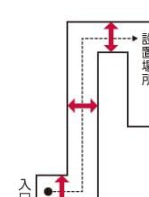


〈エレベータの幅〉

商品寸法+10cm




〈階段の幅〉

 商品寸法+10cm

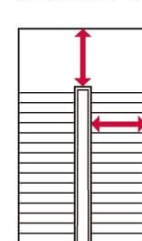


《設置における確認項目》

 ・必要なスペースは商品によって異なるため、詳細はメーカーページなどでご確認ください。
・洗濯機の設置時にはドアを開閉するため上部のスペース確保が必要となります。

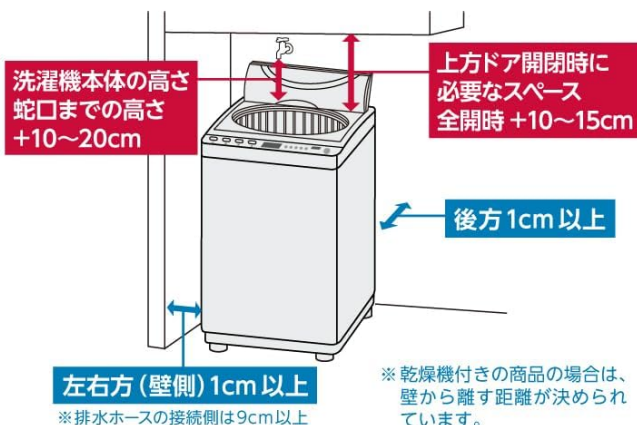

防水パンの有無と内側サイズをチェック

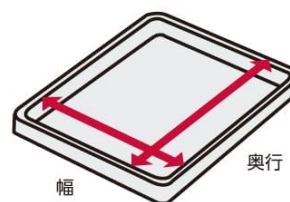 

※ 排水エルボ・足台の有無と排水口位置によって、追加費用がかかることがあります。

Figure 4.1: Recommended installation clearances and dimensions.

Connections:

- Connect the water supply hose securely to the water tap and the washing machine's inlet.
- Position the drain hose to ensure proper drainage without kinks or blockages.
- Plug the power cord into a dedicated, grounded 100V AC outlet.

5. Operating Instructions

Follow these steps for basic operation of your washing machine:

1. **Load Laundry:** Open the lid and place laundry loosely into the tub. Do not overload.
2. **Add Detergent and Softener:** Add the appropriate amount of detergent to the detergent dispenser and fabric softener to its designated compartment.
3. **Select Course:** Press the 'Course' button to select your desired washing program (e.g., Standard, Speed, Room Dry).
4. **Adjust Settings (Optional):** Depending on the course, you may adjust water level, rinse cycles, or spin time.
5. **Start Wash:** Press the 'Start/Pause' button to begin the wash cycle.

6. **End of Cycle:** The machine will signal when the cycle is complete. Remove laundry promptly.

6. Washing Programs

The TOSHIBA AW-700Z2 offers various programs to suit different laundry needs:

- **Standard Course:** For daily laundry with normal soil levels.
- **Speed Course:** Ideal for small loads (up to 2.5kg) or lightly soiled items, completing a wash in about 10 minutes for 1kg.
- **Room Dry Mode:** Extends spin to reduce drying time for indoor drying (up to 3kg).
- **Tub Cleaning Course:** Use this program to clean the washing machine tub.
- **Minimum Water Level (12L):** Manually set for very small loads to conserve water.

7. Maintenance

Regular maintenance ensures optimal performance and hygiene of your washing machine.


1. Cleaning the Cassette Lint Filter:

1. Remove the lint filter from the tub.
2. Open the filter and discard collected lint.
3. Rinse the filter under running water to remove any remaining debris.
4. Reattach the filter securely in its position.

清潔

カセット式 糸くずフィルター

糸くずが捨てやすく、
お手入れが簡単です。

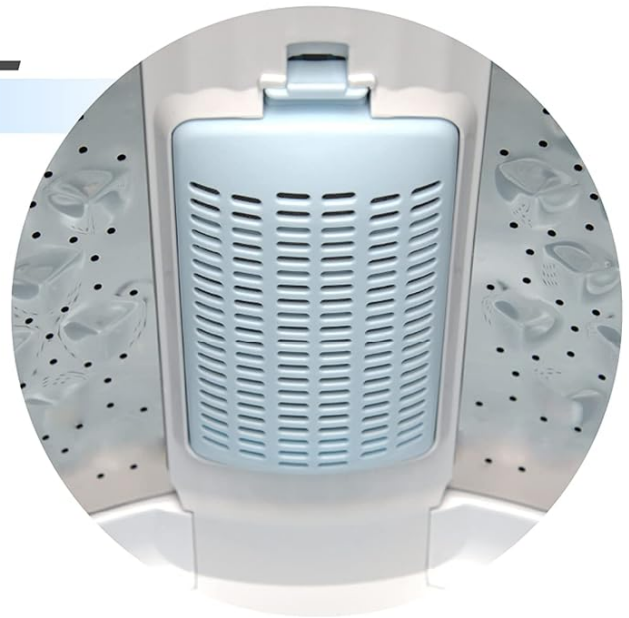

さらに！

槽洗浄・槽乾燥で清潔をキープ

清潔なステンレス槽を使用。

Figure 7.1: The removable cassette lint filter.

2. Tub Cleaning:

- Use the dedicated 'Tub Cleaning' course regularly to prevent mold and detergent residue buildup.
- Follow the instructions for your chosen tub cleaner.

3. Exterior Cleaning:

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.

8. Troubleshooting

If you encounter any issues, refer to the table below for common problems and solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
---------	----------------	----------


Problem	Possible Cause	Solution
Machine does not start.	Power cord unplugged, lid not closed, water supply off.	Check power connection, ensure lid is fully closed, open water tap.
Water does not fill.	Water tap closed, water supply hose kinked, water filter clogged.	Open water tap, straighten hose, clean water inlet filter.
Excessive vibration/noise.	Machine not level, unbalanced load, shipping bolts not removed.	Adjust leveling feet, redistribute laundry, ensure shipping bolts are removed (if applicable).
Water does not drain.	Drain hose kinked or blocked, drain pump filter clogged.	Check and clear drain hose, clean drain pump filter.

9. Specifications

Detailed technical specifications for the TOSHIBA AW-700Z2 washing machine:

Feature	Specification
Model Number	AW-700Z2(W)
Capacity	7 kg
Dimensions (D x W x H)	56 cm x 55.5 cm x 99 cm (including hoses)
Body Width	51.5 cm
Weight	Approx. 33 kg
Power Supply	100V AC
Power Consumption (Wash)	450W (50Hz) / 510W (60Hz)
Standard Water Usage (Wash)	Approx. 113 L
Standard Water Level	53-23 L (Manual: 12 L)
Standard Wash Time	Approx. 49 minutes
Tub Material	Stainless Steel
Control Type	Button
Access Location	Top
Included Components	Drain hose, Water supply hose, Power cord

寸法図

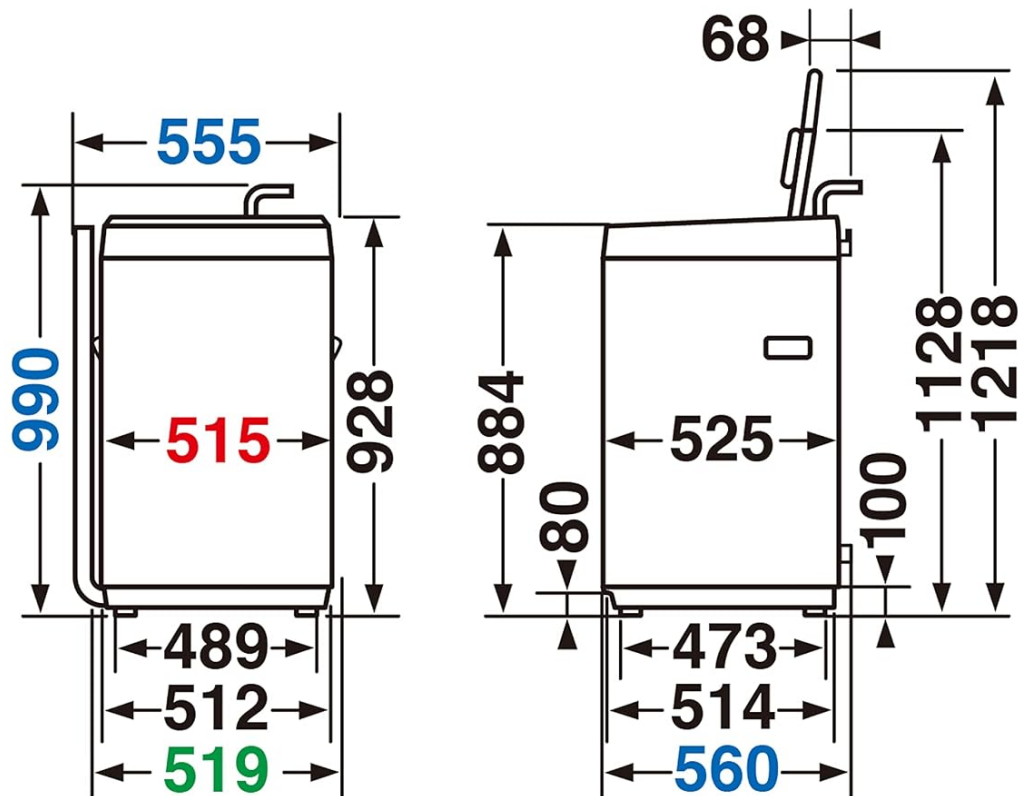

- 奥行（内寸）が540mmより大きな防水パンに設置できます。
- 寸法図の青色は総外形寸法、赤色はボディ幅、緑色は左右の手掛け部を含むボディ幅を示しています。

Figure 9.1: Detailed dimensional drawing of the TOSHIBA AW-700Z2.

10. Warranty and Support

Warranty Information:

This product comes with a 1-year warranty from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty is valid for use within Japan only.

Customer Support:

For technical assistance, service requests, or inquiries about your TOSHIBA washing machine, please contact TOSHIBA customer support. Refer to the official TOSHIBA website or your purchase documentation for contact details.

Online Resources: You can find additional support and FAQs on the official TOSHIBA website: <https://www.toshiba-lifestyle.com/jp/>

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question