

## OMAIC Universal Remote Control

# OMAIC Universal Remote Control for Hisense Smart TVs - Instruction Manual

Your guide to setting up and operating your OMAIC replacement remote control.

## 1. SETUP

### 1.1 Package Contents

- 2 x OMAIC Universal Remote Controls

### 1.2 Battery Installation

To install batteries, slide open the battery compartment cover on the back of the remote control. Insert two AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment. Close the cover securely.



## Universal Compatible with ALL **Hisense** 4K ULED HD UHD Android Smart TVs

*Description: This image illustrates the open battery compartment of the remote control, highlighting where to correctly insert two AAA batteries. Batteries are not included with the remote control.*

### 1.3 Initial Setup (No Programming Required)

The OMAIC Universal Remote Control is designed for immediate use with most Hisense Smart TVs. No additional programming or pairing is required. Simply install the batteries, and the remote is ready to operate your television.

## 2. OPERATING INSTRUCTIONS

### 2.1 Basic Functions

The remote control features a standard layout for easy navigation and control of your Hisense TV. Refer to the diagram below for button identification and their corresponding functions.



*Description: This image provides a detailed layout of the remote control, with labels for each button, including Power, Input, Number Pad, CC (Closed Caption), Settings, All Apps, D-pad, OK, Back, Home, Exit, Volume, Channel, Mute, Playback controls, and Sleep.*

Button	Function
Power	Turns the TV on or off.
Input	Changes the TV input source.
Number Buttons (0-9)	Enters channel numbers or input numbers.
CC	Activates or deactivates Closed Captioning.
D-pad (Up/Down/Left/Right)	Navigation buttons for menus and selections.
OK	Confirms selection.
Back	Returns to the previous menu or application.
Home	Displays the Home screen.
Exit	Exits the current application or menu.

Button	Function
<b>VOL +/-</b>	Adjusts volume up or down.
<b>CH +/-</b>	Changes channels up or down.
<b>Mute</b>	Mutes or restores sound.
<b>Playback Controls</b>	Controls media playback (Play, Pause, Stop, Rewind, Fast Forward).
<b>Sleep</b>	Adjusts the sleep timer setting.

## 2.2 Shortcut Buttons

The remote includes dedicated shortcut buttons for quick access to popular streaming services:

- Netflix
- Prime Video
- YouTube
- Google Play



Description: This image focuses on the lower section of the remote control, clearly showing the dedicated buttons for Netflix, Prime Video, YouTube, and Google Play, allowing for instant access to



these streaming platforms.

## 2.3 Infrared Technology

This remote control operates using infrared (IR) technology, providing a long-distance control range of approximately 8-10 meters (32 feet). Ensure a clear line of sight between the remote and your TV's IR receiver for optimal performance.



*Description: This image visually represents the effective operating distance of the infrared remote control, indicating a range of up to 32 feet for controlling the television.*

## 2.4 Product Demonstration Video

Watch this video for a visual demonstration of the remote control's functionality with Hisense TVs.

*Description: This video demonstrates the OMAIC replacement remote control (model EN2A27) in use with a Hisense Smart TV, showcasing its various functions and ease of operation.*

## 3. COMPATIBILITY

This universal remote control is compatible with a wide range of Hisense Smart TVs, including but not

limited to the following series and remote models:

- **Hisense TV Series:** H9, H8, H5510G, H65, H55, H9G, A60, H5500F Series, etc.
- **Compatible Remote Models:** EN2A27, EN2A127H, EN2A27HT, EN2AN27H, EN2AS27H, EN2B27, EN2C27, EN2D27, EN2G27, EN33922A, EN33924HS, EN33925A, EN33926A, EN33927A, EN2BN27H, ERF2A60.

*Note: This remote control does not support voice control functions.*

## 4. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from drops and impacts, which can damage internal components.

## 5. TROUBLESHOOTING

If you encounter issues with your OMAIC Universal Remote Control, refer to the following common troubleshooting steps:

- **Remote not responding:**
  - Ensure batteries are correctly installed with proper polarity.
  - Replace old batteries with new AAA batteries.
  - Check for any obstructions between the remote and the TV's IR receiver.
- **Short operating range:**
  - Ensure batteries are fresh.
  - Verify there are no strong light sources (like direct sunlight) interfering with the IR signal.
- **Specific buttons not working:**
  - Clean the remote's surface and buttons to remove any dirt or debris that might be causing sticking.
  - Confirm your TV model is listed as compatible. While universal, some advanced functions on specific TV models might not be fully supported.

## 6. SPECIFICATIONS





- **Brand:** OMAIC
- **Item Weight:** 6.4 ounces
- **Package Dimensions:** 9.53 x 4.53 x 1.3 inches
- **Special Feature:** Universal
- **Max Number of Supported Devices:** 1 (per remote)
- **Compatible Devices:** Television
- **Connectivity Technology:** Infrared (IR)

## 7. WARRANTY AND SUPPORT

OMAIC is committed to providing quality replacement remote controls and excellent customer service. If you have any questions or concerns regarding your order or the product's functionality, please contact our professional after-sale service team directly. We aim to respond within 12 hours on working days to assist you.

For support, please refer to the contact information provided with your purchase or visit the OMAIC store on Amazon.

### Related Documents - Universal Remote Control

	<a href="#">Universal UR2-211 Easy Clicker Remote Control Operating Manual   Setup &amp; Programming Guide</a> Operating manual for the Universal UR2-211 Easy Clicker remote control. Provides instructions on setup, button functions, battery replacement, and programming for various devices like TVs, cable boxes, and IPTV set-top boxes. Includes quick setup, manual programming, and auto-search methods.
	<a href="#">UR2-211 Universal Remote Control Operating Manual</a> Comprehensive operating manual for the UR2-211 Universal Remote Control, detailing setup, programming methods (Quick Set-Up, Manual, Auto Search), and device code tables for various brands of cable boxes and TVs.
	<a href="#">Universal Remote Control MX-350 Owner's Manual</a> User manual for the Universal Remote Control MX-350, providing step-by-step instructions for setup, programming, and advanced features to automate your home entertainment system.
	<a href="#">Universal Remote Control UR2-211: Operating Manual and Programming Guide</a> Comprehensive guide for the Universal Remote Control UR2-211, detailing its features, button functions, battery replacement, and step-by-step programming instructions for various audio-visual devices. Includes setup code tables for popular brands.

 


### [WR7 Universal Remote Control Owner's Manual](#)

User guide for the WR7 Universal Remote Control, detailing setup, features, and troubleshooting for controlling various home entertainment components.

### **Operating Manual For Easy Clicker**

UR3-SR2



### [UR3-SR2 Universal Remote Control Operating Manual](#)

Comprehensive operating manual for the UR3-SR2 Universal Remote Control, detailing setup, button functions, programming instructions, and extensive device code tables for Cable TV, TV, VCR, and DVD players.