

[Manuals.plus](#) /

› [Aokrean](#) /

› Aokrean Grow Lights for Indoor Plants User Manual

Aokrean BL-C10A

Aokrean Grow Lights for Indoor Plants User Manual

Model: BL-C10A | Brand: Aokrean

INTRODUCTION

Thank you for choosing the Aokrean Grow Lights for Indoor Plants. This product is designed to provide optimal lighting conditions for your indoor plants, promoting healthy growth and vitality. Featuring 48 full-spectrum LEDs, adjustable height, multiple lighting modes, and an intelligent timer, this grow light is versatile and easy to use. Please read this manual thoroughly before operation to ensure proper setup and usage.



The Aokrean Grow Lights provide essential light for indoor plants.


PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 3.4in Aokrean Halo Grow Light (2 units)
- Power Adapter (2 units)
- Pole (2 units)
- ABS Base (2 units)



Package

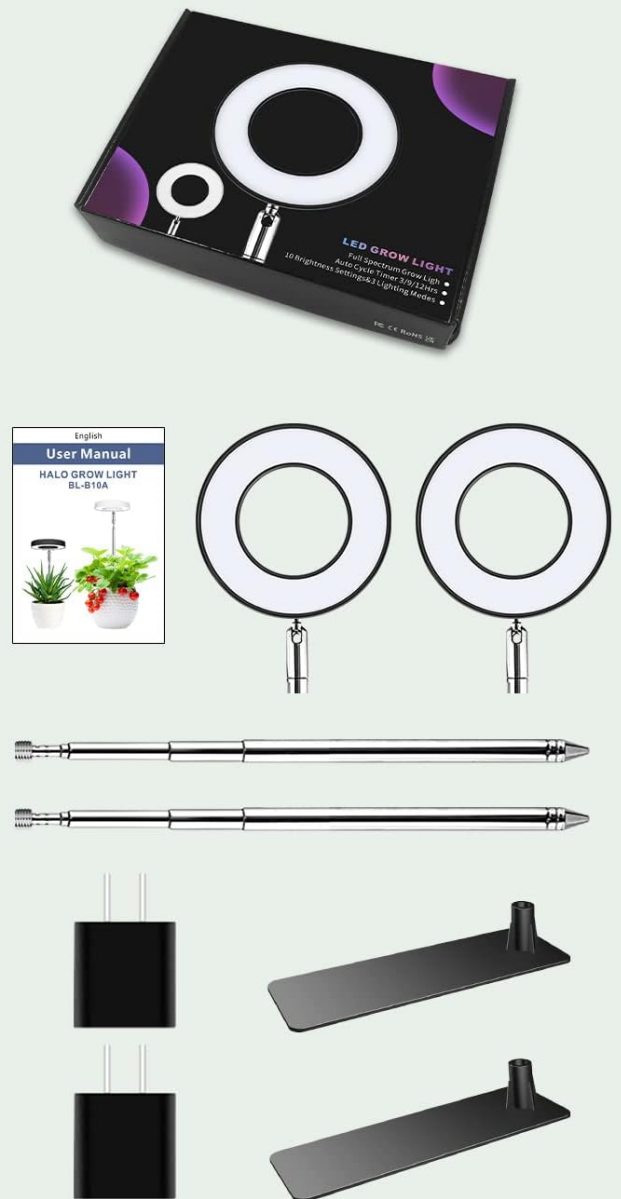

All components included in the product package.

SETUP INSTRUCTIONS

The Aokrean Grow Light offers two convenient installation methods:

Method 1: Detachable Base Installation

1. Insert the grow light pole into the designated slot on the ABS base.
2. Place your potted plant directly onto the ABS base to ensure stability. The weight of the pot helps secure the light.
3. Adjust the height of the light pole to suit your plant's needs.

Method 2: Insert into Soil

1. Gently insert the pointed end of the grow light pole directly into the soil of your potted plant.
2. Adjust the height of the light pole to provide optimal illumination for your plant.
3. Rotate the light head to adjust the angle of illumination as needed.

Two-Ways Installation

① DETACHABLE BASE



1. Insert to base



2. Potted plants on base



3. Adjust height

② INSERT SOIL



1. Insert to soil



2. Adjust height



3. Adjust Angle

Two installation methods for versatile placement.



The grow light pole is height adjustable from 6.5 inches to 26 inches.

OPERATING INSTRUCTIONS

The Aokrean Grow Light features an intelligent controller for easy operation.

Controller Functions:

- **Power Button:** Press to turn the light On or Off.
- **Dimming Levels:** Use the '+' and '-' buttons to adjust brightness. There are 10 dimming levels to meet different illumination requirements for various growth stages.
- **Lighting Modes:** Cycle through 3 lighting spectrums: White Light, Warm White and Red Light, or a Mix of all lights.
- **Timer Settings:** Activate the automatic cycle timing function. Choose from 3H (3 hours), 9H (9 hours), or 12H (12 hours). Once set, the light will automatically turn on and off at the same time each day according to your selection, as long as power is maintained.

INTELLIGENT CONTROLLER

3 Timing Settings



3 Hours



9 Hours



12 Hours



10 Dimming Levels

Meet the light needs of plants in different growth stages



3 Switch Modes

Warm White Red+White Light
All Light On



3 Timing Settings

3/9/12 hour and 24hrs Cycle
Timer Automatic On/Off



Turn On/Off

Automatic switch for energy saving



10%



20%



40%



60%



80%



100%

Intelligent controller with dimming, spectrum, and timer functions.

3 Lighting Spectrum: White Light/Warm White Light&Red Light, All Light on



Choose from White Light, Warm White & Red Light, or All Light On modes.

Maintenance

To ensure the longevity and optimal performance of your Aokrean Grow Lights, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the LED light surface and pole with a soft, dry cloth to remove dust and debris. Do not use abrasive cleaners or immerse the unit in water.
- **Power Off Before Cleaning:** Always unplug the grow light from the power source before cleaning or performing any maintenance.
- **Cable Care:** Avoid bending or crimping the power cable excessively. Ensure it is not placed in areas where it can be tripped over or damaged.
- **Storage:** If storing the grow light for an extended period, disassemble it and store in a cool, dry place away from direct sunlight and moisture.

Troubleshooting

If you encounter issues with your Aokrean Grow Light, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power, loose connection, or faulty adapter.	Ensure the power adapter is securely plugged into a working outlet and the light. Try a different outlet.
Light is unstable or tips over.	Insufficient weight on the base or uneven surface.	Ensure the plant pot is placed firmly on the base to provide stability. Place the unit on a flat, stable surface.
Timer function is inaccurate or shifts over time.	Minor internal clock drift.	Periodically reset the timer by unplugging and replugging the unit, then setting the desired timer duration again.
Light output is dim or inconsistent.	Brightness setting is low or dust on LEDs.	Increase brightness using the '+' button. Clean the LED surface gently with a dry cloth.

Specifications

Key technical specifications for the Aokrean Grow Light (Model: BL-C10A):

Feature	Detail
Model Name	BL-C10A
Product Dimensions	4.7"D x 3.4"W x 26"H (max height)
Item Weight	12.63 ounces
Light Source Type	LED

Feature	Detail
Number of Light Sources	48
Wattage	10 watts
Voltage	5 Volts
Light Color	6000K Full Spectrum (White, Warm White, Red)
Control Method	Touch (via inline controller)
Connectivity Technology	USB
Cable Length	6 Feet
Material	Aluminum (pole), ABS (base)
Indoor/Outdoor Usage	Indoor
Water Resistance Level	Not Water Resistant

WARRANTY AND SUPPORT

Aokrean products are manufactured with quality and customer satisfaction in mind. This product is typically covered by a 30-day return policy for refunds or replacements, as per standard retail terms.

For any product inquiries, technical support, or warranty claims, please contact the seller or manufacturer directly through your purchase platform. Please have your order number and product model (BL-C10A) ready for faster assistance.

© 2025 Aokrean. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question