

Deerma DEM-JR08

Deerma JR08 Wireless Electric Meat Grinder

User Instruction Manual

1. INTRODUCTION

Thank you for choosing the Deerma JR08 Wireless Electric Meat Grinder. This multifunctional appliance is designed to simplify your food preparation tasks, offering convenience and efficiency for grinding meat, whisking eggs, and peeling garlic. Its wireless and portable design makes it a versatile addition to any kitchen.

Please read this manual thoroughly before operating the appliance to ensure safe and correct usage. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

- Always ensure the appliance is fully charged before first use.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Keep hands and utensils away from moving blades during operation.
- Ensure the lid is securely locked in place before starting the grinder.
- This appliance is intended for household use only. Do not use it for commercial purposes.
- Keep out of reach of children.
- Do not process extremely hard ingredients like bones or frozen foods, as this may damage the blades or motor.
- Unplug the appliance from the charging cable before assembling, disassembling, or cleaning.

3. PRODUCT OVERVIEW AND COMPONENTS

The Deerma JR08 comes with several components designed for various functions and easy storage.



Image 3.1: Overview of the Deerma JR08 Meat Grinder and its accessories. It includes the main motor unit, various blade attachments, and three stainless steel bowls of different capacities (0.8L, 1.0L, 1.2L).

Wireless nesting doll meat grinder

- Wireless Speed Twisting
- Variety cuisine



Image 3.2: Detailed view of the Deerma JR08 highlighting its three main functions: garlic peeling, meat grinding, and whisking. It also shows the three distinct bowl sizes for different food types.

Components:

- **Motor Unit:** The main power unit with controls.
- **Meat Grinder Blade:** Stainless steel blade for chopping meat, vegetables, and nuts.
- **Egg Beater Attachment:** For whisking eggs and other liquids.
- **Garlic Peeler Attachment:** For efficiently peeling garlic cloves.
- **0.8L Bowl:** Ideal for fruits and vegetables.
- **1.0L Bowl:** Suitable for ground meat.
- **1.2L Bowl:** Designed for food supplements or larger quantities.
- **Lid:** Secures the contents during operation.
- **Charging Cable:** For recharging the built-in battery.

Three Independent Food Bowls With A Nesting Doll Design For Easy Storage



Image 3.3: The three stainless steel bowls are designed to nest within each other, providing a compact and convenient storage solution.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Charge:** Before first use, fully charge the motor unit using the provided charging cable. The indicator light will show charging status.
3. **Clean Components:** Wash the bowls, blades, and attachments with warm soapy water. Rinse thoroughly and dry completely before assembly. The motor unit should only be wiped with a damp cloth.
4. **Select Bowl:** Choose the appropriate bowl size (0.8L, 1.0L, or 1.2L) based on the quantity and type of ingredients you plan to process.
5. **Insert Blade/Attachment:** Carefully place the desired blade (meat grinder blade) or attachment (egg beater, garlic peeler) onto the central shaft inside the bowl. Ensure it sits securely.
6. **Add Ingredients:** Place your ingredients into the bowl. Do not overfill; ensure ingredients are below the maximum fill line.

7. **Attach Motor Unit:** Place the motor unit onto the lid, aligning it correctly, then place the lid with the motor unit onto the bowl. Twist or press down until it locks securely in place.

5. OPERATING INSTRUCTIONS

The Deerma JR08 features wireless operation and multiple modes for different tasks.



Image 5.1: A user preparing diced pumpkin to be processed in the Deerma JR08, demonstrating its use for vegetables.

General Operation:

1. After setup (Section 4), ensure the motor unit is securely attached to the lid and bowl.
2. Press and hold the power button on the motor unit to start operation. The appliance will operate as long as the button is held down.
3. Release the button to stop.
4. For optimal results, use short pulses rather than continuous operation, especially for tougher ingredients.

Saves Your Prep Time / Meet Multiple Needs



Image 5.2: A user demonstrating the simple operation of the Deerma JR08 by pressing the top button to activate the grinding function.

Specific Functions:

- **Meat Grinding:** Use the meat grinder blade. Cut meat into small cubes (approx. 2-3 cm) before placing them in the 1.0L bowl. Process in short pulses until desired consistency is achieved.
- **Vegetable/Fruit Chopping:** Use the meat grinder blade. Cut vegetables/fruits into small pieces. Use the 0.8L bowl for smaller quantities. Pulse until finely chopped.
- **Egg Beating:** Attach the egg beater. Use the 1.2L bowl. Add eggs or liquid ingredients. Operate until desired consistency (e.g., frothy, whipped) is reached.
- **Garlic Peeling:** Attach the garlic peeler. Place garlic cloves (without skin) into the bowl. The peeler will agitate the cloves, separating the skin.

Multifunctional Wireless Meat Grinder Can Be Used Anywhere



Image 5.3: The Deerma JR08 is shown with its three bowls, demonstrating its versatility for processing various ingredients such as meat, vegetables, and even whisking eggs.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your Deerma JR08.

1. **Disassembly:** After use, carefully remove the motor unit, then the lid, and finally the blade/attachment from the bowl.
2. **Clean Blades/Attachments:** Handle blades with extreme care as they are sharp. Wash blades and attachments under running water with a mild detergent. Use a brush if necessary to remove food residue.
3. **Clean Bowls:** Wash the stainless steel bowls with warm soapy water. They are generally dishwasher safe, but hand washing is recommended for best care.
4. **Clean Motor Unit:** Wipe the motor unit with a soft, damp cloth. Do not rinse or immerse it in water.
5. **Drying:** Ensure all parts are completely dry before reassembling or storing to prevent rust or odor.
6. **Storage:** Store the appliance in a cool, dry place. The nesting design of the bowls allows for compact storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not start	Low battery; Lid/motor unit not properly assembled.	Charge the battery; Ensure lid and motor unit are securely locked.
Blades not rotating efficiently	Overfilled bowl; Ingredients too large/hard; Blade not properly seated.	Reduce quantity; Cut ingredients into smaller pieces; Re-seat the blade.
Unusual noise during operation	Blade obstruction; Loose component.	Stop immediately, check for obstructions; Ensure all parts are securely assembled.
Battery drains quickly	Frequent heavy-duty use; Old battery.	Ensure full charge before use; Consider battery replacement if very old (contact support).

8. SPECIFICATIONS

- **Model Number:** DEM-JR08
- **Brand:** Deerma
- **Color:** Blue
- **Item Weight:** Approximately 2 kg
- **Product Dimensions:** 29 x 17 x 17 cm (L x W x H)
- **Included Components:** Motor Unit, Meat Grinder Blade, Egg Beater, Garlic Peeler, 0.8L Bowl, 1.0L Bowl, 1.2L Bowl, Lid, Charging Cable.
- **Manufacturer:** Guangdong Deerma Technology Co., Ltd.
- **Country of Origin:** China

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Deerma website. Do not attempt to repair the appliance yourself, as this may void the warranty and pose safety risks.

Keep your purchase receipt as proof of purchase for warranty claims.

© 2024 Deerma. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question