

Devoko 24162W

Devoko Electric Standing Desk 160 x 80 cm (Model 24162W) User Manual

Brand: Devoko | Model: 24162W

1. SAFETY INFORMATION

Please read all instructions carefully before assembly and operation to ensure safe use of your Devoko Electric Standing Desk. Keep this manual for future reference.

- Ensure all connections are secure and the power cord is not damaged before plugging in.
- Keep children and pets away from the desk during operation to prevent injury.
- Do not place liquids directly on the control panel or motor components.
- Do not overload the desk. The maximum weight capacity is 80 kg.
- The desk features an anti-collision system. Do not intentionally obstruct the desk's movement.
- Use only the provided power supply unit.

2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- 1x Height Adjustable Desk (Desktop consists of two panels)
- 1x Power Supply Unit
- 4x Foot Pads
- 1x Installation Tool
- 1x Installation Instruction Paper

3. ASSEMBLY INSTRUCTIONS

Follow the detailed steps provided in the included installation instruction paper. A video instruction guide may also be available for visual assistance.

General Assembly Steps:

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Identify all parts according to the parts list in the instruction paper.
3. Assemble the desk frame components using the provided installation tool.
4. Carefully attach the two desktop panels to the assembled frame. Ensure proper alignment and secure all screws.
5. Install the foot pads onto the desk legs.
6. Connect the power supply unit to the desk and then to a power outlet.

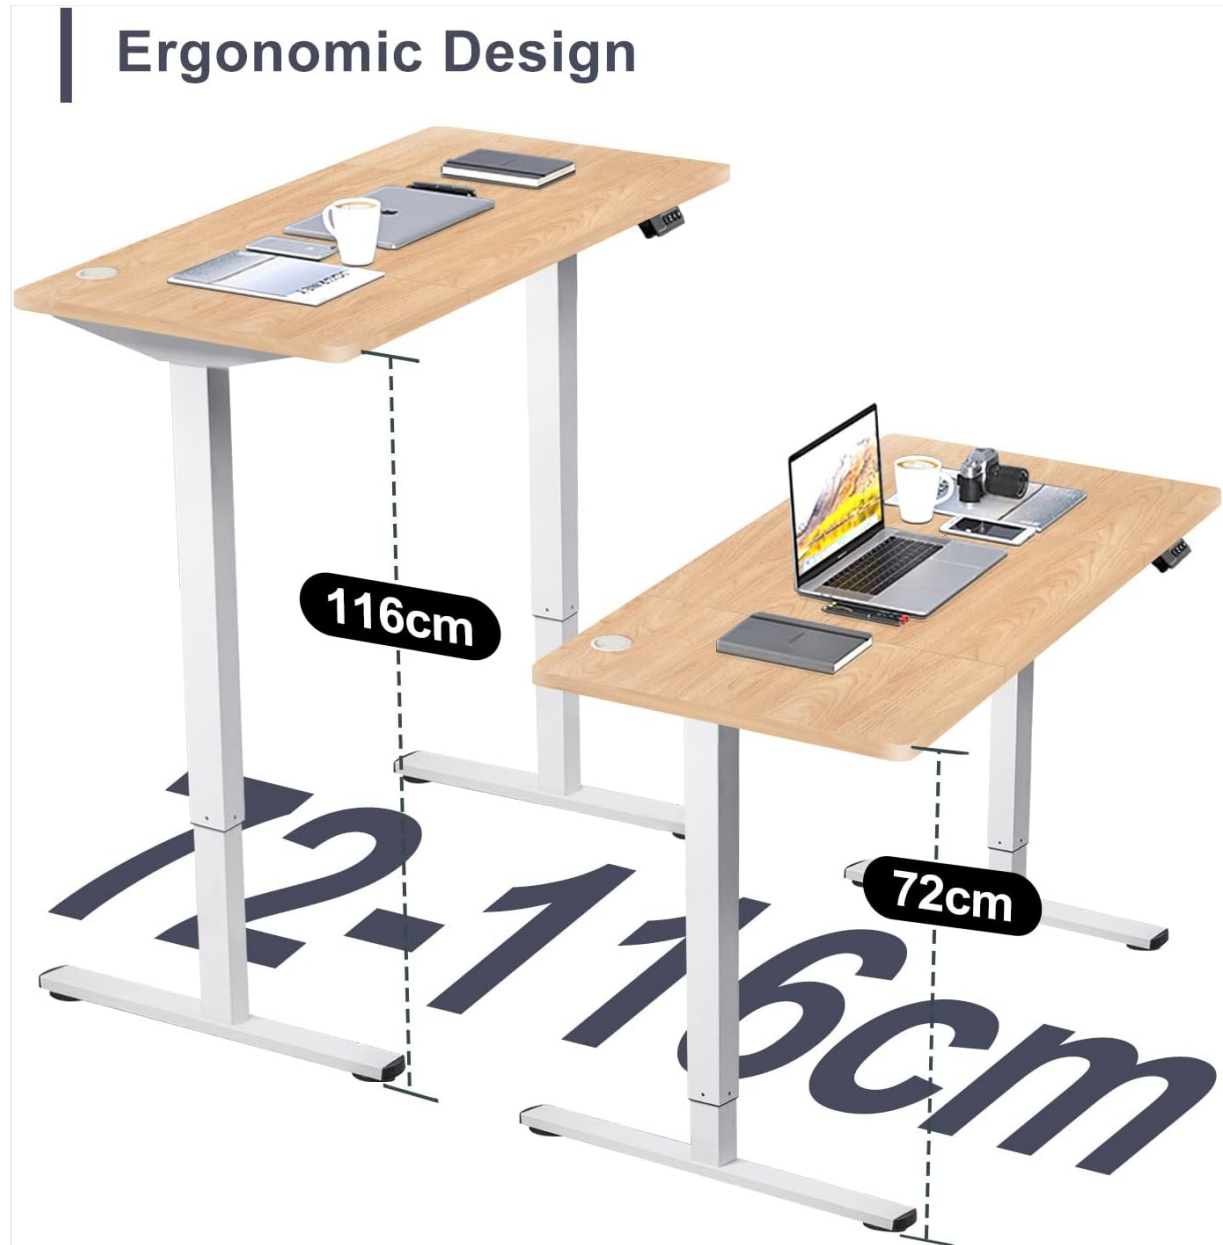


Image: Close-up view of Devoko Electric Standing Desk features, including a desktop cable hole for organization, a convenient headphone hook, and a swivel foot pad for stability on uneven surfaces.

4. OPERATING INSTRUCTIONS

Height Adjustment:

The desk's height can be adjusted electrically within a range of 72 cm to 116 cm (including the tabletop).

- Press the **Up (▲)** button to raise the desk.
- Press the **Down (▼)** button to lower the desk.

- Release the button to stop the desk at your desired height.

Memory Presets:

The control panel features a digital display and 4-button function, including 2 memory buttons, allowing you to save and recall preferred heights.

1. Adjust the desk to your desired height using the Up/Down buttons.
2. Press the "M" button (or similar memory set button) once. The display may flash.
3. Immediately press one of the numbered memory buttons (e.g., "1" or "2") to save the current height to that preset.
4. To recall a saved height, simply press the corresponding numbered memory button. The desk will automatically move to the saved position.

Anti-Collision System:

The desk is equipped with an anti-collision system. If the desk encounters an obstruction during height adjustment, it will automatically stop and reverse slightly to prevent damage or injury.



Image: Visual representation of the Devoko Electric Standing Desk's height adjustment capabilities, ranging from a minimum of 72 cm for sitting to a maximum of 116 cm for standing.



Image: The control panel of the Devoko Electric Standing Desk, featuring a digital height display and buttons for up, down, and memory presets, integrated into the desk's right side.

5. MAINTENANCE

Regular maintenance helps ensure the longevity and proper function of your standing desk.

- **Cleaning:** Wipe the desk surface and frame with a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals that could damage the finish.
- **Inspections:** Periodically check all screws and bolts to ensure they are tight. Retighten if necessary.
- **Cable Management:** Ensure power cables are not pinched or tangled, especially during height adjustments. Utilize the integrated cable hole for organization.

6. TROUBLESHOOTING

If you encounter issues with your Devoko Electric Standing Desk, refer to the following common solutions:

- **Desk Not Moving:**
 - Check if the power cord is securely plugged into both the desk and the wall outlet.
 - Ensure the wall outlet is functional by testing it with another device.

- If an error code appears on the display, consult the detailed troubleshooting section in your included instruction paper.

- **Uneven Movement:**

- Ensure the desk is not overloaded beyond its 80 kg capacity.
- Verify that all leg components and desktop panels are securely fastened.

- **Anti-Collision System Triggering Unintentionally:**

- Check for any obstructions under or around the desk that might be triggering the sensor.

If these steps do not resolve the issue, please contact Devoko customer support for further assistance.

7. SPECIFICATIONS

Desktop Dimensions	160 cm x 80 cm
Height Adjustment Range	72 cm - 116 cm (including tabletop)
Maximum Weight Capacity	80 kg
Lifting Speed	25 mm/s
Noise Level	Below 50 dB
Materials	Metal frame, Wooden laminate desktop
Item Weight	43 Kilograms
Model Number	24162W

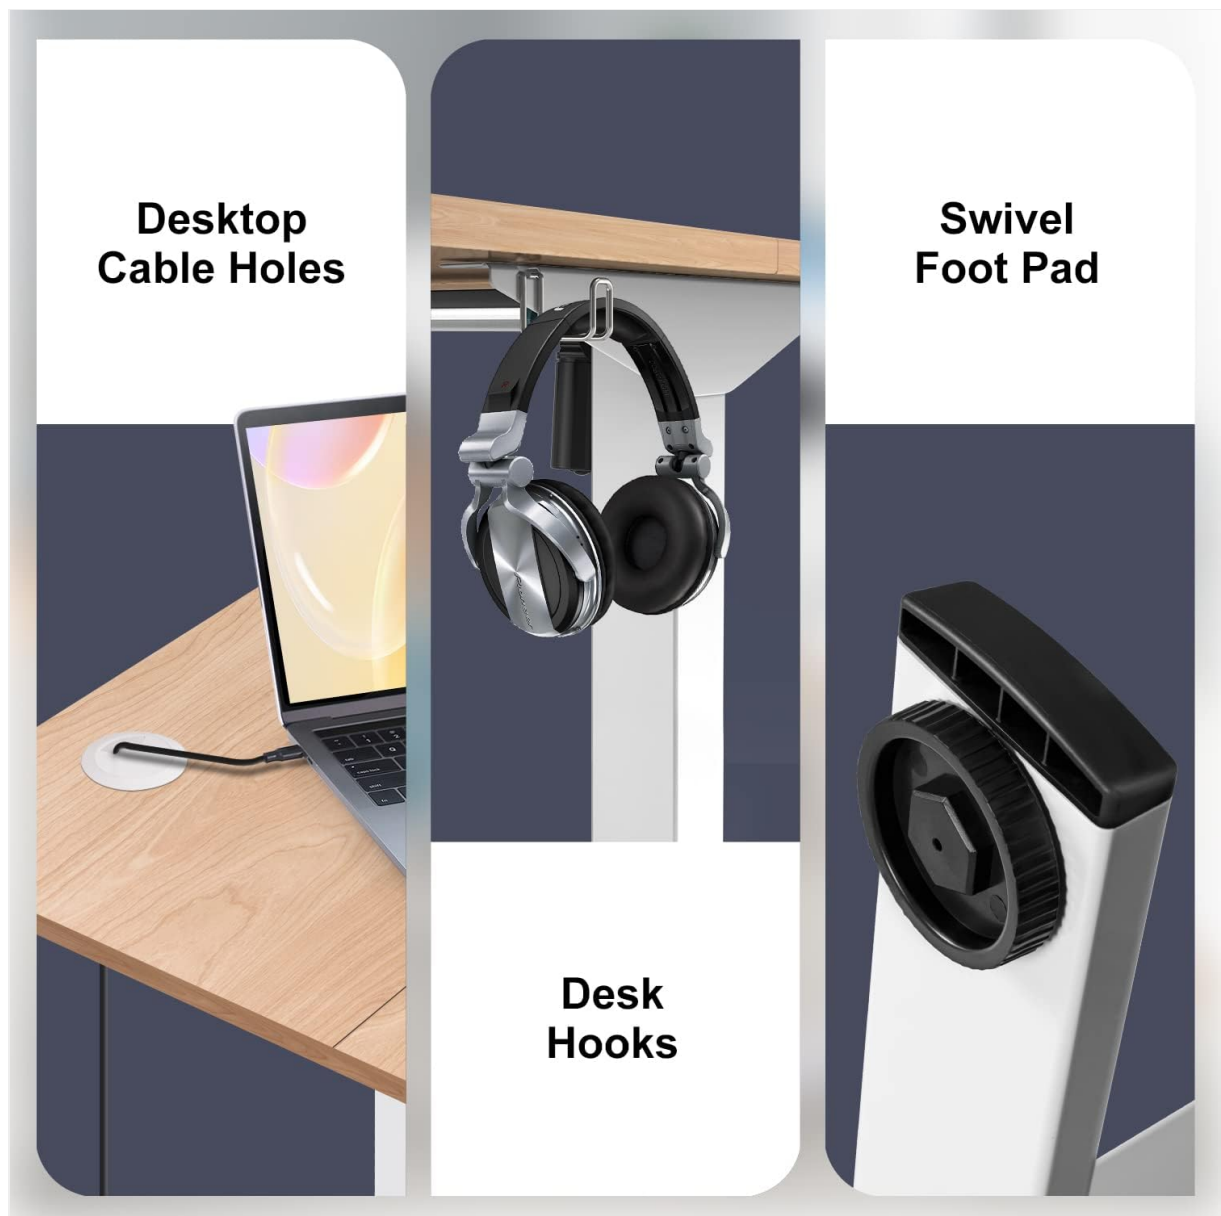


Image: The Devoko Electric Standing Desk demonstrating its robust construction, capable of supporting up to 80 kg, suitable for multiple monitors and office equipment.

8. WARRANTY AND SUPPORT

Devoko is committed to providing quality products and customer satisfaction.

- **Warranty:** The Devoko Electric Standing Desk comes with a three-year warranty on the entire machine and a one-year warranty on the motor.
- **Customer Support:** If you have any questions, require assistance with assembly, or encounter any issues not covered in this manual, please contact Devoko customer service. We aim to reply to emails within 24 hours and provide a solution.

For further information or to contact support, please visit the official Devoko website or refer to the contact details provided with your purchase.