

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [George Foreman](#) /
- › [George Foreman Beyond Grill 7-in-1 Electric Indoor Grill with Air Fry Technology Instruction Manual](#)

George Foreman MCAFD800D

George Foreman Beyond Grill 7-in-1 Electric Indoor Grill with Air Fry Technology

Model: MCAFD800D

PRODUCT OVERVIEW

The George Foreman Beyond Grill 7-in-1 Electric Indoor Grill with Air Fry Technology offers a versatile cooking experience. It integrates seven functions: grill, air fry, roast, bake, slow cook, broil, and keep warm. Featuring Intelligrill Technology with 360-degree heating and optimized air flow, it provides faster cooking and consistent results. The appliance is designed for countertop use, offering family-size capacity and easy cleanup with dishwasher-safe components.

Key Features

- **7 Cooking Functions:** Grill, air fry, roast, bake, slow cook, broil, keep warm.
- **Intelligrill Technology:** Cooks 65% faster with dual heating and optimized air flow.
- **500°F Searing:** Achieves a perfect sear without needing to flip food.
- **No Defrosting:** Capable of cooking from frozen in approximately 22 minutes.
- **Air Fry Technology:** Bakes, browns, and crisps with up to 99% less oil.
- **Advanced George Tough Nonstick Coating:** Grill plate is 3x more durable and easily removable for cleaning.
- **Dishwasher Safe Parts:** Removable grill plate and cooking pot are dishwasher safe.



Front view of the George Foreman Beyond Grill, showcasing its compact design and control panel.



Another perspective of the George Foreman Beyond Grill with the lid closed, highlighting its sleek black finish.

SETUP

1. **Unpack:** Carefully remove all packaging materials and any promotional labels from the appliance.
2. **Clean Components:** Before first use, wash the removable grill plate and cooking pot in warm, soapy water or in the dishwasher. Wipe the exterior of the unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Assemble:** Place the cooking pot into the main unit, followed by the grill plate.
4. **Placement:** Position the grill on a stable, heat-resistant surface, ensuring adequate clearance around the unit for proper ventilation. Do not place directly under cabinets due to the upward opening lid.
5. **Power Connection:** Plug the power cord into a standard electrical outlet.



Diagram showing the dimensions of the George Foreman Beyond Grill: 14.9 inches wide, 12.5 inches deep, and 11.2 inches high.

OPERATING INSTRUCTIONS

Control Panel Overview

The intuitive control panel features a digital display for temperature and time, along with dedicated buttons for each cooking function and navigation. The main controls include:

- **Function Buttons:** AIRFRY, GRILL, ROAST, BROIL, BAKE, KEEP WARM, SLOW COOK (LOW/HIGH).
- **Temperature/Time Adjustment:** Up and Down arrows to adjust settings.
- **START/ENTER:** Confirms selections and starts cooking.
- **CANCEL:** Stops the current cooking cycle.

**INTELLIGRILL TECHNOLOGY™ WITH
DUAL HEATING & AIR FLOW**

**COOK
65%
FASTER***



**On average, grilling four 1/4 lb. uncooked burgers to 160°F vs. cooking four 1/4 lb. uncooked burgers to 160°F on an electric stovetop.

A detailed view of the control panel, showing the various function buttons and the digital display.

Cooking Functions

Grilling

For optimal grilling results, ensure the grill plate is properly inserted. Select the GRILL function. The unit can reach up to 500°F for searing. Place food directly on the grill plate. The Intelligrill Technology ensures even cooking and distinct grill marks. You can cook items directly from frozen, such as burgers, which can be grilled in approximately 22 minutes.



**AIR FRY TECHNOLOGY BAKES,
BROWNS & CRISPS**

**AIR FRY WITH
99% LESS OIL[‡]**

[‡]Using air fry function vs. cooking frozen fries in conventional 3.5-qt. deep fryer

Two steaks with rosemary sprigs being grilled on the nonstick grill plate, showing clear grill marks.



ADVANCED GEORGE TOUGH™
NONSTICK COATING

**3X MORE DURABLE
GRILL PLATE[§]**

◇ vs. standard George Tough™ Nonstick Coating

Two frozen burger patties cooking on the grill, illustrating the 'Frozen to Grilled' capability in 22 minutes.

Air Frying

To air fry, use the cooking pot. Select the AIRFRY function. This technology circulates hot air to bake, brown, and crisp foods with significantly less oil, up to 99% less compared to traditional deep frying. Ideal for fries, chicken wings, and other crispy favorites.

EASY-TO-CLEAN POT
AND GRILL PLATE

**DISHWASHER
SAFE**



A hand using tongs to stir French fries inside the cooking pot during the air frying process.

Roast, Bake, Broil, Slow Cook, Keep Warm

Each of these functions can be selected via their respective buttons on the control panel. Adjust temperature and time as needed for your specific recipe. The 'Keep Warm' function is useful for maintaining food temperature after cooking, ideal for serving at parties or gatherings.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and performance of your George Foreman Beyond Grill . Always unplug the appliance and allow it to cool completely before cleaning.

- **Removable Parts:** The grill plate and cooking pot are designed for easy removal and are dishwasher safe. For best results, rinse off any large food particles before placing them in the dishwasher.
- **Nonstick Coating:** The Advanced George Tough nonstick coating on the grill plate is durable. To preserve it, avoid using abrasive cleaners or metal utensils.

- **Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.



The removable cooking pot and grill plate placed in a dishwasher rack, demonstrating their dishwasher-safe feature.

TROUBLESHOOTING

If you encounter issues with your George Foreman Beyond Grill, please refer to the following common solutions:

- **Appliance Not Powering On:** Ensure the power cord is securely plugged into a functional electrical outlet. Check your home's circuit breaker if necessary.
- **Uneven Cooking:** Ensure the grill plate and cooking pot are correctly seated. For air frying, shake or stir food halfway through the cooking cycle to promote even crisping.
- **Excessive Smoke:** Ensure the drip tray (if applicable) is clean and properly positioned. Excessive smoke can occur with very fatty foods; trim excess fat where possible.
- **Food Not Cooking Thoroughly:** Verify that the correct temperature and time settings have been selected for the food type. Ensure the lid is fully closed during operation.

For persistent issues not covered here, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	George Foreman
Model Number	MCAFD800D
Color	Black
Material	Plastic
Product Dimensions	12.5"D x 14.9"W x 11.2"H
Item Weight	14.02 pounds
Wattage	1500 Watts
Number of Settings	7
Included Components	Cooking Pot, Grill Plates
UPC	027043003461, 027043001146

WARRANTY AND SUPPORT

The George Foreman Beyond Grill comes with a **Limited Warranty**. Please refer to the warranty card included with your product for specific terms and conditions, including coverage duration and limitations.

For product support, troubleshooting assistance, or to inquire about replacement parts, please visit the official George Foreman website or contact their customer service department. Contact information can typically be found in the full user manual or on the manufacturer's website.