

[manuals.plus](#) /

› [Smeg](#) /

› [Smeg DCF02 Drip Coffee Maker Instruction Manual with DCFC01 Extra Glass Carafe](#)

**Smeg DCF02**

# Smeg DCF02 Drip Coffee Maker Instruction Manual

MODEL: DCF02 WITH DCFC01 EXTRA GLASS CARAFE

## Introduction

This manual provides essential information for the safe and efficient use of your Smeg DCF02 Drip Coffee Maker. Please read all instructions carefully before operating the appliance and retain this manual for future reference. Your Smeg DCF02 Drip Coffee Maker is designed to brew up to 10 cups of coffee, featuring programmable auto-start, adjustable aroma intensity, and a keep-warm function.



*Image: The Smeg DCF02 Drip Coffee Maker in pink, shown alongside an additional DCFC01 glass carafe.*

## Important Safety Instructions

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

- Do not use appliance for other than intended household use.
- Scalding may occur if the lid is removed during the brewing cycles.

## Components Overview

Your Smeg DCF02 Drip Coffee Maker includes the following main components:

- Main Coffee Maker Unit
- Glass Carafe (DCFC01) - 2 units included
- Reusable Coffee Filter
- Measuring Scoop



*Image: The reusable coffee filter, designed for eco-friendly brewing.*

## Setup and First Use

1. **Unpacking:** Carefully remove all packaging materials and ensure all components are present and undamaged.
2. **Initial Cleaning:** Before first use, wash the glass carafe, lid, and reusable filter in warm, soapy water. Wipe the exterior of the coffee maker with a damp cloth. Run two full cycles with only water to clean the internal components.
3. **Positioning:** Place the coffee maker on a stable, flat surface away from heat sources and water.
4. **Setting Time Format and Water Hardness:** Your coffee maker allows you to customize settings such as time format (12H/24H) and water hardness (Gentle, Medium, Hard). Refer to the video below for guidance on accessing and adjusting these settings.

Your browser does not support the video tag.

*Video: This official Smeg video demonstrates how to access and update settings on the DCF02 coffee machine, including time format and water hardness.*

## Operating Instructions

1. **Fill Water Tank:** Open the lid of the coffee maker and fill the water tank with fresh, cold water up to the desired level indicated on the side. The water level indicator shows markings for 2, 4, 6, 8, and 10 cups (MAX).



*Image: Side view of the coffee maker highlighting the transparent water level indicator.*

2. **Add Coffee Grounds:** Place the reusable filter (or a paper filter) into the filter basket. Add the desired amount of ground coffee. A general guideline is one scoop (approximately 7g) per cup.
3. **Place Carafe:** Ensure the glass carafe with its lid is correctly positioned on the warming plate.
4. **Select Aroma Intensity:** Use the aroma intensity button (coffee bean icon) to choose between a light or intense flavor profile.
5. **Start Brewing:** Press the power button to begin the brewing cycle. The display will show the current time.
6. **Programmable Auto-Start:** To set a delayed start time, press the auto-start button (clock icon) and use the lever to set your desired brew time. Confirm by pressing the OK button. The coffee maker will automatically start brewing at the set time.
7. **Keep Warm Function:** After brewing, the coffee maker will automatically enter a keep-warm phase, maintaining the coffee's temperature for up to 40 minutes.

Your browser does not support the video tag.

*Video: This official Smeg video provides a product overview of the DCF02 coffee machine, demonstrating its features and basic operation.*

## Care and Maintenance

- **Daily Cleaning:** After each use, discard used coffee grounds and rinse the reusable filter and carafe. The carafe and filter are dishwasher safe (top rack only) or can be hand-washed with warm, soapy water.
- **Exterior Cleaning:** Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scourers.
- **Descaling:** Over time, mineral deposits can build up in your coffee maker, affecting performance. Descaling your appliance regularly (e.g., every 2-3 months, or more frequently in hard water areas). Use a commercial descaling solution suitable for coffee makers, following the product's instructions. Alternatively, a solution of white vinegar and water (1:2 ratio) can be used. Run a full brew cycle with the descaling solution, then run several cycles with fresh water to rinse thoroughly.

## Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Coffee maker does not turn on.	Not plugged in; power outage.	Ensure the appliance is securely plugged into a working outlet. Check circuit breaker.
Coffee is not brewing.	Water tank empty; carafe not in place; brew cycle not initiated.	Fill water tank. Ensure carafe is correctly positioned. Press the power button to start.
Coffee tastes weak.	Insufficient coffee grounds; incorrect aroma setting; old coffee.	Add more coffee grounds. Select 'Intense' aroma setting. Use fresh coffee.
Coffee overflows from filter basket.	Too many coffee grounds; filter clogged; carafe not properly seated.	Reduce coffee grounds. Clean the filter. Ensure carafe is fully pushed in.
Water leaks from the appliance.	Water tank overfilled; loose components.	Do not exceed MAX fill line. Ensure all removable parts are correctly assembled.

## Specifications

Feature	Detail
Brand	Smeg
Model Name	Drip Coffee Maker with Extra Carafe
Model Number	DCF02
Capacity	10-Cup (47.3 oz)
Product Dimensions	10"D x 10"W x 14"H
Voltage	110 Volts
Operation Mode	Fully Automatic
Special Features	Extra Glass Carafe, Programmable, Timer, Adjustable Aroma Intensity, Keep Warm Function, Anti-Drip System, Reusable Coffee Filter, Water Level Indicator
Included Components	Drip coffee maker, reusable filter, 2 - Glass Carafes
Coffee Input Type	Ground
Item Weight	7.4 pounds



 
*Image: Diagram showing the dimensions of the Smeg DCF02 Drip Coffee Maker (10"D x 10"W x 14"H).*

## **Warranty and Support**

For warranty information and customer support, please refer to the documentation included with your product or visit the official Smeg website. Keep your proof of purchase for any warranty claims.

© 2023 Smeg. All rights reserved.

## **Related Documents - DCF02**

	<p><a href="#">Smeg DCF02 Drip Coffee Machine Instruction Manual</a></p> <p>Comprehensive instruction manual for the Smeg DCF02 Drip Coffee Machine. This guide covers safety precautions, appliance description, operation, cleaning, maintenance, descaling, and troubleshooting for optimal use.</p> <p></p>
	<p><a href="#">Smeg DCF02 Drip Coffee Machine Instruction Manual</a></p> <p>Comprehensive instruction manual for the Smeg DCF02 Drip Coffee Machine, covering safety, operation, cleaning, and maintenance. Learn how to use your coffee maker for the best results.</p> <p></p>
	<p><a href="#">SMEG DCF02 Drip Coffee Machine User Manual</a></p> <p>Official user manual for the SMEG DCF02 drip coffee machine. Provides detailed instructions on setup, operation, safety, cleaning, maintenance, and troubleshooting.</p>
	<p><a href="#">Smeg 50s Style Drip Coffee Machine User Manual</a></p> <p>Comprehensive user manual for the Smeg 50s Style drip coffee machine, covering safety instructions, product description, operation, cleaning, maintenance, and troubleshooting. Learn how to brew perfect coffee with your Smeg appliance.</p>
	<p><a href="#">Smeg DCF02 Drip Coffee Machine Instruction Manual and User Guide</a></p> <p>Comprehensive instruction manual and user guide for the Smeg DCF02 drip coffee machine, covering safety, operation, cleaning, and maintenance. Includes parts list, control descriptions, and troubleshooting.</p> <p></p>
	<p><a href="#">Smeg DCF02 Drip Coffee Machine - User Manual and Instructions</a></p> <p>Comprehensive user manual for the Smeg DCF02 drip coffee machine, covering safety, operation, cleaning, maintenance, and troubleshooting. Learn how to brew perfect coffee with your Smeg appliance.</p> <p></p>