

Hotsmtbang TED23 G3

Hotsmtbang Replacement Remote Control User Manual

For Masterflame TED23 G3 Electric Firebox Indoor Fireplace Mantel

INTRODUCTION

This manual provides instructions for the Hotsmtbang Replacement Remote Control, designed for use with the Masterflame TED23 G3 Electric Firebox Indoor Fireplace Mantel. This remote control comes pre-programmed and requires no additional setup. Simply insert batteries to begin operation.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, showing the correct orientation for inserting two AAA batteries.

OPERATING INSTRUCTIONS

Basic Operation

This remote control is pre-programmed and ready for immediate use with your Masterflame TED23 G3 Electric Firebox once batteries are installed. No additional programming is required.

1. Ensure the electric firebox is powered on and within range.
2. Point the remote control directly towards the Masterflame TED23 G3 Electric Firebox.
3. Press the desired function buttons to control the fireplace. Functions typically include power on/off, heat settings, flame brightness, and other available features of your firebox.



Image: Front view of the remote control, displaying its various function buttons for controlling the electric firebox.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. Avoid using liquid cleaners, aerosols, or solvents, as these can damage the remote's surface or internal components.

Battery Replacement

Replace the batteries when the remote control's operating range decreases, or if it becomes unresponsive. Always replace both batteries at the same time with new AAA batteries. Remove old or depleted batteries promptly to prevent leakage and potential damage to the remote.

TROUBLESHOOTING

• Remote Control Not Responding:

- Ensure batteries are installed correctly with the proper polarity.
- Replace old batteries with new AAA batteries.
- Check for any obstructions between the remote control and the electric firebox.
- Ensure the remote control is within the maximum operating range of 10 meters.

• Limited Operating Range:

- Replace batteries with new ones.
- Ensure there is a clear line of sight between the remote control and the firebox's infrared receiver.

SPECIFICATIONS

Brand	Hotsmtbang
-------	------------

Model	TED23 G3
Connectivity Technology	Infrared
Controller Type	Button Control
Max Number of Supported Devices	1
Maximum Range	10 meters
Batteries Required	2 x AAA (not included)
Special Feature	No Programming Required
ASIN	B0BPBN5MKJ

WARRANTY INFORMATION

This product comes with a 90-day quality warranty. In case of any quality issues, a hassle-free return and unconditional refund are offered within this period.

SUPPORT

For further assistance, troubleshooting not covered in this manual, or warranty claims, please contact the seller directly through the platform where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question