

[Manuals.plus](#) /

› [BingoPaw](#) /

› BingoPaw P-XL171-ES Wooden Dog Crate Instruction Manual

BingoPaw P-XL171-ES

BingoPaw P-XL171-ES Wooden Dog Crate Instruction Manual

Model: P-XL171-ES

INTRODUCTION

Thank you for choosing the BingoPaw P-XL171-ES Wooden Dog Crate. This product is designed to serve as both a comfortable pet house and a stylish piece of furniture, such as an end table. It features a durable construction, multiple access points, and a removable tray for easy cleaning. This manual provides essential information for assembly, operation, maintenance, and troubleshooting to ensure safe and effective use of your dog crate.



Image: The BingoPaw dog crate seamlessly blends into a living room as a functional end table and pet enclosure.

SAFETY INFORMATION

- Always ensure all parts are securely fastened before allowing your pet to use the crate.
- Do not exceed the recommended weight capacity for the top surface (40-60 kg).

- Keep small children away from the crate during assembly to prevent injury.
- Regularly inspect the crate for any loose parts, damage, or sharp edges that could harm your pet.
- Ensure proper ventilation for your pet at all times.
- The rounded edges are designed for safety, but always supervise pets, especially puppies, to prevent chewing or injury.

PACKAGE CONTENTS

The BingoPaw P-XL171-ES dog crate is shipped in two packages due to its extra-large size. Please ensure you have received both packages and all components before beginning assembly.



Image: Dimensions and packaging information for the XL dog crate, indicating shipment in two separate packages.

While a detailed parts list is not provided, expect to find:

- MDF wooden top panel
- Metal wire frame panels (sides, front, back)
- Three metal doors with latches
- Removable plastic tray
- Assembly hardware (screws, bolts, Allen wrench)
- Instruction manual

ASSEMBLY INSTRUCTIONS (SETUP)


Assembly is straightforward and can be completed with basic tools provided. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from both packages and lay them out on a clean, soft surface to prevent scratches. Verify all components are present.
2. **Assemble Base Frame:** Connect the bottom metal frame pieces according to the diagrams in the included manual. Ensure all connections are snug but do not overtighten screws initially.
3. **Attach Side Panels:** Secure the side metal wire panels to the base frame.
4. **Install Doors:** Attach the three doors (two side, one front) to their respective openings using the provided hinges and hardware. The unique design allows flexible placement.
5. **Secure Top Panel:** Place the MDF wooden top panel onto the assembled frame and secure it with the

designated screws.

- 6. **Insert Tray:** Slide the removable tray into the designated slot at the bottom of the crate.
- 7. **Final Tightening:** Once all parts are in place, go back and securely tighten all screws and bolts.

Combining Multiple Units: This crate features an unlimited combination design. To merge two or three units, use the provided 45mm screws to connect them securely. This allows for creating larger enclosures tailored to your space and pet’s needs.

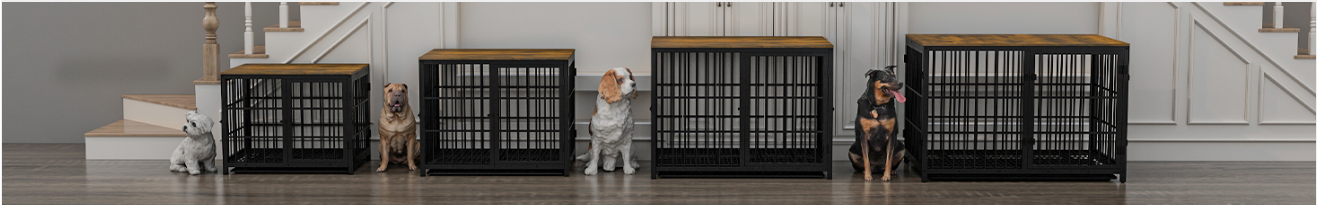

How to measure?

Length

(Length: Measure the distance from a dog's Nose to hip)

Height

(Height: Measuring the distance from the top of a dog's head to its paw)

Dog Cage Specifications	M	L	XL	XXL
Dog cage size (L*W*H)	78.5×56.5×65cm (30.9"×22.2"×25.6")	91.5×63.5×74.5cm (36"×25"×29.3")	107.5×71.5×81cm (42.3"×28.1"×31.8")	120×77×81.5cm (47.24"×30.31"×31.8")
Load bearing	60kg/132lbs	55kg/121lbs	50kg/110lbs	80kg/176lbs
Length of dog	68.5cm/27"	81.5cm/32"	97.5cm/38.3"	110cm/43.31"
Height of dog	55cm/21.6"	64.5cm/25.3"	71cm/27.8"	71cm/27.8"
Recommended	Small	Small, Medium	Medium, Large	Medium, Large

Image: Multiple crates can be combined to create larger, customized pet enclosures.

OPERATING INSTRUCTIONS

The BingoPaw dog crate is designed for ease of use and pet comfort.

Using the Doors

The crate is equipped with three doors: two on the sides and one on the front. Each door has a secure latch mechanism. To open, slide the latch and pull the door outwards. To close, push the door shut and ensure the latch is engaged. This multi-door design offers flexibility in placement and easy access for your pet.

Stylish Furniture Design

Not only the dog cage but also tasteful furniture

Waterproof and easy to clean

10mm Thick Round Tube

Image: The three-door design provides convenient access from multiple angles.

Utilizing the Removable Tray

The multifunctional tray can be used in two ways:

- **Below the Grid Plate:** Slide the tray under the wire grid at the bottom of the crate. This position is ideal for catching dirt, food debris, or accidents, making cleaning effortless without moving the entire crate.
- **Above the Grid Plate:** For added comfort or to reduce anxiety, the tray can be placed inside the crate, on top of the wire grid. You can then place a dog bed or soft mat on the tray. This prevents your pet from standing directly on the wire bottom.



Image: The removable tray can be positioned above or below the grid for versatility in use and cleaning.

MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and hygiene of your BingoPaw dog crate.

- **Daily Cleaning:** Remove the tray daily to dispose of any collected debris or waste. Wipe the tray with a damp cloth and mild, pet-safe detergent. Rinse thoroughly and dry before returning.
- **Crate Frame:** The water-based painted surface of the MDF top and metal frame can be wiped clean with a damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish or harm your pet.
- **Deep Cleaning:** Periodically, disassemble the tray and grid for a more thorough cleaning. Ensure all parts are completely dry before reassembly to prevent rust or mold.
- **Inspection:** Regularly check all screws, latches, and connections to ensure they remain tight and secure. Tighten any loose hardware as needed. Inspect the metal bars for any signs of wear or damage.

TROUBLESHOOTING

If you encounter any issues with your BingoPaw dog crate, refer to the following common problems and solutions:

- **Difficulty Assembling:**
Solution: Ensure all parts are correctly oriented according to the manual's diagrams. Do not fully tighten screws until all major components are loosely assembled. If instructions are unclear, refer to online resources or contact customer support.
- **Doors Not Latching Properly:**
Solution: Check if the crate is assembled squarely. Sometimes, uneven assembly can cause misalignment. Adjust the frame slightly or re-tighten screws. Ensure no debris is obstructing the latch mechanism.
- **Crate Feels Unstable:**
Solution: Verify that all screws and bolts are fully tightened. Ensure the crate is placed on a flat, level surface. If combining multiple units, ensure the connecting screws are securely fastened.
- **Pet Chewing on Bars:**
Solution: The rounded iron tubes are designed to be bite-resistant. However, if your pet is excessively

chewing, consider providing chew toys or consulting a veterinarian or trainer for behavioral advice.

SPECIFICATIONS

Feature	Detail
Model Number	P-XL171-ES
Product Dimensions (L x W x H)	107.4 x 71.4 x 81 cm
Item Weight	33 kg
Material	40% Iron Metal + 50% MDF + 10% Polyethylene
Color	Black
Number of Doors	3
Special Feature	Removable Tray
Breed Recommendation	Large Breeds
Max Top Load Capacity	40-60 kg
Gap Size	10 Millimeters



Image: Detail showing the 10mm thick round tube construction, emphasizing durability.

WARRANTY AND SUPPORT

BingoPaw products are manufactured with quality and customer satisfaction in mind. For any questions, concerns, or to report missing or damaged parts, please contact your retailer or the manufacturer's customer service. Please have your model number (P-XL171-ES) and purchase information ready when contacting support. Specific warranty details may vary by region and retailer. Please refer to your purchase documentation for comprehensive warranty information.