

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [CAMOLO](#) /

> [CAMOLO 74-inch Camera Tripod Instruction Manual, Model C03456](#)

CAMOLO C03456

CAMOLO 74-inch Camera Tripod Instruction Manual

Model: C03456

1. INTRODUCTION

Thank you for choosing the CAMOLO 74-inch Camera Tripod. This manual provides essential information for the proper setup, operation, and maintenance of your tripod. Please read these instructions carefully before use to ensure optimal performance and longevity of your product.

2. PRODUCT OVERVIEW

The CAMOLO 74-inch Camera Tripod is designed for versatility and stability, supporting various cameras and mobile devices for photography and videography. Key features include:

- **Adjustable Height:** Easily extends from 19 inches to 74 inches.
- **Durable Construction:** Made from aluminum with non-slip rubber feet for enhanced stability.
- **Universal Compatibility:** Features a standard 1/4" screw bracket for cameras and includes a phone holder for mobile devices.
- **Three-Way Head:** Offers 360° panoramic shooting, 180° up and down, and 90° vertical portrait shooting.
- **Stabilizing Hook:** Allows for hanging additional weight to increase stability in windy conditions.

Product Structure



Figure 2.1: Product Structure. This image illustrates the main components of the tripod, including the quick release plate, hook for added stability, rocker crank for height adjustment, leg flip locks, and rubber anti-skid feet.

3. SETUP

- 1. Unpack Components:** Carefully remove all items from the packaging. You should find the tripod body, a handle, an extra quick release plate, a mobile phone holder, and leg caps.
- 2. Attach Mobile Phone Holder:** The mobile phone holder can be screwed onto the quick release plate. It features a spring mechanism to securely hold various phone sizes.
- 3. Assemble Tripod Head:** The three-way head is typically pre-assembled. Ensure the handle is securely screwed into the head for smooth panning and tilting.
- 4. Extend Legs:** Release the leg flip locks on each leg and extend them to the desired length. Securely close the flip locks to prevent slippage.
- 5. Adjust Center Column:** Loosen the center column lock, then use the rocker crank to raise or lower the center column to your preferred height. Tighten the lock to secure it.
- 6. Level the Tripod:** Utilize the built-in bubble level located on the tripod body to ensure your setup is perfectly horizontal, especially on uneven surfaces.

Lightweight Tripod for Camera



Figure 3.1: Adjustable Height and Compatibility. This image demonstrates the tripod's height range and its compatibility with various devices, including smartphones, cameras, and projectors.

4. OPERATING INSTRUCTIONS

1. Attaching Your Device:

- **For Cameras:** Screw your camera onto the 1/4" screw on the quick release plate. Ensure it is tightened securely.
- **For Mobile Phones:** Place your phone into the spring-loaded phone holder, ensuring it is firmly gripped. Attach the phone holder to the quick release plate.

2. Adjusting the Three-Way Head:

- **Pan (Horizontal Rotation):** Loosen the main locking knob at the base of the head to rotate your device 360° horizontally. Tighten to secure.
- **Tilt (Vertical Movement):** Use the handle to adjust the vertical angle (180° up/down). Loosen the tilt lock knob, position your device, and then tighten the knob.
- **Vertical Portrait Shooting:** The head allows for 90° vertical orientation. Loosen the appropriate knob, adjust, and re-tighten.

3. **Using the Quick Release Plate:** To quickly attach or detach your device, press the release lever on the

tripod head to remove the quick release plate. Attach the plate to your device, then slide it back into the tripod head until it clicks securely.

4. **Enhancing Stability:** For added stability, especially outdoors or with heavier equipment, hang your camera bag or a weight from the stabilizing hook located at the bottom of the center column.

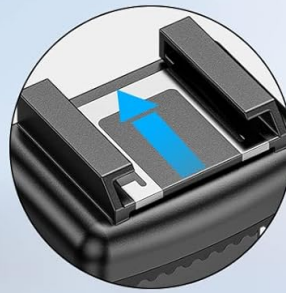


Figure 4.1: Multiple Shooting Angles. This image highlights the tripod's flexibility, allowing for 360° panoramic shots and various other angles including horizontal, vertical, overhead, and elevation.

Universal Phone Holder



Your best choice
for various scenarios



◀ Universal
Cold-shoe Mount



Figure 4.2: Universal Phone Holder. This image demonstrates the phone holder's use with a smartphone and its cold-shoe mount for attaching additional accessories.

5. MAINTENANCE

- **Cleaning:** Wipe down the tripod with a soft, dry cloth after each use. For stubborn dirt, use a slightly damp cloth and mild soap, then dry thoroughly. Avoid harsh chemicals.
- **Lubrication:** Periodically check moving parts for smooth operation. If necessary, apply a small amount of silicone-based lubricant to hinges and locking mechanisms.
- **Storage:** Store the tripod in its carrying bag in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Regularly inspect all screws, locks, and joints for tightness and wear. Tighten any loose screws and replace worn parts as needed.

6. TROUBLESHOOTING

- **Tripod is Unstable:**
 - Ensure all leg flip locks are fully engaged.
 - Verify the center column lock is tightened.

- Use the stabilizing hook with added weight.
- Check the built-in level to ensure the tripod is on a flat surface or adjusted for uneven terrain.

- **Head Movement is Stiff:**

- Loosen the pan and tilt locking knobs sufficiently.
- Clean any dust or debris from the moving parts.
- Apply a small amount of silicone lubricant if necessary.

- **Device Not Securely Attached:**

- Ensure the 1/4" screw on the quick release plate is fully tightened into your camera.
- For mobile phones, ensure the spring-loaded holder is gripping the phone firmly and the holder is securely attached to the quick release plate.
- Verify the quick release plate is fully inserted and locked into the tripod head.

7. SPECIFICATIONS

Brand	CAMOLO
Model Number	C03456
Product Dimensions	43.94 x 12.5 x 11.99 cm
Item Weight	1.36 kg (3 Pounds)
Material	Aluminum
Color	Black
Maximum Height	74 Inches
Minimum Height	19 Inches
Compatible Devices	Camera, Cell Phone, iPad, Studio Light, Telescope, Projector

8. WARRANTY & SUPPORT

This CAMOLO tripod comes with a **full 2-year warranty** from the date of purchase. In case of any issues or if you require replacement parts, please contact customer support within 30 days of receiving the product. Our support team is available to assist you with any questions or concerns regarding your tripod.

For further assistance, please refer to the contact information provided with your purchase or visit the official CAMOLO website.