

Beyution WY-MBE215-US

Instruction Manual for Beyution Replacement Remote Control 290P187A20

Model: 290P187A20 / WY-MBE215-US

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your Beyution 290P187A20 Replacement Remote Control. This remote is designed as a direct replacement for various Mitsubishi TV/VCR models, offering seamless functionality without the need for complex programming.

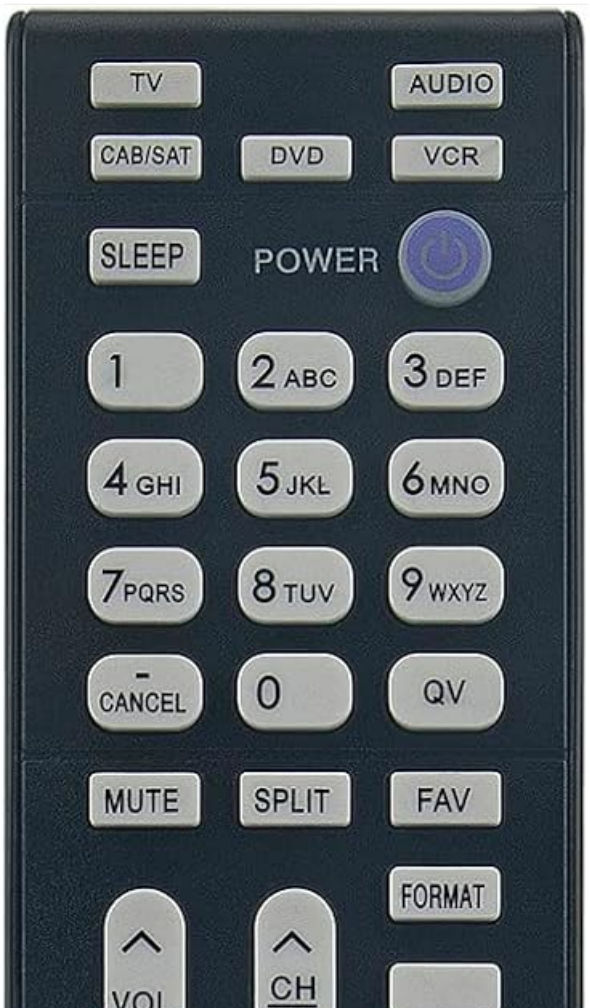




Figure 1: Front view of the Beyution 290P187A20 replacement remote control, showing all buttons and ergonomic design.

2. SETUP

2.1. Battery Installation

The Beyution 290P187A20 remote control requires two (2) AAA batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.







Figure 2: Back view of the remote control with the battery compartment open, illustrating the correct orientation for AAA battery insertion.

2.2. Initial Use (No Programming Required)

This replacement remote control is designed to work immediately with compatible Mitsubishi TV/VCR models without any programming or setup. Once batteries are installed, the remote is ready for use.

3. OPERATING INSTRUCTIONS

3.1. Basic Operation

Point the remote control directly at the infrared receiver on your Mitsubishi TV/VCR. Ensure there are no obstructions between the remote and the device. The remote operates using infrared technology.

- **Power Button:** Press to turn your device on or off.
- **Number Buttons (0-9):** Use for direct channel input or menu navigation.
- **Volume Up/Down (VOL +/-):** Adjusts the audio volume.
- **Channel Up/Down (CH PAGE +/-):** Changes the channel.
- **Mute:** Silences the audio output.
- **Input:** Cycles through available input sources (e.g., TV, VCR, DVD, Audio).
- **Navigation Pad (Up, Down, Left, Right, ENTER):** Used for menu navigation and selection.
- **Menu:** Accesses the device's main menu.
- **Exit:** Exits the current menu or function.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** For VCR or DVD playback functions.

3.2. Remote Control Range

The maximum effective distance for this remote control is approximately 10 meters (33 feet). Optimal performance is typically achieved within 8 meters (26 feet).

3.3. Compatible Models

This remote control is compatible with, but not limited to, the following Mitsubishi TV/VCR models:

- LT-40164
- LT-46164
- LT-46265
- LT-55154
- LT-55164
- LT-55265
- WD-60738
- WD-65738
- WD-65838
- WD-73738

- WD-73838
- WD-82738
- WD-82838



Figure 3: Visual comparison between the replacement remote control and an original Mitsubishi remote, highlighting its design as a direct substitute.

4. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact. Dropping the remote can damage internal components or the casing.

5. TROUBLESHOOTING

If you experience issues with your Beyution replacement remote control, please refer to the following common troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the device's infrared receiver.
 - Verify that you are within the effective operating range (up to 10 meters).
- **Specific Buttons Not Working:**
 - This may indicate a specific button malfunction or a very low battery. Try replacing batteries first.
 - Ensure the remote is clean and there is no debris lodged under the buttons.
- **Device Model Not Listed as Compatible:**
 - While this remote is designed for a wide range of Mitsubishi models, if your specific model is not listed, it may still be compatible. However, if it does not work, please contact customer support for assistance.

If these steps do not resolve the issue, please refer to the "Warranty and Support" section for further assistance.

6. SPECIFICATIONS

Feature	Description
Remote Control Model	290P187A20
Item Model Number	WY-MBE215-US
Brand	Beyution
Connectivity Technology	Infrared
Maximum Distance	10 Meters (approx. 33 feet)
Material	ABS Plastic
Color	As shown in product images (typically dark grey/black)
Batteries Required	2 x AAA batteries (not included)
Product Dimensions	6.3 x 1.57 x 0.39 inches
Item Weight	2.47 ounces

Feature	Description
Programming Required	No
Compatible Devices	Television (Mitsubishi TV/VCR models)

7. WARRANTY AND SUPPORT

7.1. Warranty Period

This Beyution replacement remote control comes with a **6-month warranty period** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

7.2. Customer Support

If you encounter any issues with your remote control, or if the remote control you received is damaged or does not work as expected, please contact our customer service team. We are committed to providing a satisfactory solution within 24 hours.

Please reach out to us via email through the platform where you made your purchase. Provide your order details and a description of the issue to expedite assistance.

For general inquiries or to verify compatibility for models not explicitly listed, please contact us before purchasing.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BPDBK44B>

More documents and user manuals: **<https://manuals.plus/>**