



Manuals.plus /

› Garza /

› Garza Outdoor Digital Timer Model 400615G User Manual

Garza 400615G

Garza Outdoor Digital Timer Model 400615G User Manual

1. INTRODUCTION

This manual provides detailed instructions for the proper use, setup, and maintenance of your Garza Outdoor Digital Timer, Model 400615G. This device is designed to automate the operation of various outdoor electrical appliances, such as irrigation systems, lighting, and garage doors, helping you save time and energy. Please read this manual thoroughly before operating the device to ensure safe and efficient use.

2. SAFETY INFORMATION

Your safety is paramount. Please observe the following safety guidelines:

- **Outdoor Use:** The timer is rated IP44, making it suitable for outdoor use and resistant to splashing water. However, avoid submerging the device in water.
- **Electrical Load:** Do not exceed the maximum load capacity of 3680W and 16A. Overloading can cause damage to the device and pose a fire hazard.
- **Child Protection:** The timer is equipped with child protection features. Keep children away from the device during operation.
- **Plug Compatibility:** This timer features a specific plug type. Ensure compatibility with your local electrical outlets before use. In some regions, an adapter may be required, which is not included.
- **Installation:** Ensure the timer is securely plugged into a suitable outdoor socket. Do not use if the casing or cable is damaged.
- **Maintenance:** Disconnect the timer from the power supply before cleaning or performing any maintenance.



Image: Garza Outdoor Digital Timer installed in an outdoor wall socket, demonstrating its intended use in an outdoor environment.

3. PRODUCT FEATURES

The Garza Outdoor Digital Timer offers a range of features for flexible and reliable automation:

- **8 ON/OFF Programs:** Configure up to 8 distinct ON and OFF switching times.
- **Random Mode:** Activate a random switching mode to simulate presence, enhancing security.
- **Flexible Programming:** Set programs for specific hours, daily, weekly, or for groups of weekdays.
- **Liquid Crystal Display (LCD):** A clear display shows the current time and programming settings.
- **IP44 Protection:** Designed for outdoor use, resistant to dust and splashing water.
- **High Power Capacity:** Supports devices up to 3680W and 16A.
- **Child Protection:** Integrated safety features to prevent accidental access.



Image: Visual representation of the timer's key features, including 7-day programmability, safety shutter, and IP44 outdoor protection rating.

4. SETUP

Follow these steps to set up your Garza Outdoor Digital Timer:

1. **Initial Connection:** Plug the timer into a suitable outdoor electrical outlet. The LCD will illuminate.
2. **Clear All Settings:** Before first use or after a long period of inactivity, it is recommended to clear all previous settings. Locate the 'R' (Reset) button, usually a small recessed button. Use a pointed object (like a pen tip) to press and hold it for a few seconds until the display clears.
3. **Set Current Time:**
 - Press the 'CLOCK' button.
 - Press 'WEEK' to select the current day of the week.
 - Press 'HOUR' to set the current hour.
 - Press 'MIN' to set the current minute.
 - Press 'CLOCK' again to confirm and exit time setting mode.



Image: Front view of the Garza Outdoor Digital Timer, illustrating the display and control buttons used for setup and programming.

5. OPERATING INSTRUCTIONS (PROGRAMMING)

The timer allows for up to 8 ON/OFF programs. Here's how to set them:

1. **Enter Program Mode:** Press the 'PROG' button. The display will show '1 ON'.
2. **Set First ON Time:**
 - Press 'WEEK' to select the desired day(s) for this program (e.g., MO, TU, WE, TH, FR, SA, SU, or combinations like MO-FR, SA-SU, MO-SA, etc.).
 - Press 'HOUR' to set the desired hour for the device to turn ON.
 - Press 'MIN' to set the desired minute for the device to turn ON.
3. **Set First OFF Time:** Press 'PROG' again. The display will show '1 OFF'. Repeat the steps above to set the day(s), hour, and minute for the device to turn OFF.
4. **Set Additional Programs:** Continue pressing 'PROG' to cycle through '2 ON', '2 OFF', up to '8 ON', '8 OFF'. Repeat the setting process for each program as needed.
5. **Exit Program Mode:** After setting all desired programs, press the 'CLOCK' button to return to the current time display.
6. **Activate Programs:** Press the 'MODE' button repeatedly to cycle through the operating modes: 'ON', 'OFF', 'AUTO', 'RANDOM'. Select 'AUTO' for the programmed settings to take effect.
7. **Random Mode:** If you select 'RANDOM' mode, the timer will randomly turn ON and OFF within a set period (e.g., 6 PM to 6 AM) to simulate occupancy. This mode overrides programmed settings.



Image: Close-up view of the timer's LCD screen and control buttons, essential for understanding and executing programming steps.

6. MAINTENANCE

Proper maintenance ensures the longevity and reliable operation of your timer:

- **Cleaning:** Disconnect the timer from the power supply. Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** If storing the timer for an extended period, ensure it is clean and dry. Store in a cool, dry place away from direct sunlight.
- **Inspection:** Periodically inspect the timer for any signs of damage, such as cracks in the casing or frayed wires. Do not use a damaged timer.

7. TROUBLESHOOTING

If you encounter issues with your Garza Outdoor Digital Timer, refer to the following common problems and solutions:

- **Timer not turning ON/OFF at programmed times:**
 - Ensure the timer is in 'AUTO' mode.
 - Verify that the current time and day are set correctly.
 - Check that the ON/OFF programs are set correctly, including the days of the week.
 - Confirm the connected appliance is working and properly plugged into the timer.
- **Display is blank or not responding:**
 - Ensure the timer is securely plugged into a live power outlet.
 - Perform a full reset by pressing the 'R' (Reset) button with a pointed object. You will need to reprogram the time and settings afterward.
- **Timer is not compatible with my outlet:**
 - The timer is designed with a specific plug type. If it does not fit your local outlets, you may need a suitable adapter (not included). Ensure any adapter used is rated for outdoor use and the appropriate electrical load.

8. SPECIFICATIONS

Feature	Specification
Model Number	400615G
Product Dimensions	4 x 6 x 12 cm
Item Weight	0.2 Kilograms
Material	Plastic
Colour	Grey / Blue
Protection Rating	IP44
Max Load	3680W / 16A
Number of Programs	8 ON/OFF
Screen Size	1.57 Inches
Batteries Required	No



Image: Dimensional diagram of the Garza Outdoor Digital Timer, indicating its physical size.



Image: Rear view of the timer, displaying the plug and a label with detailed product specifications and compliance markings.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the point of purchase or contact your retailer. Keep your proof of purchase for warranty claims.