

VINABTY RM-STHC60J

VINABTY RM-STHC60J Replacement Remote Control User Manual

For JVC DVD Digital Home Theater Systems

1. INTRODUCTION

This manual provides instructions for the VINABTY RM-STHC60J replacement remote control, designed for use with various JVC DVD Digital Home Theater Systems. This remote is pre-programmed and requires no additional setup for compatible models.

2. SETUP INSTRUCTIONS

2.1 Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Back view of the RM-STHC60J remote control, highlighting the battery compartment.

2.2 Initial Configuration

This VINABTY RM-STHC60J remote control is pre-programmed for immediate use with compatible JVC DVD Digital

Home Theater Systems. No manual programming or code entry is required. Simply install the batteries and point the remote towards your JVC system to begin operation.

3. OPERATING INSTRUCTIONS

The remote control provides full functionality for your JVC DVD Digital Home Theater System. Below is a general overview of key buttons and their functions:



Image: Front view of the RM-STHC60J remote control, displaying all control buttons.

- **POWER (/I):** Turns the system on or off.
- **AUDIO / VIDEO / VCR/DBS:** Selects the input source.
- **Number Buttons (0-9, 10+, 100+):** Used for direct track selection, channel input, or time entry.
- **VOL (+/-):** Adjusts the volume level.
- **CH (+/-):** Changes channels (if applicable to your system).
- **MUTE:** Mutes or unmutes the audio.

- **PLAY (▶) / PAUSE () / STOP (■) / REWIND (◀) / FAST FORWARD (▶)**: Standard playback controls for DVD/CD functions.
- **MENU / TOP MENU**: Accesses the system's main menu or disc top menu.
- **ENTER**: Confirms selections within menus.
- **Arrow Buttons (◀▶ ▲ ▼)**: Navigates through menus and options.
- **SETUP**: Accesses the system's setup menu.
- **DISPLAY / OSD**: Shows on-screen display information.
- **SUBTITLE**: Toggles subtitle display.
- **AUDIO**: Changes audio tracks or modes.
- **ZOOM / ANGLE**: Adjusts zoom level or camera angle on DVDs.
- **REC (●)**: Initiates recording (if your system supports it).
- **SLEEP**: Sets a sleep timer.
- **DIMMER**: Adjusts display brightness.
- **REPEAT**: Repeats playback of a track or chapter.
- **TITLE / GROUP**: Navigates between titles or groups on a disc.

Refer to your JVC DVD Digital Home Theater System's original manual for specific functions and advanced settings.

4. MAINTENANCE

4.1 Cleaning the Remote Control

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction. Dispose of used batteries according to local regulations.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are installed correctly with the correct polarity.
 - Replace the batteries with fresh ones.
 - Ensure there are no obstructions between the remote control and the JVC system's infrared receiver.
 - Make sure you are within the effective operating range (approximately 33 feet).
- **Specific functions not working:**
 - Verify that your JVC system supports the specific function you are trying to use.
 - Ensure the correct input source is selected on your JVC system.
- **Remote works intermittently:**
 - This often indicates low battery power; replace the batteries.
 - Ensure the remote's infrared emitter is clean and free from debris.

6. SPECIFICATIONS

Feature	Detail
Model Number	RM-STHC60J
Brand	VINABTY
Compatible Devices	JVC DVD Digital Home Theater Systems (TH-C20C, TH-C20, TH-C20J, TH-C30C, TH-C40C, TH-C40J, TH-C30J, TH-C40, TH-C50, TH-C60, TH-C50C, TH-C50J, TH-C60C, TH-C60J, TH-C5, TH-C6)
Connectivity Technology	Infrared
Battery Type	2 x AAA (not included)
Maximum Range	33 feet (approx. 10 meters)
Color	Black
Item Weight	1.9 ounces
Item Dimensions (L x W x H)	5" x 1.9" x 0.5"

7. WARRANTY INFORMATION

Please refer to the product packaging or the seller's terms and conditions for specific warranty details. Typically, replacement remote controls come with a limited warranty covering manufacturing defects. Keep your purchase receipt as proof of purchase.

8. SUPPORT

For further assistance or inquiries regarding your VINABTY RM-STHC60J replacement remote control, please contact the seller or manufacturer through the platform where the purchase was made. Provide your order number and a detailed description of the issue for prompt support.

© 2026 VINABTY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question