

## ALLIMITY BN59-01315N BN59-01483C

# Allimity BN59-01315N BN59-01483C Replacement Remote Control User Manual

Model: BN59-01315N BN59-01483C | Brand: ALLIMITY

## 1. INTRODUCTION

This manual provides instructions for the Allimity BN59-01315N BN59-01483C replacement remote control. This remote is designed to function as a direct replacement for various Samsung Smart QLED TV models without requiring any programming.

### Compatible TV Models:

- QN55S95B, QE65S95BATXXU, QN55S95BAFXZA, QN65S95BAFXZA
- QE55S95B, QN65S95B, QE65S95B, QE55S95BATXXU
- UE58U8000FK, UE60DU7100K, UE65CU7100K, UE65CU7110K, UE65CU71A0K

## 2. SETUP

### 2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.





Image: Back of the remote control with the battery compartment open, illustrating the correct orientation for AAA battery insertion.

## 2.2 Initial Use

This remote control requires no programming. Once batteries are correctly installed, it is ready for immediate use with compatible Samsung Smart QLED TV models. Simply point the remote control towards your television and begin operation.

## 3. OPERATING INSTRUCTIONS

---

The Allimity BN59-01315N BN59-01483C remote control features a standard layout for intuitive operation

of your Samsung TV. Ensure a clear line of sight between the remote's infrared emitter and your TV's IR receiver for optimal performance.





Image: Front view of the remote control, displaying the full button layout including power, number pad, volume, channel, navigation, and dedicated app buttons.

### 3.1 Key Functions

- **Power Button (U):** Turns the TV on or off.
- **Number Pad (0-9):** Direct channel selection.
- **SOURCE:** Changes the input source (HDMI, AV, etc.).
- **VOL (+/-):** Adjusts the volume level.
- **CH (Up/Down):** Changes TV channels.
- **MUTE:** Mutes or unmutes the TV audio.
- **Navigation Pad (Up/Down/Left/Right/Enter):** Navigates menus and selects options.
- **RETURN:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **MENU:** Accesses the TV's main menu.
- **Dedicated App Buttons (NETFLIX, SmSng TV Plus, Disney, prm video)** Provides quick access to streaming services.
- **Color Buttons (A, B, C, D):** Perform specific functions within certain applications or menus, as indicated on the TV screen.

## 4. MAINTENANCE

---

### 4.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

### 4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

### 4.3 Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage, which can damage the remote control.

## 5. TROUBLESHOOTING

---

- **Remote not responding:**
  - Ensure batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new ones.
  - Check for any obstructions between the remote and the TV's IR receiver.
  - Ensure you are within the effective operating range and pointing the remote directly at the TV.
- **Specific buttons not working:**

- Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be preventing proper contact.
- If only certain buttons are affected, and battery replacement does not resolve the issue, the remote may require replacement.





## 6. SPECIFICATIONS

 
<b>Model Number</b>	BN59-01315N BN59-01483C
<b>Brand</b>	ALLIMITY
<b>Product Dimensions</b>	5.5 x 1.8 x 0.6 inches
<b>Item Weight</b>	2 ounces
<b>Power Supply</b>	2 x 1.5V AAA Alkaline Batteries (Not Included)
<b>Connectivity Technology</b>	Infrared
<b>Special Feature</b>	No Programming Required
<b>Compatible Devices</b>	Television

## 7. WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in this manual. Please refer to the product packaging, the seller's website, or contact the manufacturer directly for details regarding warranty coverage and customer support.

### Related Documents - BN59-01315N BN59-01483C

	<a href="#">Samsung Remote Control User Guide and Compatibility</a> Comprehensive guide to Samsung remote control functions, installation steps, and compatibility with various Samsung TV models. Includes model numbers for easy reference.
	<a href="#">Samsung BN59-00516A Replacement Remote Control Guide</a> This guide provides button mapping details for the Samsung BN59-00516A replacement remote control, covering TV, DVD, STB, and CABLE-VCR functions. Compare original remote buttons to their replacements.
	<a href="#">Samsung Universal Remote Control BN59-01315A User Guide</a> Comprehensive user guide for the Samsung BN59-01315A universal remote control. Learn about its features, compatibility with Samsung smart TVs, setup, and programming instructions for seamless TV and cable/satellite box operation.
	<a href="#">Samsung Smart Remote: Connecting and Troubleshooting Guide</a> A guide on how to connect the Samsung Smart Remote to your TV, control external devices, and troubleshoot common remote control issues. Includes FCC compliance information.

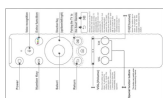

A comprehensive guide to using the Samsung Smart TV Remote Control, including pairing instructions, button functions, and voice command usage.



Detailed comparison of original and replacement remote control buttons for Samsung Smart TVs, including models TM1850A BN59-01259B, BN59-01301A, and BN59-01350B. Find button function mapping from Mandis shop.