

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Laresar](#) /

› [Laresar Robot Vacuum Cleaner Evol 3 User Manual](#)

Laresar Evol 3

Laresar Robot Vacuum Cleaner Evol 3 User Manual

Model: Evol 3 (L6 Pro)

1. INTRODUCTION

Thank you for choosing the Laresar Evol 3 Robot Vacuum Cleaner. This intelligent device is designed to simplify your home cleaning routine by offering powerful vacuuming, efficient mopping, and smart navigation. Please read this manual thoroughly before using the product to ensure proper operation and maintenance.

The Laresar Evol 3 features a 4500Pa suction power, 3-in-1 cleaning capabilities (sweeping, vacuuming, mopping), an ultra-slim design, and a long 180-minute battery life. It supports multiple control methods including app, remote, and voice commands via Alexa or Google Home.



2. SAFETY INFORMATION

To reduce the risk of injury or damage, read these safety instructions carefully and keep them handy for future reference.

- Do not use the robot in wet environments or near liquids.
- Keep the robot away from open flames or heat sources.
- Ensure all cables, curtains, and small objects are cleared from the floor to prevent entanglement.
- Do not allow children or pets to play with the robot.
- Use only the original charging dock and power adapter.
- Do not operate the robot if it is damaged. Contact customer support.
- Avoid using the mopping function on carpets.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Evol 3 Robot Vacuum Cleaner * 1
- Charging Dock * 1
- Power Adapter * 1
- Remote Control * 1
- Mop Cloth * 1
- Mop Cloth Mounting Bracket * 1
- Side Brush * 2
- HEPA Filter * 1 (pre-installed)
- Cleaning Tool * 1
- Magnetic Strip * 1
- User Manual * 1



Figure 3.1: All components included in the Laresar Evol 3 package.

4. PRODUCT OVERVIEW

Familiarize yourself with the main parts of your Laresar Evol 3 robot vacuum.

4.1 Robot Top View

- Power Button: Press to start/pause cleaning.
- Home Button: Press to send the robot back to the charging dock.
- Dustbin Release Button: To remove the dustbin.

4.2 Robot Bottom View

- Side Brushes: Collect dust from edges and corners.
- Main Roller Brush: For deep cleaning of various floor types.
- Driving Wheels: Allow the robot to move.
- Charging Contacts: Connect with the charging dock.
- Cliff Sensors: Prevent the robot from falling down stairs.

- Universal Wheel: Provides omnidirectional movement.

4.3 Dustbin and Water Tank

- Dustbin: Collects dry debris. Capacity: 450ml.
- Water Tank: Holds water for mopping. Capacity: 250ml.
- HEPA Filter: Filters fine dust particles.

5. SETUP

5.1 Charging Dock Placement

Place the charging dock against a wall in an open, uncluttered area. Ensure there is at least 0.5 meters (1.6 feet) of clear space on both sides and 1.5 meters (4.9 feet) in front of the dock. Plug in the power adapter.

5.2 Initial Charging

Place the robot on the charging dock, ensuring the charging contacts align. The robot will automatically begin charging. For first-time use, fully charge the robot for at least 6 hours.

5.3 Installing Side Brushes

Press the side brushes onto the square posts on the bottom of the robot until they click into place.

5.4 App Connection (Optional)

Download the "Laresmart" app from your mobile app store. Follow the in-app instructions to connect your robot to your home Wi-Fi network. This enables advanced features like scheduling, cleaning mode selection, and real-time monitoring.



Figure 5.1: Multiple control methods for the Laresar Evol 3.

6. OPERATING INSTRUCTIONS

6.1 Starting/Pausing/Stopping Cleaning

- **Start:** Press the Power button on the robot or the "Clean" button on the remote/app.
- **Pause:** Press the Power button again during cleaning.
- **Stop:** Press the Home button to send the robot back to the charging dock, or turn off the robot via the app.

6.2 Cleaning Modes

The Evol 3 supports multiple cleaning modes:

- **Auto Cleaning:** The robot intelligently navigates and cleans the entire area.
- **Spot Cleaning:** Cleans a specific area more intensely.
- **Edge Cleaning:** Focuses on cleaning along walls and furniture edges.
- **Vacuum & Mop:** Simultaneously vacuums and mops the floor. Ensure the water tank is filled and the mop cloth is attached.

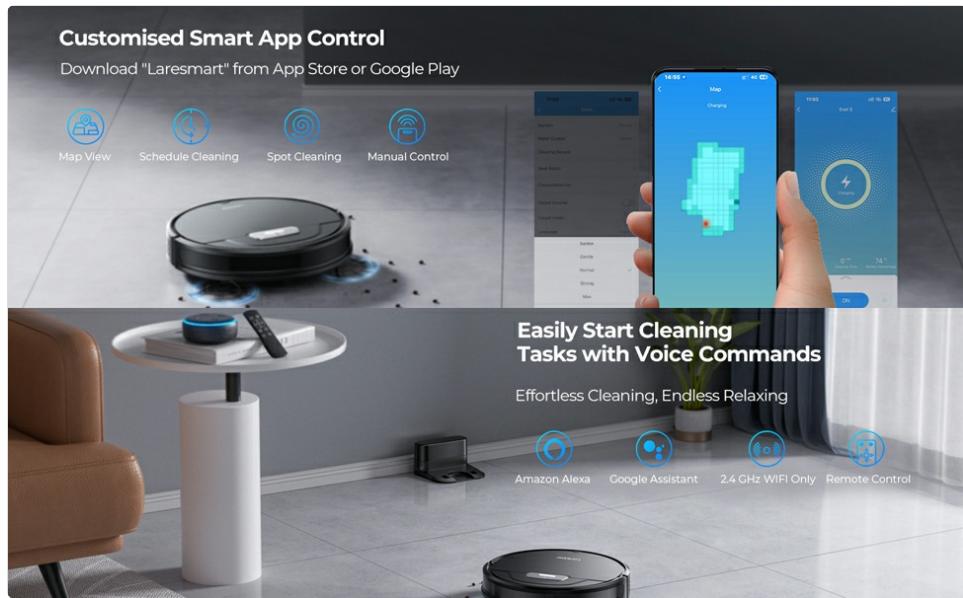


Figure 6.1: The Laresar Evol 3 offers 3-in-1 cleaning capabilities.

6.3 Auto Carpet Boost

The robot automatically detects carpets and increases suction power for deeper cleaning on carpeted surfaces. This feature ensures optimal cleaning performance across different floor types.



Figure 6.2: Automatic carpet boost feature in action.

6.4 Using Magnetic Boundary Strips

Use the included magnetic strips to create virtual boundaries that the robot will not cross. Place the strip flat on the floor in areas you want the robot to avoid, such as pet feeding areas or delicate zones.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your robot vacuum.

7.1 Emptying the Dustbin

Press the dustbin release button, pull out the dustbin, and empty its contents into a trash bin. It is recommended to empty the dustbin after each cleaning cycle.

7.2 Cleaning the Filter

Remove the HEPA filter from the dustbin. Tap it gently to remove loose dirt. The filter can be rinsed with water; ensure it is completely dry before re-installing. Replace the filter every 3-6 months depending on usage.

7.3 Cleaning the Water Tank and Mop Cloth

After mopping, empty any remaining water from the tank. Remove the mop cloth and rinse it thoroughly. The mop cloth can be machine washed. Allow both to air dry completely before re-assembly.

7.4 Cleaning Brushes

- Main Roller Brush:** Remove the brush cover and lift out the main brush. Use the cleaning tool to cut and remove any tangled hair or debris.
- Side Brushes:** Pull off the side brushes. Remove any hair or debris. If brushes are worn, replace them.

7.5 Cleaning Sensors and Charging Contacts

Wipe the cliff sensors, wall sensors, and charging contacts on both the robot and the charging dock with a clean, dry cloth. This ensures proper navigation and charging.

8. TROUBLESHOOTING

If you encounter issues with your robot vacuum, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Robot does not turn on	Low battery; Power switch off	Charge the robot; Ensure power switch is on
Robot cannot charge	Charging contacts dirty; Charging dock unplugged	Clean contacts; Plug in charging dock
Suction power is weak	Dustbin full; Filter clogged; Main brush tangled	Empty dustbin; Clean/replace filter; Clean main brush
Robot gets stuck frequently	Too many obstacles; Cliff sensors dirty	Clear floor; Clean sensors
Robot does not mop effectively	Water tank empty; Mop cloth dirty	Fill water tank; Clean mop cloth

If the problem persists, please contact Laresar customer support.

9. SPECIFICATIONS

Feature	Specification
Brand	Laresar
Model Name	Evol 3 (L6 Pro)
Suction Power	4500 Pa
Battery Life	Up to 180 Minutes
Dustbin Capacity	450 ml
Water Tank Capacity	250 ml

Feature	Specification
Product Dimensions	32L x 32W x 7.6H Centimeters
Filter Type	HEPA
Control Methods	App, Remote Control, Voice (Alexa, Google Home)
Weight	4 kg 420 g
Country of Origin	China

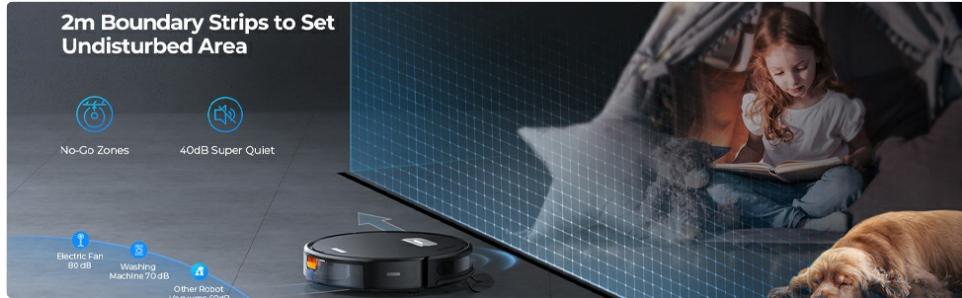


Figure 9.1: Extended battery life for longer cleaning sessions.

10. WARRANTY AND SUPPORT

Laresar products come with a standard manufacturer's warranty. Please refer to your purchase documentation for specific warranty terms and conditions.

Customer Support:

For technical assistance, troubleshooting, or warranty claims, please contact Laresar customer support:

- **Phone Number:** +91 8885241706
- **Email:** care@justshop24x7.com

When contacting support, please have your product model (Evol 3 / L6 Pro) and purchase details ready.