

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [OLEVS](#) /

› [OLEVS Men's Chronograph Multifunction Watch User Manual](#)

OLEVS OPK-US-2875-BL

OLEVS Men's Chronograph Multifunction Watch User Manual

Model: OPK-US-2875-BL

INTRODUCTION

Thank you for choosing the OLEVS Men's Chronograph Multifunction Watch. This manual provides essential information for the proper setup, operation, and maintenance of your timepiece. Please read it thoroughly to ensure optimal performance and longevity of your watch.



Front view of the OLEVS Men's Chronograph Multifunction Watch, featuring a vibrant blue dial with diamond hour markers, three sub-dials, and a black silicone strap.

SETUP

1. Unboxing and Initial Inspection

Carefully remove the watch from its packaging. Inspect the watch for any visible damage or defects. Ensure all components, including the user's manual, are present.

Your browser does not support the video tag.

This video demonstrates the unboxing process and initial presentation of the OLEVS watch, showcasing its packaging and immediate appearance.

2. Setting Time and Date

1. Pull the crown (the knob on the side of the watch) out to the first click position to adjust the date. Turn the crown clockwise or counter-clockwise until the correct date is displayed.
2. Pull the crown out to the second click position to adjust the time. Turn the crown to set the hour and minute hands. Ensure to account for AM/PM when setting the time, especially if the date changes at noon instead of midnight.
3. Once the time and date are set, push the crown back into its normal position to start the watch.

3. Strap Adjustment

The watch features a high-quality silicone rubber strap designed for comfort and durability. The strap can be adjusted by using the buckle to find your desired fit. No special tools are required for standard adjustment.

OPERATING INSTRUCTIONS

1. Basic Timekeeping

Your OLEVS watch is equipped with a precise Japanese-made quartz movement, ensuring accurate time display through the main hour, minute, and second hands.

2. Chronograph Function

The watch features a chronograph with three sub-dials for enhanced functionality:

- **Seconds Sub-dial:** Tracks elapsed seconds.
- **Minutes Sub-dial:** Tracks elapsed minutes.
- **24-Hour Moon Phase Sub-dial:** Displays the current time in a 24-hour format and indicates the moon phase.

To operate the chronograph:

1. Press the top pusher (button) to start the chronograph. The chronograph second hand will begin to move.
2. Press the top pusher again to stop the chronograph.
3. Press the bottom pusher to reset the chronograph. All chronograph hands will return to their zero positions.

3. Date Display

The date window is located on the main dial and automatically advances daily. If the date needs manual adjustment (e.g., after months with fewer than 31 days), refer to the "Setting Time and Date" section.

4. Luminous Hands

The watch hands are treated with a luminous material, allowing for readability in low-light conditions after exposure to light.



Key features of the OLEVS watch: 30M water resistance, high hardness coated mirror, comfortable silicone strap, and luminous hands for visibility in the dark.

MAINTENANCE

1. Water Resistance (30M)

Your OLEVS watch is water-resistant up to 30 meters (3 ATM). This means it is suitable for daily use, such as splashes, rain, and hand washing. It is **not** recommended for showering, swimming, diving, or any prolonged water immersion. Avoid operating the crown or pushers when the watch is wet.

2. Cleaning

To maintain the appearance of your watch:

- Wipe the watch case and strap regularly with a soft, dry cloth.
- For the silicone strap, you can use a mild soap solution and rinse thoroughly, then dry completely before wearing.

- Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish.

3. Storage

When not in use, store your watch in a cool, dry place, away from direct sunlight, extreme temperatures, and strong magnetic fields. The original watch box is ideal for storage.

4. Battery Replacement

As a quartz watch, it is powered by a battery. When the watch stops or the second hand begins to skip, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running or running intermittently.	Low battery; crown not pushed in; internal movement issue.	Push crown fully in. If issue persists, replace battery or contact support.
Chronograph hands do not reset to zero.	Needs calibration; internal mechanism issue.	Consult a watch technician for calibration or repair.
Date changes at noon instead of midnight.	Time set incorrectly (AM/PM).	Advance the hour hand by 12 hours.
Condensation inside the watch.	Exposure to extreme temperature changes or water ingress.	Immediately take the watch to a qualified technician to prevent damage.

SPECIFICATIONS

- **Brand:** OLEVS
- **Model Number:** OPK-US-2875-BL
- **Movement:** Japanese-made Quartz
- **Case Material:** Stainless Steel
- **Dial Features:** Chronograph sub-dials (seconds, minutes, 24-hour moon phase), Date display, Diamond hour markers, Luminous hands.
- **Strap Material:** High-quality Silicone Rubber
- **Water Resistance:** 30M (3 ATM) - Splash/Rain Resistant
- **Dimensions:** Approximately 5.83 x 2.48 x 0.94 inches (Package Dimensions)
- **Weight:** Approximately 3.84 ounces

WARRANTY AND SUPPORT

OLEVS is committed to providing high-quality products. If you encounter any issues or have questions regarding your watch, please do not hesitate to contact our professional after-sales team. We are dedicated to providing a satisfactory resolution to your inquiries.

For warranty claims or technical support, please refer to the contact information provided with your purchase or visit the official OLEVS website.

