

MOUNTUP MU0057-07

MOUNTUP Corner TV Wall Mount

MODEL: MU0057-07 USER MANUAL

1. Introduction

This user manual provides comprehensive instructions for the installation, operation, and maintenance of your MOUNTUP Corner TV Wall Mount, model MU0057-07. This full-motion bracket is designed to securely hold most 26-65 inch TVs, offering smooth swivel, tilt, and extension capabilities for optimal viewing angles. Please read this manual thoroughly before installation and keep it for future reference.



Figure 1.1: The MOUNTUP Corner TV Wall Mount MU0057-07, including the wall plate, articulating arms, VESA plate, and included accessories like a level and cable ties.

2. Safety Information

WARNING: Failure to read and follow all instructions, cautions, and warnings in this manual may result in personal injury, property damage, or voiding of your warranty. If you have any questions, please contact customer support.

- Do not install this product on drywall alone. It must be mounted to a wood stud or concrete/brick wall.
- Ensure the wall structure can safely support the combined weight of the mount and your TV.
- Do not exceed the maximum weight capacity of 77 lbs (35 kg).
- Do not exceed the maximum VESA pattern of 400x400mm.
- Use all provided hardware. Do not use damaged parts.
- Always use a stud finder to locate wood studs accurately.
- Two people are recommended for installation to ensure safety and ease of handling.
- Keep children away from the installation area during setup.

3. Package Contents

Verify that all components are present and undamaged before beginning installation. If any parts are missing or defective, contact MOUNTUP customer support.

Better TV Mount

Creates Better Viewing Experience



Figure 3.1: Diagram showing the main components of the TV mount: the arm and wall plate assembly (01), the VESA plate (02), and extenders (3A, 3B) for larger VESA patterns.

- Wall Plate and Arm Assembly (x1)
- TV VESA Plate (x1)
- VESA Extenders (x2 sets, for larger VESA patterns)
- Hardware Kit (various screws, washers, spacers for TV and wall mounting)
- Bubble Level (x1)
- Cable Ties (x3)
- Installation Template (x1)

4. Specifications

Feature	Detail
Brand	MOUNTUP
Model Number	MU0057-07
Compatible TV Size	26 - 65 Inches
Maximum Load Capacity	77 lbs (35 kg)
VESA Compatibility	Min 100x100mm to Max 400x400mm
Mounting Type	Wall Mount (Single Stud, Concrete/Brick Wall)
Movement Type	Full Motion (Swivel, Tilt, Extend/Retract)
Extension Arm Length	Up to 29.5 inches (750mm)
Tilt Angle	+5° to -15°
Swivel Angle	Up to 180° (depending on TV size)
Level Adjustment	±3°
Material	Metal
Color	Black

5. Setup and Installation

Careful planning and execution are crucial for a secure installation. Please follow these steps precisely.


5.1 Pre-Installation Checks

- **TV Compatibility:** Ensure your TV's size (26-65 inches) and weight (under 77 lbs) are within the mount's limits.
- **VESA Pattern:** Check the VESA mounting holes on the back of your TV. This mount supports VESA patterns from 100x100mm to 400x400mm.
- **Wall Type:** Identify your wall type. This mount is suitable for wood studs and solid concrete/brick walls. *Do not mount on drywall alone.*

Please Check Before Purchase



VESA = Horizontal x Vertical

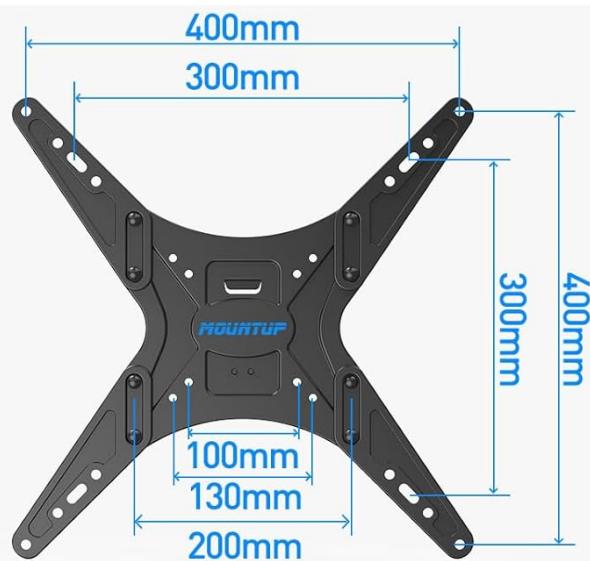

Suitable VESA Patterns

100 x 100mm	300 x 200mm
130 x 130mm	300 x 300mm
200 x 100mm	400 x 200mm
200 x 200mm	400 x 300mm
200 x 300mm	400 x 400mm
200 x 400mm	


Unsuitable VESA Patterns

100 x 200mm	150 x 200mm
100 x 300mm	150 x 150mm
100 x 150mm	200 x 150mm
150 x 100mm	

Figure 5.1: Visual guide for checking your TV's VESA pattern (horizontal x vertical distance between mounting holes) and suitable wall types (wood stud, concrete/brick wall).

Composition of The TV Mount

Arm and Wall Plate

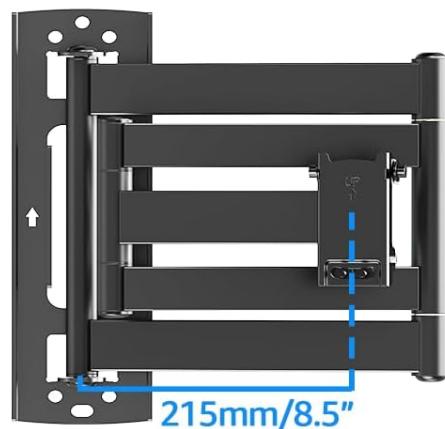


01 x1

VESA Plate



02 x1

Extenders

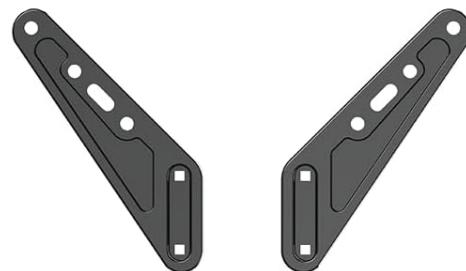

3A x2 **3B** x2

Figure 5.2: Illustration of compatible wall types: Wood Stud, and Concrete Wall/Brick Wall (requires anchors, not included). Drywall alone is not suitable.

5.2 Installation Steps

1. Attach the TV Plate to your TV:

Carefully place your TV face down on a soft, clean surface. Attach the VESA plate (02) to the back of your TV using the appropriate screws, washers, and spacers from the hardware kit. If your TV's VESA pattern is larger than 200x200mm, you may need to attach the extenders (3A, 3B) to the VESA plate first.

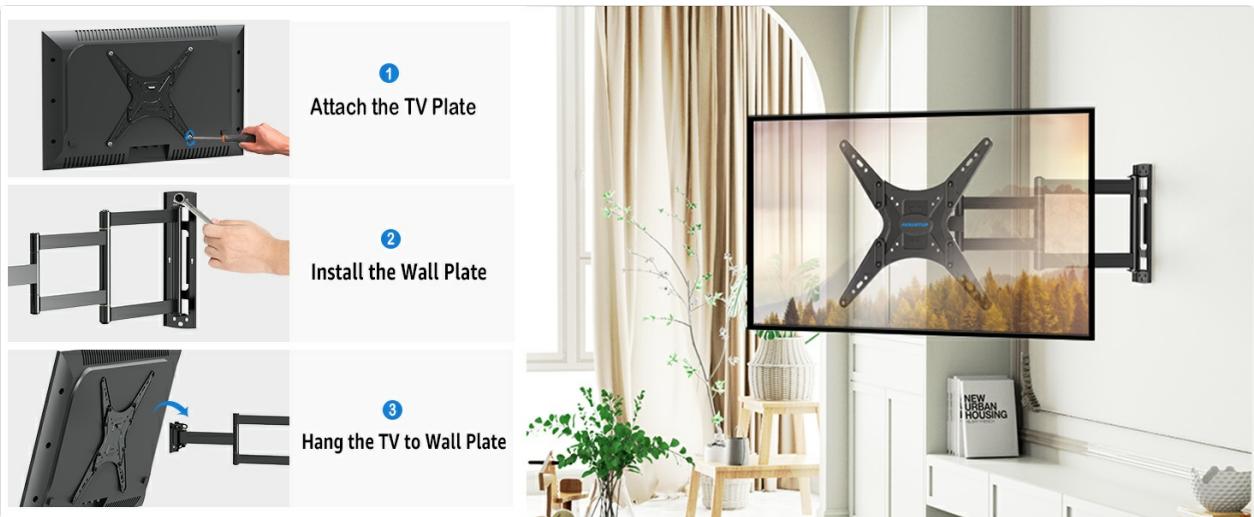


Figure 5.3: Step-by-step visual of attaching the TV plate to the back of the television.

2. Install the Wall Plate:

Determine the desired height for your TV. Use a stud finder to locate a wood stud. Mark the drilling points using the provided template. For wood studs, pre-drill pilot holes and secure the wall plate assembly (01) using the lag bolts. For concrete/brick walls, use a masonry drill bit, insert concrete anchors (not included), and then secure the wall plate.

3. Hang the TV to the Wall Plate:

With assistance, carefully lift the TV with the attached VESA plate and hook it onto the wall plate assembly. Ensure the TV is securely seated. Tighten any safety screws or locking mechanisms on the VESA plate to prevent accidental dislodging.

6. Operating Instructions

Your MOUNTUP TV wall mount offers versatile adjustments to achieve the perfect viewing experience.

6.1 Adjusting Tilt and Level

- Tilt Adjustment:** The mount allows for a tilt range of +5° to -15°. Loosen the tilting adjustment screws on the VESA plate, adjust the TV to your desired vertical angle, and then securely tighten the screws.
- Level Adjustment:** Fine-tune the horizontal level of your TV by adjusting the level adjustment screws on the VESA plate. This allows for a ±3° rotation to ensure your TV is perfectly straight after installation.

Easy Level & Tilting Adjustment

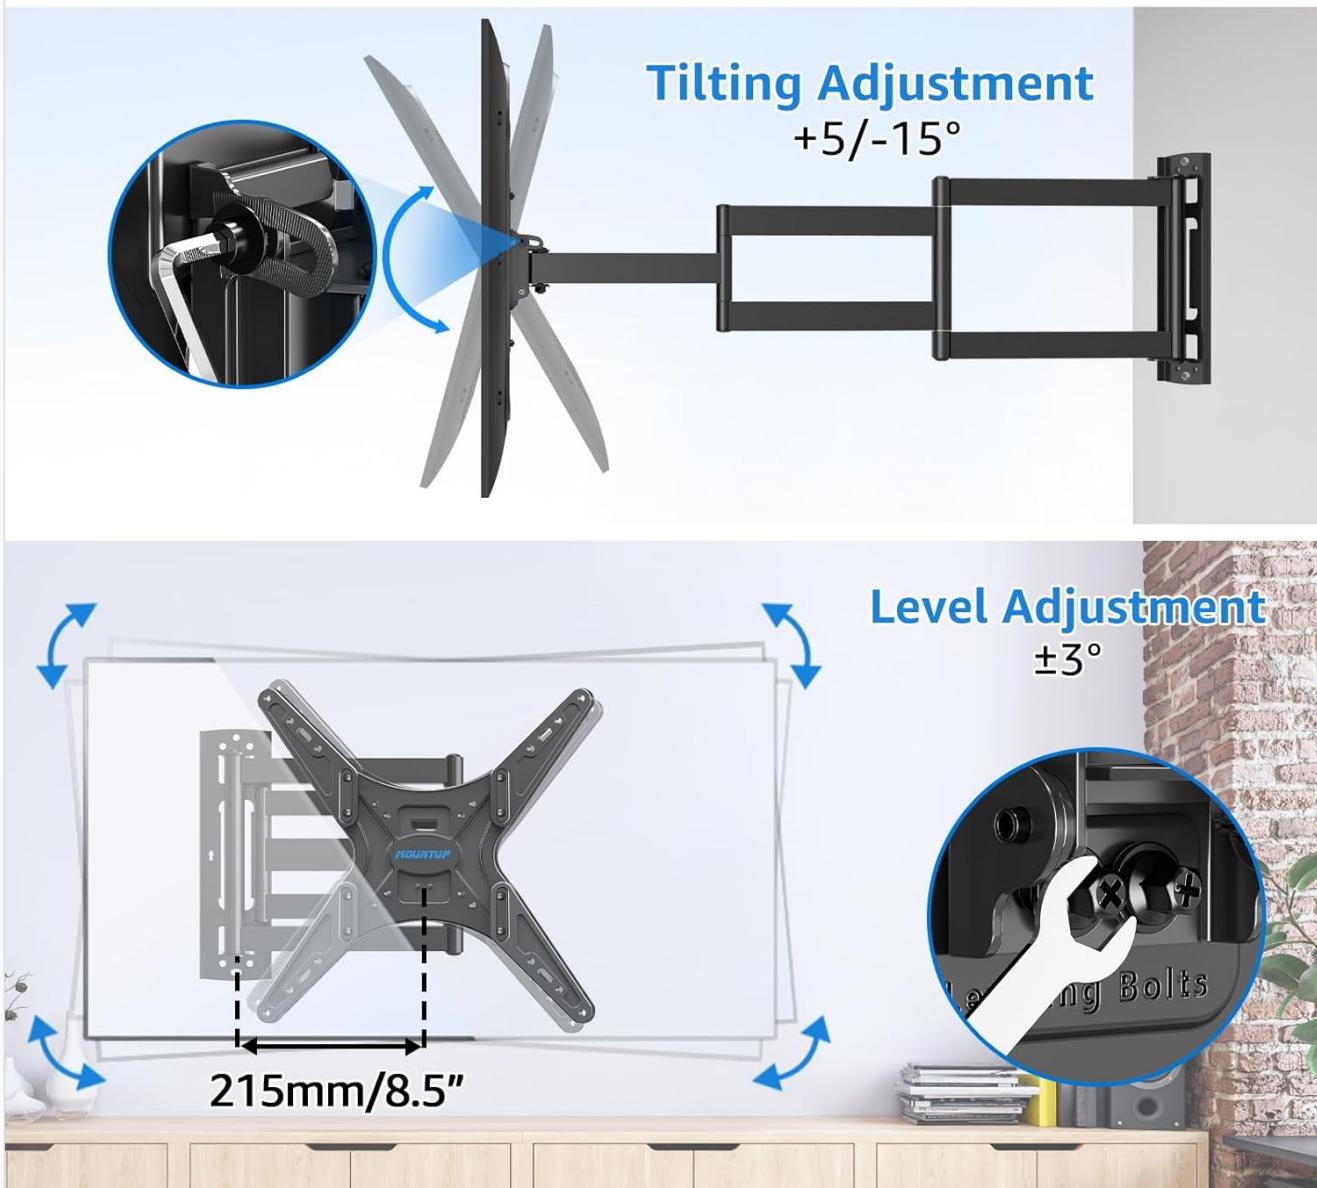


Figure 6.1: Illustration demonstrating the easy level adjustment ($\pm 3^\circ$) and tilting adjustment ($+5^\circ$ to -15°) features of the mount.

6.2 Swivel and Extension

- **Extension:** The dual articulating arms allow the TV to extend up to 29.5 inches (750mm) from the wall, providing ample space for adjustments and access to cables.
- **Retraction:** The mount can retract to approximately 3 inches from the wall for a low-profile appearance when not extended.
- **Swivel:** The mount offers up to 180° of swivel (left to right), depending on the size of your TV and its distance from the wall. This allows you to angle the TV towards different viewing areas in a room, including corner installations.

Long Arm Full Motion TV Mount

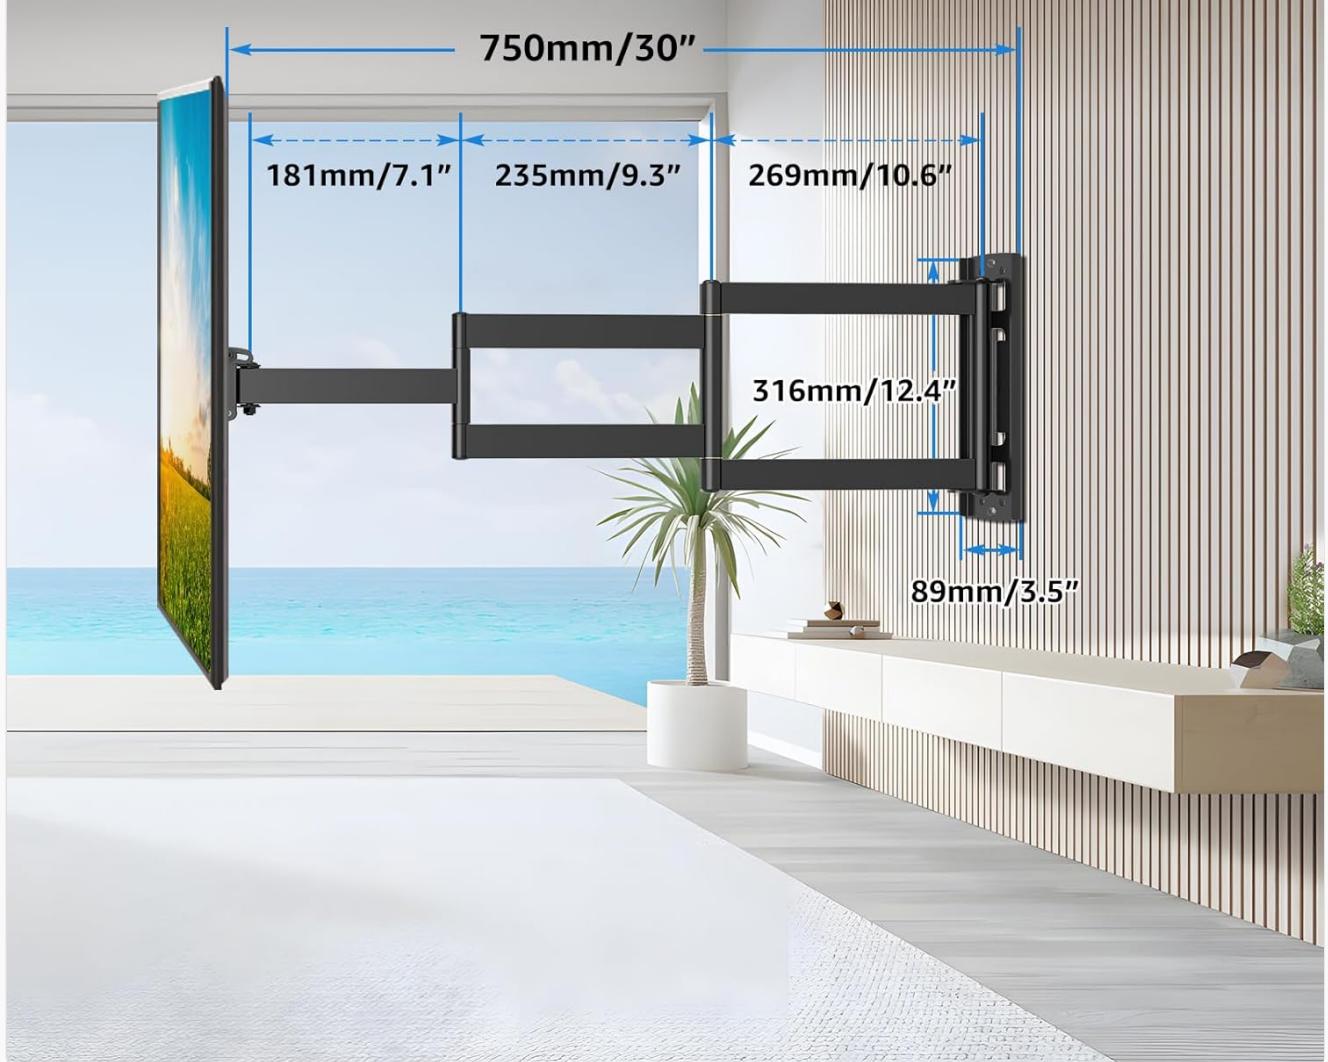


Figure 6.2: The long arm full motion capability, showing the mount extended up to 29.5 inches (750mm) from the wall.

Double Arm Folding

Allows the Screen to Cross the Wall



Figure 6.3: The double arm folding design, illustrating how the mount allows the screen to cross the wall, ideal for corner installations or viewing from adjacent rooms.

Perfect for Corner Installation

with Flexible Arm Folding



Figure 6.4: An example of the mount's flexible arm folding, making it perfect for corner installations, maximizing space and viewing options.

7. Maintenance

Regular maintenance ensures the longevity and safe operation of your TV wall mount.

- **Cleaning:** Wipe the mount with a soft, dry cloth to remove dust. Do not use abrasive cleaners or solvents.
- **Periodic Checks:** Periodically check all screws and bolts to ensure they remain tight and secure. Over time, vibrations or frequent adjustments may cause them to loosen slightly.
- **Lubrication:** If the articulating arms become stiff, a small amount of silicone-based lubricant can be applied to the pivot points. Avoid oil-based lubricants that may attract dust.

8. Troubleshooting

If you encounter issues with your MOUNTUP TV wall mount, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
TV is not level after installation.	Level adjustment screws are loose or not properly set.	Adjust the level adjustment screws on the VESA plate (refer to Section 6.1). Use the included bubble level for accuracy.
Mount arms are stiff or difficult to move.	Joints may be too tight or require lubrication.	Check the tightness of the bolts at the pivot points. If too tight, slightly loosen them. Apply a small amount of silicone-based lubricant if needed.
TV appears to sag or tilt unexpectedly.	Tilt adjustment screws are loose, or TV weight exceeds capacity.	Ensure tilt adjustment screws are securely tightened. Verify your TV's weight does not exceed 77 lbs.
Mount feels unstable on the wall.	Improper installation, loose lag bolts, or unsuitable wall type.	Re-check all wall mounting bolts for tightness. Ensure the mount is secured to a wood stud or concrete/brick wall as per instructions. If unsure, consult a professional installer.

9. Warranty Information

MOUNTUP products are manufactured with quality and durability in mind. For specific warranty details regarding your MU0057-07 TV wall mount, please refer to the warranty card included in your package or visit the official MOUNTUP website. Keep your purchase receipt as proof of purchase for any warranty claims.

10. Customer Support

If you have any questions, require assistance with installation, or need to report a missing/damaged part, please contact MOUNTUP customer support. Our experts are available to provide comprehensive assistance.

Website: [Visit the MOUNTUP Store on Amazon](#)

Email: (Refer to product packaging or official website for email contact)

Phone: (Refer to product packaging or official website for phone contact)

Please have your model number (MU0057-07) and purchase date ready when contacting support.