

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Relaxdays](#) /

› Relaxdays Socceror Football Goal Instruction Manual - Model 10044652

Relaxdays 10044652

Relaxdays Socceror Football Goal Instruction Manual

Model: 10044652

Brand: Relaxdays

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing the Relaxdays Socceror Football Goal. This manual provides essential instructions for the safe assembly, operation, and maintenance of your new football goal. Please read all instructions carefully before assembly and use, and retain this manual for future reference.

Important Safety Warnings:

- **Adult Supervision:** Children should always be supervised by an adult when using the football goal.
- **Secure Anchoring:** Always ensure the goal is securely anchored to the ground using the provided ground anchors to prevent tipping or movement during play. Failure to do so can result in serious injury.
- **Inspect Before Use:** Before each use, inspect the goal for any loose parts, damage, or wear. Do not use if any components are damaged.
- **No Climbing:** Do not climb on the goal frame or net. This product is not designed to support body weight and climbing can cause the goal to tip over, leading to injury.
- **Proper Assembly:** Assemble the goal strictly according to the instructions provided. Incorrect assembly can compromise stability and safety.
- **Clear Area:** Ensure the playing area around the goal is clear of obstacles and hazards.

2. PACKAGE CONTENTS

Please check the package contents against the list below. If any parts are missing or damaged, contact customer service immediately.

- 1 x Football Goal (disassembled metal frame parts)
- 1 x Goal Net (Polyester)
- Ground Anchors (Sardines)

3. SETUP AND ASSEMBLY

Follow these steps to assemble your Relaxdays Socceror Football Goal:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify all components are present as per the package contents list.
2. **Assemble the Frame:** Connect the metal bars to form the goal frame. Ensure that all connections are fully inserted and securely fastened. Some connections may require screwing together.
3. **Attach the Net:** Once the frame is assembled, thread the polyester net through the designated attachment points on the frame. Ensure the net is evenly distributed and securely fastened to prevent it from coming loose during play.
4. **Position the Goal:** Place the assembled goal in your desired location on a flat, stable surface, such as a garden lawn.
5. **Secure with Anchors:** Insert the provided ground anchors (sardines) firmly into the ground through the designated loops or holes at the base of the goal. This step is crucial for stability and safety.



Figure 3.1: Goal dimensions for planning placement.

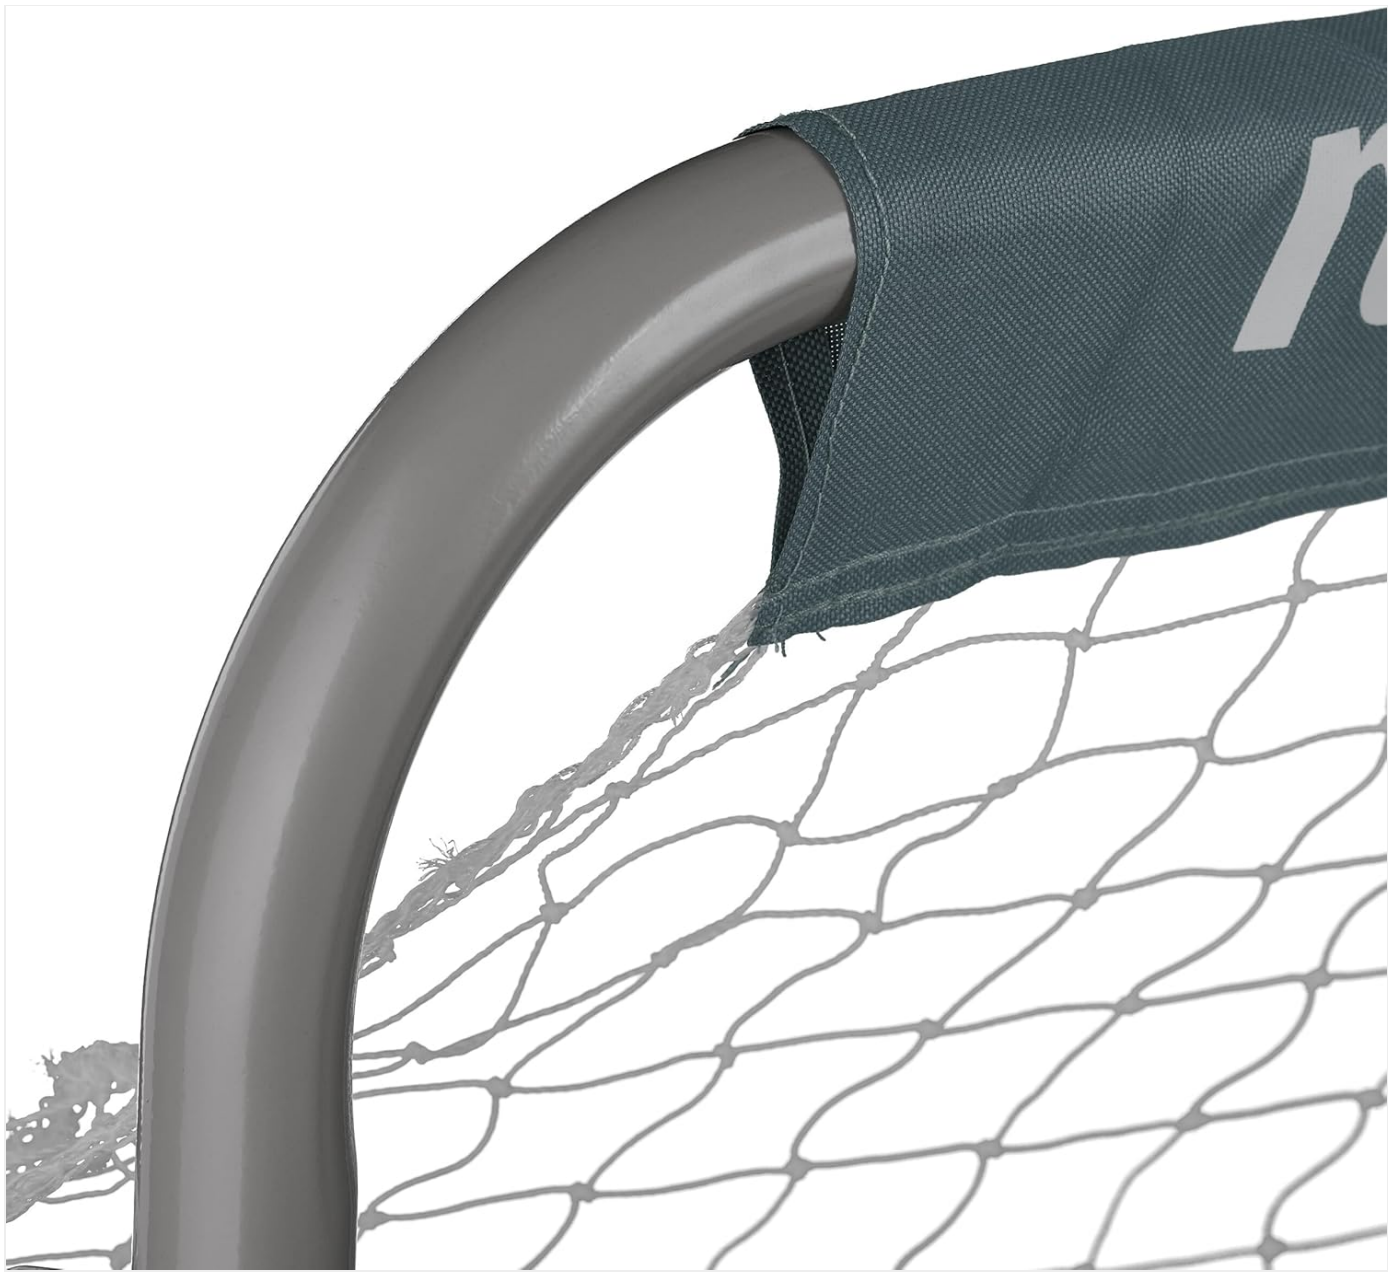


Figure 3.2: Detail of the robust metal frame connection.

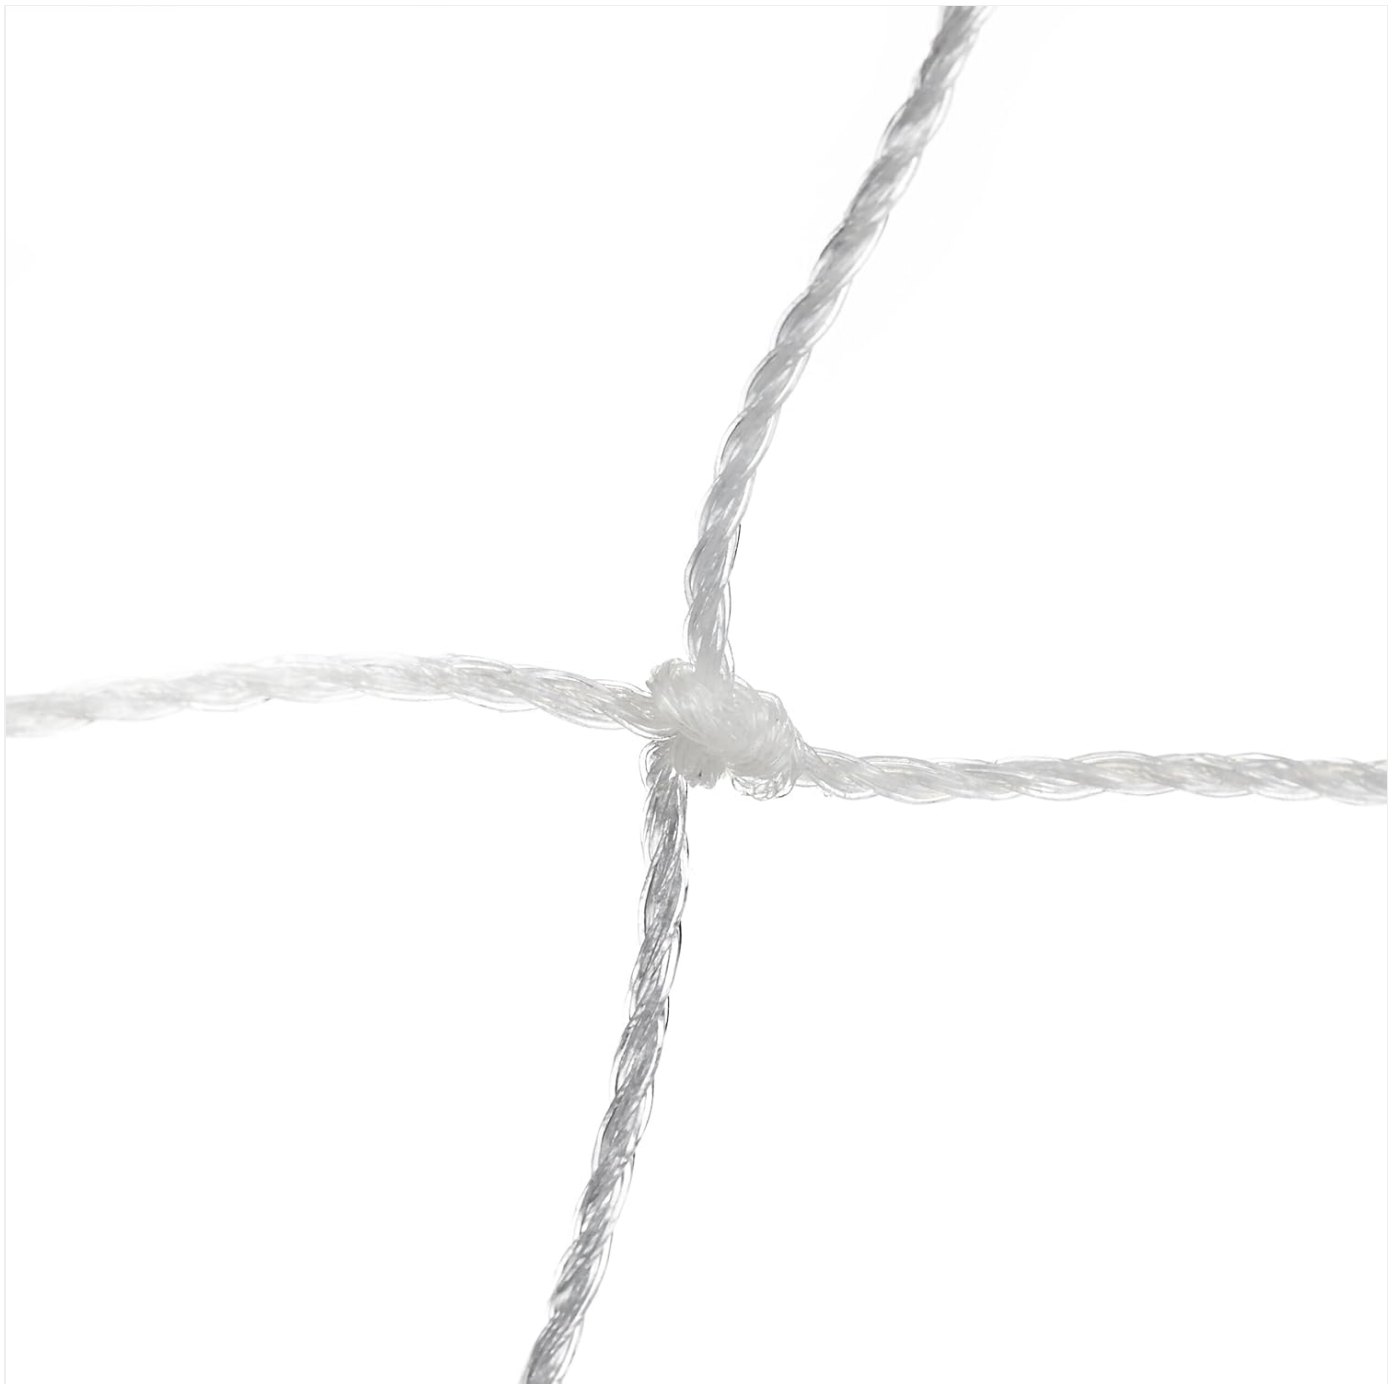


Figure 3.3: Detail of the durable polyester net.

4. OPERATING INSTRUCTIONS (USAGE)

The Relaxdays Socceror Football Goal is designed for recreational football activities in outdoor environments such as gardens or open fields. It is suitable for both children and adults.

- Ensure the goal is always properly anchored to the ground before any play begins.
- Use appropriate footballs for the size of the goal and the players.
- Do not use the goal as a climbing frame or for any purpose other than playing football.



Figure 4.1: The football goal ready for use in a garden setting.



Figure 4.2: Example of children enjoying the football goal.

5. MAINTENANCE

Proper maintenance will extend the lifespan of your football goal.

- **Regular Inspection:** Periodically check all frame connections, screws, and net attachments to ensure they are tight and secure. Tighten any loose fasteners.
- **Net Care:** Inspect the net for any tears, fraying, or damage. Small tears can be repaired, but a severely damaged net should be replaced to maintain safety and functionality.
- **Frame Cleaning:** Clean the metal frame with a damp cloth and mild soap if necessary. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- **Storage:** During periods of prolonged non-use or severe weather conditions (e.g., heavy rain, snow, strong winds), it is recommended to disassemble the goal or store it in a sheltered, dry location to protect it from the elements and prevent rust or material degradation.
- **Ground Anchors:** Ensure ground anchors remain effective. If the ground becomes too soft or hard, adjust their placement or consider additional anchoring methods if needed.

6. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Goal feels unstable or wobbly:**
 - Check all frame connections and ensure they are fully engaged and tightened.
 - Verify that the ground anchors are fully inserted into stable ground. If the ground is too soft, reposition the goal or consider using longer anchors (not included).
- **Net is loose or sags:**
 - Re-thread the net through the frame's attachment points, ensuring it is taut and evenly distributed.
 - Check for any broken net ties or attachment points and repair or replace as needed.
- **Difficulty assembling frame parts:**
 - Ensure you are using the correct parts for each connection as per the assembly diagram (if provided separately).
 - Apply gentle pressure and ensure parts are aligned correctly before attempting to force them together.

7. SPECIFICATIONS

Attribute	Detail
Model Number	10044652
Dimensions (H x W x D)	110 x 150 x 75 cm
Weight	5.9 kg
Frame Material	Metal
Net Material	Polyester
Color	Grey
Intended Use	Recreational outdoor football

8. WARRANTY AND SUPPORT

For warranty information, product support, or to order replacement parts, please refer to your purchase documentation or contact Relaxdays customer service directly. Contact details can typically be found on the Relaxdays official website or on your original sales receipt.

