

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KEMEI](#) /

› [KEMEI Body Trimmer KM-3208 KM-1838 User Manual](#)

## KEMEI KM-3208 KM-1838

# KEMEI Body Trimmer KM-3208 KM-1838 User Manual

Model: KM-3208, KM-1838

## 1. IMPORTANT SAFETY INFORMATION

Read all instructions carefully before using this appliance. Keep this manual for future reference.

- This appliance is intended for body hair trimming only. Do not use for any other purpose.
- Keep the appliance away from water when charging. Ensure hands are dry when handling the charger.
- Do not disassemble, repair, or modify the appliance yourself. Contact qualified service personnel for repairs.
- Keep out of reach of children.
- Do not use if the appliance or charging cable is damaged.
- Only use the provided charging cable and adapter (if included) for charging.
- The appliance is IPX7 waterproof and can be used in the shower. However, ensure the charging port is completely dry before connecting the charger.


## 2. PRODUCT OVERVIEW

The KEMEI Body Trimmer is designed for efficient and comfortable body hair grooming. It features advanced blade technology and a waterproof design for versatile use.

### Key Features:

- **R-angle Design Blade:** Engineered to prevent skin irritation and nicks during use.
- **Ceramic and Steel Blades:** Combination for sharpness and durability, designed to stay cool during extended use.
- **LED Light:** Integrated light for improved visibility during trimming, ensuring a cleaner result.

- **IPX7 Waterproof:** Allows for safe use in wet conditions, including in the shower, and easy cleaning.
- **USB Charging:** Convenient charging via various USB power sources.
- **Long-lasting Lithium Battery:** Provides extended cordless operation.
- **Low Noise Operation:** Designed for quiet grooming.

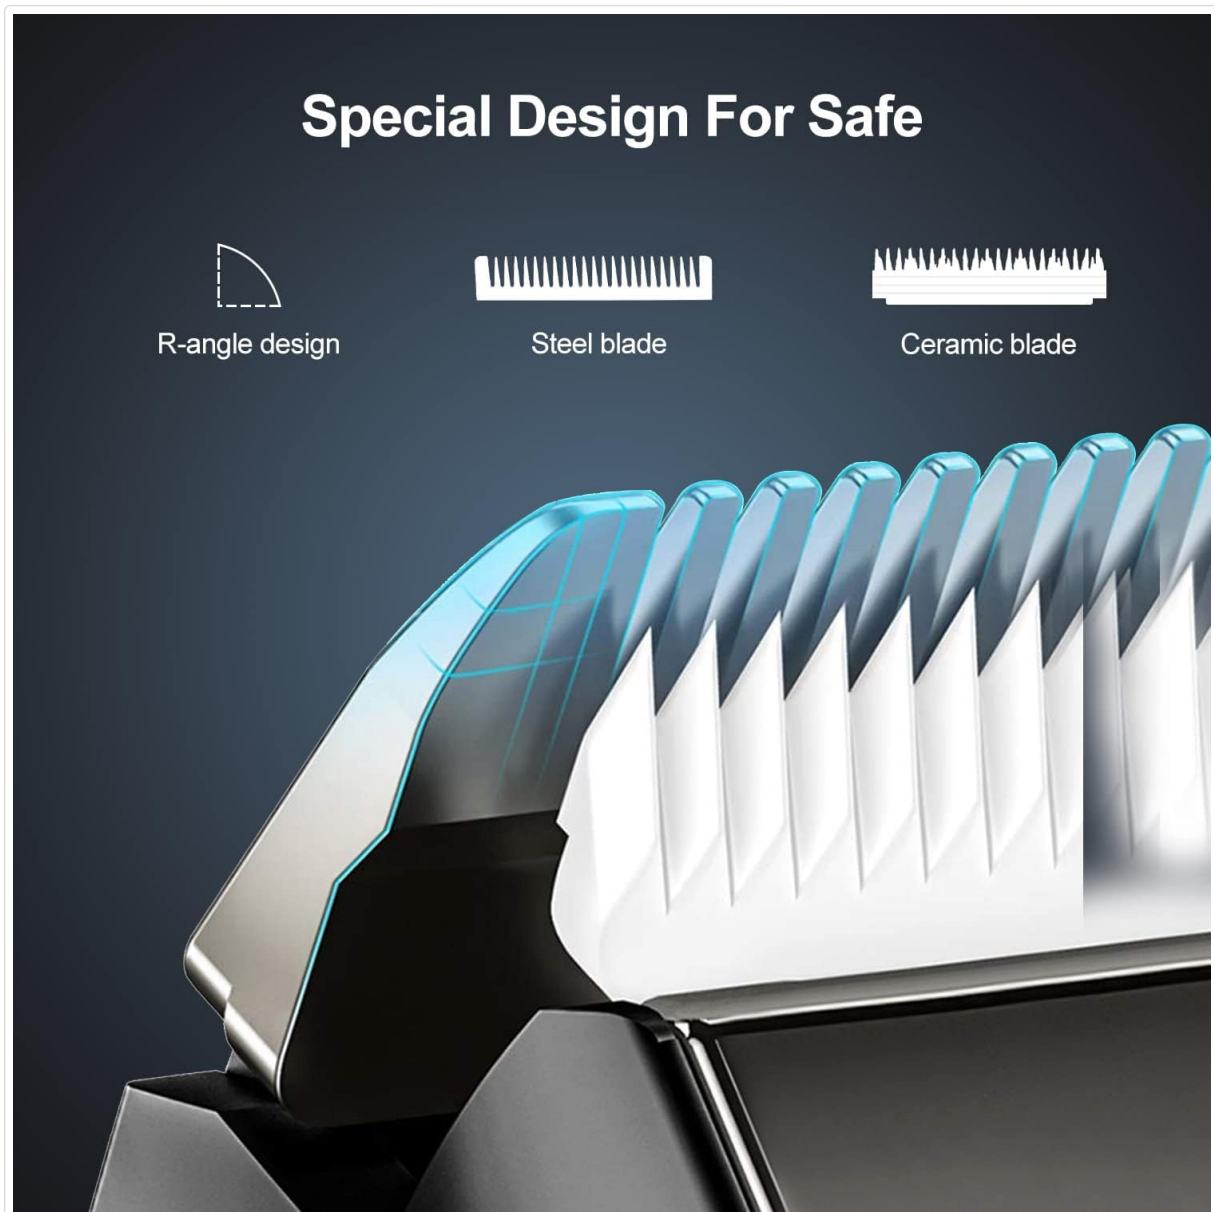

**Image:** Illustration of the KEMEI Body Trimmer's R-angle design, steel blade, and ceramic blade for safe and effective trimming.

# LED Light

Better view and trim cleaner with illumination



**Image:** Close-up view of the KEMEI Body Trimmer highlighting the integrated LED light for enhanced visibility during use.

## 3. SETUP

### Initial Charging:

1. Before first use, fully charge the trimmer.
2. Ensure the trimmer is turned off.
3. Connect the USB charging cable to the charging port on the trimmer.
4. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, power bank, USB adapter).
5. The charging indicator light will illuminate. A full charge takes approximately 1.5 hours.
6. Once fully charged, disconnect the charging cable.

# Lithium Battery

1.5 hours fast charging  
Enjoy 90 minutes of trimming time



Computer/PC



Car Charger



USB Adapter



Power Bank



**Image:** The KEMEI Body Trimmer connected via USB for charging, illustrating various compatible power sources like computers, car chargers, USB adapters, and power banks.

## Attaching Guide Combs (if applicable):

If your model includes guide combs, select the desired length and securely attach it to the trimmer head until it clicks into place. Ensure it is firmly attached before use.

## 4. OPERATING INSTRUCTIONS

### Turning On/Off:


- To turn on the trimmer, press the power button.
- To turn off the trimmer, press the power button again.

### Trimming Techniques:

1. Ensure your skin is clean and dry (or wet if using in the shower).
2. For best results, hold the trimmer flat against the skin and move it slowly against the direction of hair growth.
3. Use gentle pressure. The R-angle design helps prevent skin damage, but excessive force is

unnecessary.

4. Utilize the integrated LED light for better visibility in dimly lit areas or for precise trimming.
5. The trimmer is designed for low noise operation (below 50 dB) for a more comfortable experience.

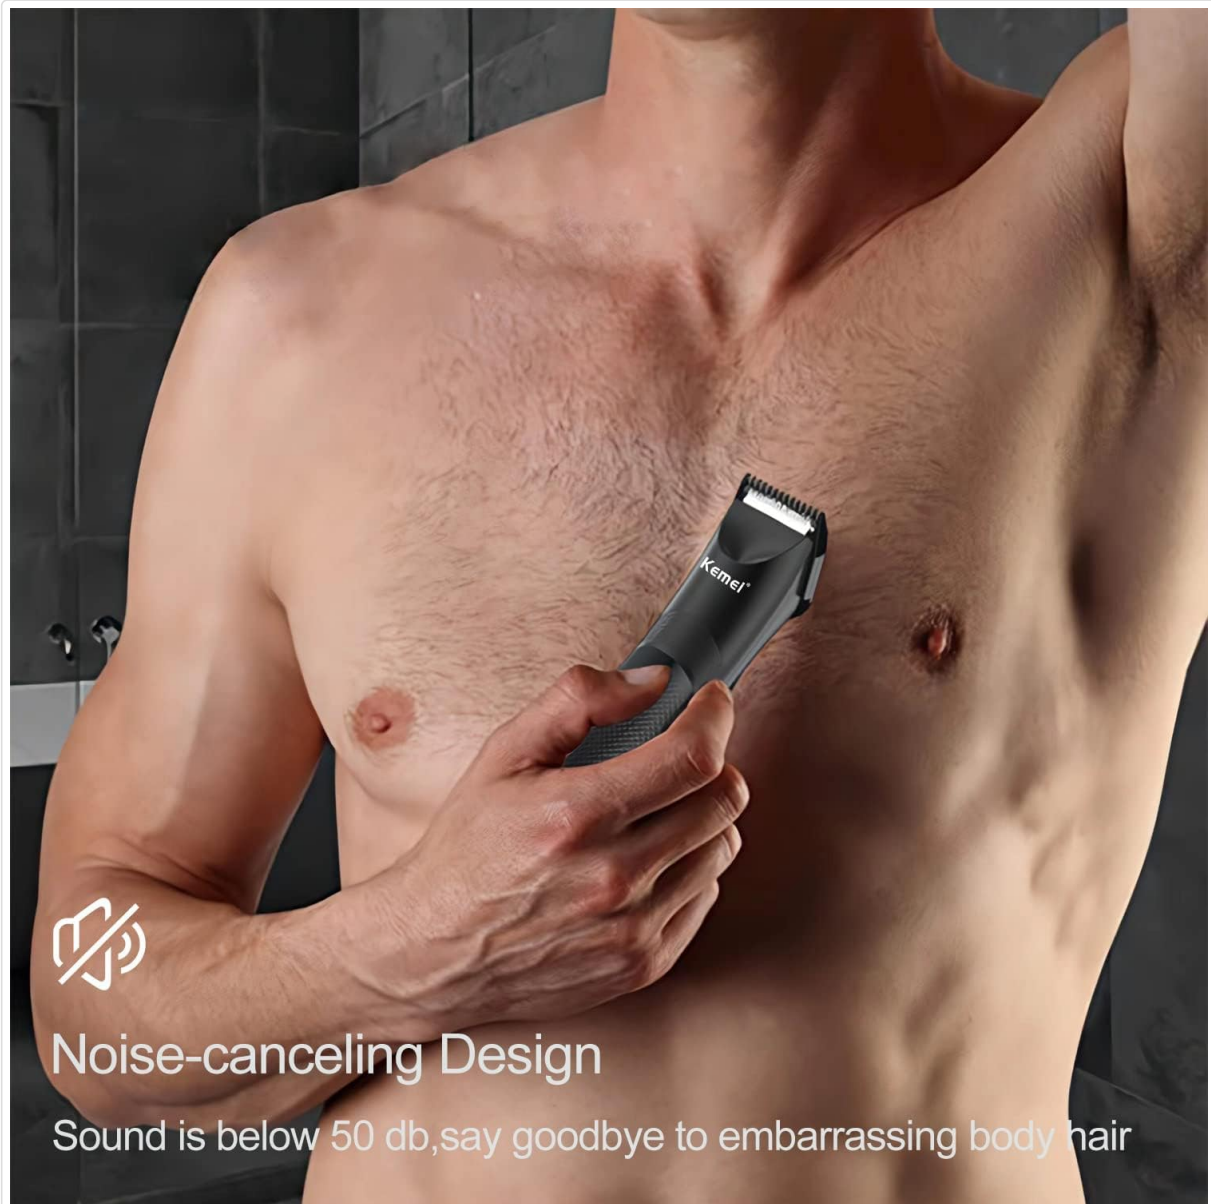

**Image:** A man using the KEMEI Body Trimmer, illustrating its ergonomic design and quiet operation for body hair grooming.

### **Wet Use (IPX7 Waterproof):**

The KEMEI Body Trimmer is IPX7 waterproof, allowing for safe use in the shower or with wet skin. This also facilitates easy cleaning under running water. Always ensure the charging port is dry before charging.

# Step into the shower with your new friend



**Image:** The KEMEI Body Trimmer being used in a wet environment, demonstrating its IPX7 waterproof and impact-resistant capabilities.

## 5. MAINTENANCE

### Cleaning the Trimmer:

1. Turn off the trimmer and disconnect it from any power source.
2. Remove any attached guide combs.
3. Use the included cleaning brush to remove loose hairs from the blades and trimmer head.
4. Rinse the trimmer head and blades under running water. The IPX7 waterproof design allows for easy rinsing.
5. Allow the trimmer to air dry completely before storing or recharging.

### Blade Care:

For optimal performance, regularly clean the blades. Periodically, a small drop of clipper oil (not included) can be applied to the blades to maintain their sharpness and smooth operation. Do not use harsh chemicals or abrasive cleaners on the blades or trimmer body.

## Storage:

Store the trimmer in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the trimmer is clean and dry before storage.

## 6. CHARGING

The KEMEI Body Trimmer is equipped with a high-performance 600 mAh lithium battery, offering approximately 60-90 minutes of use on a single charge. Charging time is about 1.5 hours.

- **USB Charging:** The trimmer supports USB charging, allowing it to be charged from various sources such as computer USB ports, power banks, or USB wall adapters.
- **Charging Indicator:** The indicator light will show the charging status. Refer to the device's specific light patterns for full charge indication.
- **Battery Life:** To prolong battery life, avoid completely draining the battery before recharging.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer for at least 1.5 hours.
Trimmer is not charging.	Charging cable not properly connected or damaged. USB power source not active.	Ensure the cable is securely connected. Try a different USB port or power adapter. Check for cable damage.
Poor trimming performance / Hair pulling.	Blades are dull or clogged with hair. Battery is low.	Clean the blades thoroughly. Recharge the trimmer. Consider applying a drop of clipper oil to the blades.
Trimmer makes unusual noise.	Blades may be misaligned or require lubrication.	Clean and oil the blades. If the issue persists, contact customer support.

## 8. SPECIFICATIONS

Feature	Detail
Model Numbers	KM-3208, KM-1838
Product Dimensions	5.7 x 1.37 x 1.37 inches
Weight	13.23 ounces
Battery Type	1 Lithium Polymer battery (included)
Battery Capacity	600 mAh
Charging Time	Approximately 1.5 hours
Operating Time	Approximately 60-90 minutes

Feature	Detail
Power Source	Battery Powered (Cordless, USB Charging)
Blade Material	Ceramic
Waterproof Rating	IPX7
Included Components	Trimmer, Battery, Cleaning Brush, USB Charging Cable

## 9. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the product packaging or contact KEMEI customer service directly. Keep your purchase receipt as proof of purchase.

For further assistance, visit the official KEMEI store or contact their support channels.