

LINKEVAP Electric Callus Remover

LINKEVAP Electric Callus Remover User Manual

Model: Electric Callus Remover

INTRODUCTION

Thank you for choosing the LINKEVAP Electric Callus Remover. This professional pedicure kit is designed to effectively and safely remove dry, dead, cracked, and hard skin from your feet, providing a smooth and comfortable experience at home. Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety.

PRODUCT OVERVIEW

Package Contents

- 1 x LINKEVAP Electric Callus Remover Handle
- 1 x Fine Roller Head (for polishing and daily maintenance)
- 1 x Coarse Roller Head (for smoothing stubborn calluses and dead skin)
- 1 x USB Charging Cord (wall adapter not included)

Key Features

- Automatic pressure adaptive technology for safe skin removal.
- 360° rotating roller heads with high speed for efficient results.
- Rechargeable battery: 1-hour charge provides approximately 100 minutes of running time.
- Water-resistant design for easy cleaning.
- 3 adjustable speeds and Forward (F) & Reverse (R) rotation for customized care.
- Ergonomic wand design for comfortable handling.



Image: The LINKEVAP Electric Callus Remover, its packaging, and the two included roller heads (fine and coarse).

Electric Callus Remover for Feet



Image: Visual representation of the device's main features including its rechargeable nature, multiple speeds, rotation options, portability, battery capacity, charging time, and usage duration.

IMPORTANT SAFETY INFORMATION

- This device is intended for adult use only.
- Do not use on broken, irritated, or infected skin. Consult a medical professional if you have diabetes or poor circulation before using this device.
- Keep out of reach of children.
- Ensure the device is fully charged before use to maintain optimal performance.
- Do not immerse the main unit in water; it is water-resistant for cleaning the roller head, but not fully waterproof.
- Stop use immediately if you experience pain or discomfort.

SETUP

Charging the Device

1. Connect the USB charging cord to the Type-C USB port at the bottom of the device.

2. Plug the other end of the USB cord into a compatible wall adapter (not included) or a USB power source.
3. The power indicator light will show charging status. A full charge takes approximately 1 hour and provides about 100 minutes of continuous use.

Installing/Removing Roller Heads

How to remove and install the roller head



Remove:

Press the lock button to take down the roller head



Install:

Put the bottom of the roller head into the hole, then push it into the device by pressing the telescopic point



For Tough&Hard Callus
Extra Coarse Roller



For Daily Maintenance
Light Coarse Roller

Image: Step-by-step guide on how to correctly attach and detach the roller heads from the device.

1. **To Remove:** Press the lock button located on the side of the device and gently pull the roller head away.
2. **To Install:** Insert the bottom of the desired roller head (fine or coarse) into the designated hole. Push it into the device by pressing the telescopic point until it clicks securely into place.
3. Choose the appropriate roller head:
 - **Coarse Roller:** For tough and hard calluses.
 - **Fine Roller:** For daily maintenance and polishing.

OPERATION



Image: An annotated diagram highlighting the various parts and controls of the callus remover, including speed settings and rotation options.

1. **Prepare Your Feet:** Soak your feet in warm water for approximately 5-10 minutes to soften the dead skin. Dry your feet thoroughly before use.
2. **Power On and Select Settings:**
 - Slide the power switch to turn on the device.
 - Press the speed button to cycle through the 3 available speeds: Soft (1600rpm), Medium (1800rpm), Strong (2000rpm).
 - Select the desired rotation direction (clockwise or anti-clockwise) using the rotation switch.
3. **Begin Treatment:** Gently glide the rotating roller head over the areas with calluses or hard skin. Apply light to moderate pressure. The device features automatic pressure adaptive technology to protect healthy skin. Do not press too hard or stay in one area for too long.
4. **Foot Care Time:** Use for a few minutes on each affected area until the desired smoothness is achieved.
5. **Power Off:** Slide the power switch to the OFF position when finished.
6. **Moisturize:** After use, apply a moisturizing cream to your feet to keep them soft and hydrated.



How To Use It

1. Soak feet for 3-5 minutes
2. Select the rotation direction and choose Speed
3. Foot Care Time
4. Remove and clean the roller head

Image: A visual sequence demonstrating the recommended steps for using the callus remover, from preparation to post-treatment care.

MAINTENANCE

Cleaning the Roller Head

1. Ensure the device is turned off and disconnected from any power source.
2. Remove the roller head as described in the "Installing/Removing Roller Heads" section.
3. Rinse the roller head under running water to remove any skin debris.
4. Allow the roller head to air dry completely before reattaching or storing.
5. Wipe the main body of the device with a damp cloth. Do not rinse the main body under water.

Storage

Store the device in a cool, dry place, away from direct sunlight and moisture. Keep the dust cover on the roller head when not in use to protect it.

SPECIFICATIONS

Brand	LINKEVAP
Model	Electric Callus Remover
Color	Cold White
Product Dimensions	6.5 x 2 x 2.7 inches
Item Weight	0.65 Ounces
Battery Type	2 Lithium Polymer batteries (included)
Charging Time	Approx. 1 hour
Usage Time	Approx. 100 minutes
Speeds	3 (Soft 1600rpm, Medium 1800rpm, Strong 2000rpm)
Rotation	Forward & Reverse

WARRANTY AND CUSTOMER SUPPORT

For warranty information or customer support, please refer to the product packaging or contact LINKEVAP directly through their official channels. Keep your purchase receipt for any warranty claims.