



Manuals.plus /

› URAQT /

› URAQT Handheld Cordless Vacuum Cleaner Instruction Manual

URAQT Blanc

URAQT Handheld Cordless Vacuum Cleaner Instruction Manual

Model: Blanc (B0BPNKFTP5)

INTRODUCTION

Thank you for purchasing the URAQT Handheld Cordless Vacuum Cleaner. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your new device. Please read this manual thoroughly before use and retain it for future reference.



Image: The URAQT Handheld Cordless Vacuum Cleaner in white, shown with its various attachments and two HEPA filters, demonstrating its compact design and included accessories.

SAFETY INFORMATION

- Read all instructions before using the appliance.
- Do not use the vacuum cleaner outdoors or on wet surfaces. This appliance is designed for indoor use.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filter in place.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Exercise extra care when cleaning on stairs.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

- Turn off all controls before unplugging.
- Use only the charging cable provided by the manufacturer.
- Do not handle the charger or appliance with wet hands.
- Do not immerse the main body of the vacuum cleaner in water. Only the dust cup and filter are washable.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Vacuum cleaner host
- Portable bag
- Corrugated hose
- Crevice suction nozzle
- Hose connector (small)
- Small brush
- TYPE-C charging cable
- Hose connector (large)
- Brush suction nozzle
- Instruction Manual
- HEPA filter element (x2)



Image: A visual representation of all items included in the package, such as the vacuum unit, various nozzles, charging cable, and carrying bag.

PRODUCT OVERVIEW

Familiarize yourself with the components of your URAQT Handheld Cordless Vacuum Cleaner:

STRONG MOTOR

For efficient cleaning



Easy to Charge



Laptop



Powerbank



Car Charger



Quick Charger

Image: An exploded view diagram labeling key parts of the vacuum cleaner, including the On/Off Button, Indicator Light, LED Light, Air Vent, Release Button, Washable HEPA Filter, and Dust Cup.

- **On/Off Button:** Powers the vacuum on and off, and switches between suction modes.
- **Indicator Light:** Shows charging status and operational mode.
- **LED Light:** Illuminates dark areas for improved visibility during cleaning.
- **Air Vent:** Exhausts air during operation.
- **Release Button:** Detaches the dust cup for emptying and cleaning.
- **Washable HEPA Filter:** Traps fine dust particles and can be cleaned for reuse.
- **Dust Cup:** Collects debris and dust.

SETUP

Initial Charging

Before first use, fully charge the vacuum cleaner. The device is equipped with a Type-C charging port.

1. Connect the provided Type-C charging cable to the charging port on the vacuum cleaner.
2. Connect the other end of the USB cable to a suitable power source (e.g., laptop, power bank, car charger, or quick charger).
3. The indicator light will show charging status. A full charge typically takes 3-4 hours.
4. Once fully charged, disconnect the charging cable.

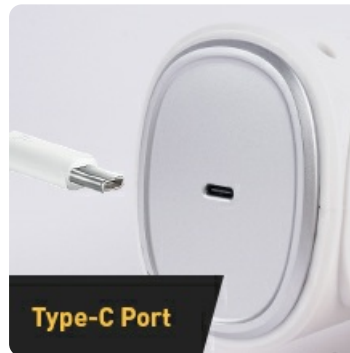


Image: A close-up view of the Type-C charging port, illustrating where to connect the charging cable.

OPERATING INSTRUCTIONS

Power On/Off and Suction Modes

The vacuum cleaner features two suction modes for different cleaning needs.

1. Press the On/Off button once to turn on the vacuum cleaner in Standard Mode (7kPa suction).
2. Press the On/Off button a second time to switch to Max Mode (10kPa strong suction).
3. Press the On/Off button a third time to turn off the vacuum cleaner.

10000PA STRONG SUCTION

2 Speed Adjustment Mode

Long Battery Life & Fast Charging

- ✓ 2000mAh X 3
- ✓ 3 Hrs Quick Charge
- ✓ 30 Mins Running



Max **10KPA**

Level 2



Standard **7KPA**

Level 1



Image: The vacuum cleaner in action, illustrating its two suction levels: Level 1 (Standard 7kPa) and Level 2 (Max 10kPa), suitable for various debris like soot, food residue, pet hair, and dust.

Using the LED Light

The built-in LED light helps illuminate dark corners and hard-to-see areas.

- The LED light automatically activates when the vacuum cleaner is turned on.
- Direct the light towards the area you are cleaning for enhanced visibility.



LED LIGHT

Cleaning the Dark Corner Easily
Let the dust have nowhere to hide

Image: The handheld vacuum cleaner being used in a car, with its LED light brightly illuminating the footwell to reveal hidden dust and debris.

Attaching Accessories

The vacuum comes with several professional accessories for versatile cleaning:

- **Brush Nozzle:** Ideal for cleaning carpets, sofas, pet hair, and keyboards. Simply attach it to the suction opening.
- **Crevice Nozzle:** Designed for reaching tight crevices, corners, and narrow gaps in furniture or car interiors.
- **Flexible Hose with Connectors:** Use the corrugated hose with either the brush nozzle or crevice nozzle for extended reach in hard-to-access areas. Connect the appropriate hose connector to the vacuum and then attach the hose.

WET & DRY VACUUM CLEANER

All-round cleaning, no dead angles



Brush Nozzle
for carpet, sofa, hair,
keyboard



Crevice Nozzle
for crevices and corners



Long Hose Nozzle
for the places that hard
to reach

Image: The vacuum cleaner in various cleaning scenarios, highlighting the use of the brush nozzle for pet food, the crevice nozzle for sofa gaps, and the long hose nozzle for reaching under furniture.

Package Contents



Vacuum cleaner host



Portable bag



Corrugated hose



Crevice suction nozzle



Hose connector (small)



Small brush



TYPE-C charging cable



Hose connector (large)



Brush suction nozzle



Instruction Manual



HEPA filter element X 2
(The product contains 1pc, and the package gives 1 pcs)

Image: A collage showing the vacuum cleaner being used for multipurpose cleaning, including dusting bookshelves, cleaning car seats, vacuuming a laptop keyboard, and picking up crumbs from a kitchen counter.

MAINTENANCE

Emptying and Cleaning the Dust Cup and Filter

Regular cleaning of the dust cup and filter is essential for maintaining optimal suction performance.

1. **Release the Dust Cup:** Press the release button to detach the dust cup from the main body of the vacuum cleaner.
2. **Empty the Dust Cup:** Hold the dust cup over a trash bin and empty its contents.
3. **Rotate to Take Apart Filters:** Twist and pull to separate the HEPA filter from the dust cup assembly.
4. **Wash Filters and Dust Cup:** Rinse the HEPA filter and dust cup under running water. Use the small brush provided to remove stubborn debris.
5. **Air Dry:** Allow all components to air dry completely before reassembling. Ensure they are thoroughly dry to prevent mold or damage.

6. **Reassemble:** Once dry, reassemble the filter into the dust cup and attach the dust cup back to the vacuum cleaner until it clicks into place.

Important: Do not immerse the main body of the vacuum cleaner in water. Only the dust cup and filter are washable.



Image: A six-step visual guide demonstrating how to release, empty, disassemble, wash, air dry, and reassemble the dust cup and HEPA filter of the vacuum cleaner.



Image: A close-up of two washable HEPA filters, emphasizing their reusability and the importance of cleaning them.

TROUBLESHOOTING

If you encounter any issues with your vacuum cleaner, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is low or depleted.	Charge the vacuum cleaner fully.
Weak suction.	Dust cup is full. Filter is clogged. Attachment is not properly connected.	Empty the dust cup. Clean or replace the HEPA filter. Ensure attachments are securely fitted.
Vacuum turns off unexpectedly.	Battery is low. Overheating due to prolonged use or clogged filter.	Recharge the battery. Turn off the vacuum, allow it to cool down, then clean the filter and dust cup.
Noise level is higher than usual.	Dust cup or filter is not properly installed. Obstruction in the nozzle or hose.	Check and re-install the dust cup and filter correctly. Remove any obstructions from the nozzle or hose.

SPECIFICATIONS

Feature	Detail
Brand	URAQT
Model Number	Blanc
Special Feature	Bagless, Wet/Dry Capability, LED Light
Filter Type	HEPA Filter (Washable)
Suction Power	10,000Pa (Max Mode) / 7,000Pa (Standard Mode)
Number of Speeds	2
Battery Type	3x2000mAh Lithium-ion
Charging Time	3-4 hours
Runtime	Approx. 30 minutes
Noise Level	<85 dB
Product Dimensions	13.98"L x 5.51"W x 5.51"H
Item Weight	2.44 pounds
Color	White

WARRANTY AND SUPPORT

This URAQT product is covered by a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included in your product packaging or contact URAQT customer support.

If you have any questions, require technical assistance, or need to report an issue, please contact our customer support team. Contact information can typically be found on the product packaging or the official URAQT website.

