



Manuals.plus /

› ARNSSIEN /

› ARNSSIEN Kids Digital Camera X101 Instruction Manual

ARNSSIEN X101

ARNSSIEN Kids Digital Camera X101 Instruction Manual

Model: X101C | Brand: ARNSSIEN

INTRODUCTION

Welcome to the world of creative photography for kids with your new ARNSSIEN Kids Digital Camera X101. This manual provides essential information for setting up, operating, and maintaining your camera to ensure a fun and safe experience. Please read through these instructions carefully before first use.

WHAT'S IN THE BOX

Your ARNSSIEN Kids Digital Camera X101 package includes the following items:

- ARNSSIEN Kids Digital Camera X101 (with 180° Flip Lens and 2.4-inch IPS Screen)
- Silicone Protective Case (Dinosaur design)
- Lanyard
- 32GB TF Card (pre-inserted)
- Card Reader
- USB Charging Cable
- Retrieve Card Pin
- Instruction Manual

PACKAGE LIST



32GB TF
Card



USB
Cable



Manual



Neck
Sling



Card
Reader

Image: The ARNSSIEN Kids Digital Camera X101 package contents, including the camera, silicone case, lanyard, 32GB TF card, card reader, and USB cable.

SETUP

1. Inserting/Removing TF Card

The 32GB TF card is typically pre-inserted. If you need to remove or re-insert it:

1. Locate the TF card slot on the side of the camera.
2. Gently push the TF card until it clicks to release it. Pull it out.
3. To insert, align the card correctly and push it into the slot until it clicks into place.

SMALL PALMS CAMERA WITH 2.4IN HD IPS SCREEN WHICH CAN AVOID HARMING YOUR CHILD'S VISION



Image: A hand inserting a small TF card into the side slot of the blue ARNSSIEN Kids Digital Camera.

2. Charging the Camera

The camera is equipped with a 1000mAh Lithium Polymer rechargeable battery.

1. Connect the provided USB charging cable to the camera's charging port.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Charging typically takes 1-2 hours.
4. Once fully charged, the indicator light will change or turn off.



Image: A hand plugging a USB cable into the charging port of the ARNSSIEN Kids Digital Camera.

3. Attaching the Lanyard

The adjustable lanyard helps prevent accidental drops and allows for easy carrying.

1. Thread the thin loop of the lanyard through the designated loop hole on the camera's silicone case.
2. Pass the larger part of the lanyard through the thin loop and pull tight to secure.

4. Setting Date and Time

It is recommended to set the correct date and time for accurate timestamps on your photos and videos.

1. Power on the camera.
2. Navigate to the 'Settings' menu using the directional buttons.
3. Select 'Date Time' and adjust to your local time.

OPERATING THE CAMERA

1. Power On/Off

Press and hold the power button (usually located on the top or side) for a few seconds to turn the camera on or off.

2. Taking Photos (180° Flip Lens)

The unique 180° flip lens allows for easy switching between front-facing (selfie) and rear-facing photography.

1. To take a regular photo, ensure the lens is facing forward.
2. To take a selfie, simply flip the lens upwards 180 degrees. The screen will automatically adjust to show the front view.
3. Press the shutter button (usually the large button on top) to capture the image.

25 PHOTO FUNNY FRAMS



6 FILTERS



Image: A child holding the ARNSSIEN Kids Digital Camera, with the 180° flip lens rotated upwards for a selfie.

3. Recording Videos

The camera supports 1080P HD video recording.

1. From the main menu, select the 'Video' icon.
2. Press the shutter button to start recording. A red indicator will usually appear on the screen.
3. Press the shutter button again to stop recording.

Your browser does not support the video tag.

Video: An official ARNSSIEN video demonstrating the 180° flip lens for selfies and video recording with the kids' camera.

4. Playback/Viewing Media

Review your captured photos and videos directly on the 2.4-inch IPS screen.

1. From the main menu, select the 'Playback' icon (often a play symbol).
2. Use the directional buttons to scroll through your photos and videos.
3. Press the shutter button to view a selected item or play a video.

5. Applying Filters and Frames

Enhance your photos with various fun filters and frames.

1. While in photo mode, use the directional buttons to cycle through available filters and frames.
2. Select your desired filter/frame before pressing the shutter button.



Image: A collage showing various fun photo frames and color filters that can be applied using the ARNSSIEN Kids Digital Camera.

6. Playing Games

The camera includes 10 educational games for entertainment.

1. From the main menu, select the 'Games' icon (often a gamepad symbol).
2. Use the directional buttons to select a game and press the shutter button to start.

7. Music Playback

Enjoy music and stories by transferring MP3 files to the camera.

1. Connect the camera to a computer using the USB cable.
2. Drag and drop MP3 files into the 'Sound' folder on the camera's TF card.
3. From the main menu, select the 'Music' icon (often a music note symbol) to play your files.

Your browser does not support the video tag.

Video: An official ARNSSIEN video showcasing the camera's features, including music playback and various designs.

8. Transferring Files

You can transfer photos and videos to a computer using two methods:

1. **Direct USB Connection:** Connect the camera to your computer using the USB cable. The camera will appear as a removable disk, allowing you to copy files.
2. **Using the Card Reader:** Remove the TF card from the camera and insert it into the provided card reader. Plug the card reader into your computer's USB port to access the files.



Image: The ARNSSIEN Kids Digital Camera connected to a laptop via USB, illustrating the process of downloading and printing photos.

MAINTENANCE

1. Cleaning

- Use a soft, dry cloth to clean the camera body and screen.
- For stubborn smudges, slightly dampen the cloth with water. Avoid harsh chemicals.
- Keep the lens clean to ensure clear photos.

2. Battery Care

- Charge the camera fully before first use.
- Avoid completely draining the battery frequently to prolong its lifespan.
- If storing the camera for an extended period, charge it to about 50% and store in a cool, dry place.

3. Storage

- Store the camera in its silicone protective case when not in use to prevent scratches and damage.
- Keep the camera away from extreme temperatures, moisture, and direct sunlight.

TROUBLESHOOTING

Camera Not Turning On

- Ensure the battery is charged. Connect to a power source and try again.
- Press and hold the power button for a longer duration (5-10 seconds).

Unable to Take Photos/Record Videos

- Check if the TF card is correctly inserted.
- Ensure there is sufficient space on the TF card. Delete old files if necessary.
- Check battery level.

Poor Image/Video Quality

- Clean the camera lens gently with a soft cloth.
- Ensure adequate lighting when taking photos or videos.

For any other issues, please refer to the support information in the Warranty & Support section.

SPECIFICATIONS

Feature	Detail
Model Number	X101C
Product Dimensions	1.57 x 3.54 x 2.17 inches
Item Weight	7 ounces
Battery	1 Lithium Polymer (1000mAh)
Screen Size	2.4-inch IPS Eye Protection Screen
Video Resolution	1080P HD
Photo Sensor Technology	CMOS
Image Stabilization	Digital
Supported File Format	AVI
Optical Zoom	1x
Maximum Aperture	1.8 Millimeters

WARRANTY & SUPPORT

ARNSSIEN is committed to providing excellent after-sales service. If you encounter any problems with your ARNSSIEN Kids Digital Camera, please contact us directly via email:

Email: bbdzsw@outlook.com

A satisfying solution will be quickly offered to you.