

[Manuals+](#)

[Q & A](#) | [Deep Search](#) | [Upload](#)

Focket Focket0p6q5rdnhx

Focket 3-in-1 Smart Vacuum Robot Cleaner User Manual

Model: Focket0p6q5rdnhx

Brand: Focket

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Focket 3-in-1 Smart Vacuum Robot Cleaner. This versatile device is designed to simplify your cleaning routine by combining sweeping, vacuuming, and mopping functionalities into one compact unit. Please read this manual thoroughly before using the product to ensure safe and efficient operation.

PRODUCT OVERVIEW

The Focket Smart Vacuum Robot Cleaner is engineered for comprehensive floor cleaning across various surfaces. Its intelligent design allows for efficient navigation and thorough cleaning.



Figure 1: Top view of the Focket 3-in-1 Smart Vacuum Robot Cleaner.

This image displays the sleek, circular design of the Focket Smart Vacuum Robot Cleaner from a top-down perspective, highlighting its compact form factor and the central 'AUTO' button for operation.

Key Features:

- **3-in-1 Functionality:** Supports sweeping, vacuuming, and mopping for a complete cleaning solution.
- **Efficient Cleaning:** One-button start for automatic cleaning, equipped with brushes and a wiping rag for thorough results.
- **Intelligent Navigation:** Features intelligent turning and smooth edges to protect furniture, effectively avoiding obstacles and preventing falls.
- **Compact and Low Noise:** Round design suitable for whole-house cleaning with minimal operational sound.
- **Long Battery Life:** Equipped with a 1200mAh polymer lithium battery, supporting USB charging for extended use.

HOME SWEEPER:

3 in 1 household smart sweeper, supporting sweeping, vacuuming and mopping, easy to operate, simple and practical.

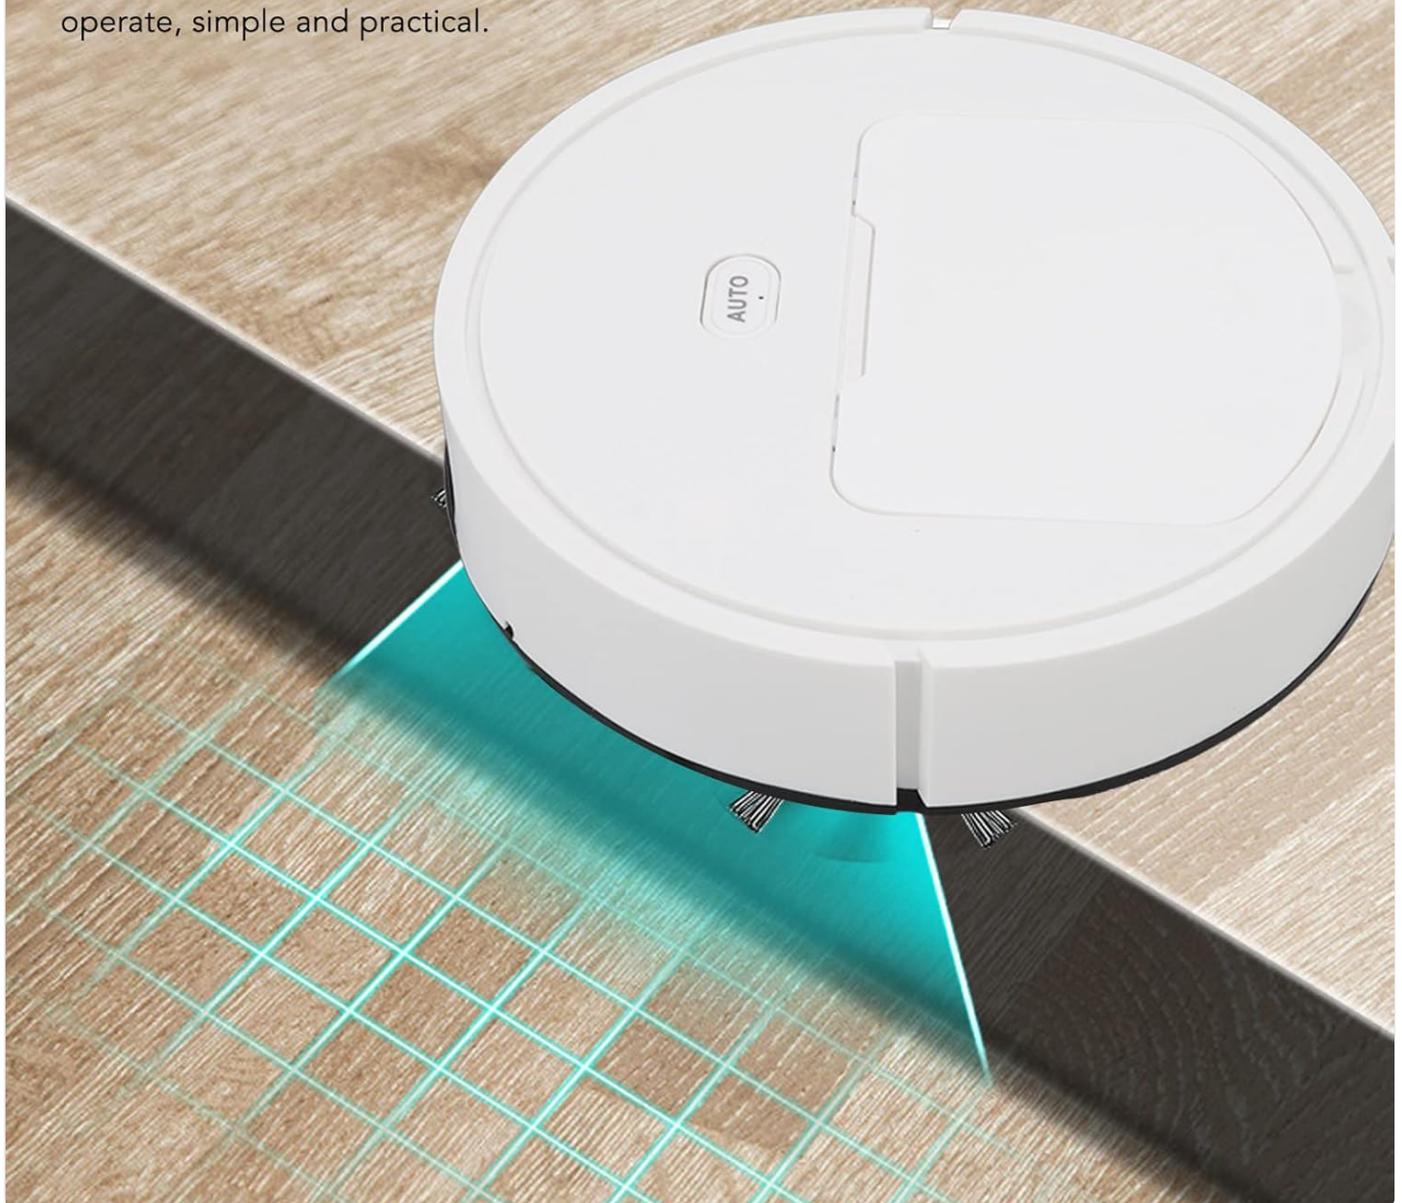


Figure 2: The robot cleaner performing its sweeping function.

This image illustrates the robot cleaner in action, highlighting its sweeping capability on a hard floor surface. The text overlay indicates its 3-in-1 household smart sweeper functionality.

INTEGRATED VACUUMING SWEEPING MOPPING
EFFICIENT CLEANING



Figure 3: Integrated vacuuming, sweeping, and mopping for efficient cleaning.

This image shows the robot cleaner positioned under furniture, emphasizing its ability to perform integrated vacuuming, sweeping, and mopping for comprehensive and efficient cleaning.



Figure 4: Compatibility with different floor types.

This image demonstrates the robot cleaner's adaptability to various floor types, including marble, blanket (carpet), and wood board, showcasing its versatility for different home environments.

SETUP

1. Unboxing and Components

Carefully remove all components from the packaging. Ensure all items listed below are present.



Figure 5: Robot cleaner and accessories.

This image shows the main robot unit along with its accessories: a cleaning cloth, two side brushes, a USB charging cable, and a small cleaning brush.

- Robot Vacuum Cleaner Unit
- Side Brushes (2 pairs)
- USB Charging Cable
- Cleaning Cloth
- Small Cleaning Brush

2. Charging the Robot

Before first use, fully charge the robot. Connect the USB charging cable to the robot's charging port and plug the other end into a compatible USB power adapter (not included) or a computer USB port. The charging indicator light will provide

status.

- Charging Voltage: 3.7 Volts
- Battery Life: Approximately 75 minutes per charge

3. Attaching Side Brushes and Mopping Cloth

Attach the side brushes to their designated posts on the underside of the robot. Ensure they click into place. If using the mopping function, attach the cleaning cloth to the designated area on the bottom of the robot.



Figure 6: Underside of the robot cleaner.

This image shows the bottom of the robot, detailing the placement of the side brushes, the central wheel, and the suction inlet/mopping cloth attachment area.

OPERATING INSTRUCTIONS

1. Starting and Stopping

To start the robot, press the "AUTO" button located on the top surface of the unit (refer to Figure 1). The robot will begin

its automatic cleaning cycle. To stop the robot at any time, press the "AUTO" button again.

2. Cleaning Modes and Navigation

The robot operates in an automatic cleaning mode, intelligently navigating your home. It uses sensors to detect obstacles and prevent falls, ensuring comprehensive coverage while protecting your furniture.



Figure 7: Intelligent path planning.

This diagram illustrates the robot's intelligent cleaning path planning, showing how it covers areas efficiently to reduce repetition and improve overall house coverage.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your robot cleaner.

1. Emptying the Dustbin

After each cleaning cycle, or when the dustbin is full, open the dustbin compartment and empty its contents into a trash

receptacle. Close the dustbin securely before next use.

2. Cleaning Brushes and Filter

Periodically inspect and clean the side brushes to remove any tangled hair or debris. Use the provided small cleaning brush for this purpose. The internal filter should also be cleaned regularly to maintain suction efficiency. Tap out dust or gently brush clean. Do not wash the filter with water unless specified.



Figure 8: Close-up of the filter compartment.

This close-up image shows the filter compartment of the robot cleaner, indicating where the filter is located for cleaning or replacement.

3. Mopping Cloth Care

If you use the mopping function, remove the cleaning cloth after each use and wash it with water. Allow it to air dry completely before reattaching or storing.

TROUBLESHOOTING

If you encounter issues with your Focket Smart Vacuum Robot Cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Robot does not start	Low battery; Power button not pressed correctly.	Ensure robot is fully charged. Press the "AUTO" button firmly.
Reduced suction power	Full dustbin; Clogged filter; Blocked suction inlet.	Empty dustbin. Clean or replace filter. Clear any obstructions from the suction inlet.
Robot gets stuck frequently	Obstacles in cleaning path; Uneven surfaces.	Clear small objects, cables, and loose rugs from the cleaning area.
Side brushes not rotating	Hair or debris tangled in brushes; Brushes not installed correctly.	Remove and clean brushes. Reinstall them securely.

SPECIFICATIONS

Feature	Detail
Brand	Focket
Model Name	Focket0p6q5rdnhx
Special Feature	Automatic Dust Collection
Color	Default (White)
Filter Type	Cloth
Battery Life	75 minutes
Voltage	3.7 Volts
Power Source	Battery Powered
Form Factor	Robotic
Item Weight	2.05 pounds
Package Dimensions	15.43 x 12.2 x 3.62 inches
Country of Origin	China
Date First Available	December 11, 2022

SAFETY INFORMATION

Please observe the following safety precautions:



1 Warning

Please dispose of the packaging materials properly after use to avoid choking hazard.

2 Warnung

Bitte entsorgen Sie das Verpackungsmaterial nach Gebrauch ordnungsgemäß, um Erstickungsgefahr zu vermeiden.

3 Avertissement

Veuillez jeter les matériaux d'emballage correctement après utilisation pour éviter tout risque d'étouffement.

4 Advertencia

Deseche los materiales de embalaje adecuadamente después de su uso para evitar peligro de asfixia.

5 Ostrzeżenie

Po użyciu należy odpowiednio zutylizować materiały opakowaniowe, aby uniknąć ryzyka zadławienia.

6 Waarschuwing

Gooi de verpakkingsmaterialen na gebruik op de juiste manier weg om verstikkingsgevaar te voorkomen.

7 Varning

Kassera förpackningsmaterialet på rätt sätt efter användning för att undvika kvävningsrisk.

8 Attenzione

Smaltire correttamente i materiali di imballaggio dopo l'uso per evitare rischi di soffocamento.

9 Uyarı

Boğulma tehlikesini önlemek için lütfen kullanımdan sonra ambalaj malzemelerini uygun şekilde atın.

Figure 9: Packaging disposal warning.

This image displays a multi-language warning, emphasizing the importance of properly disposing of packaging materials after use to avoid choking hazards.

- Dispose of packaging materials properly after use to avoid choking hazards, especially for children.
- Do not operate the robot in wet environments or near liquids.
- Keep fingers, hair, and loose clothing away from moving parts.
- Do not allow children to operate the robot unsupervised.
- Use only the provided charging cable and recommended power source.

WARRANTY AND SUPPORT

The manufacturer provides a 1-year warranty for this product. For any product-related inquiries, technical support, or warranty claims, please contact the seller or manufacturer directly. They are committed to providing professional and detailed replies within 24 hours.

For further assistance, please refer to the contact information provided at the point of purchase or on the product

packaging.

© 2024 Focket. All rights reserved.