

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Lefant](#) /

> [Lefant M1 Robot Vacuum and Mop User Manual](#)

Lefant M1

Lefant M1 Robot Vacuum and Mop User Manual

Model: M1

INTRODUCTION

Thank you for choosing the Lefant M1 Robot Vacuum and Mop. This intelligent cleaning device combines powerful vacuuming with efficient mopping, utilizing advanced Lidar navigation and smart features to keep your home spotless. Please read this manual thoroughly before use to ensure proper operation and maintenance.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not allow children to play with the robot. Supervise children and pets when the robot is operating.
- Use only the charging adapter provided by the manufacturer.
- Ensure the power voltage is compatible with the robot's requirements.
- Do not operate the robot in wet environments or near water.
- Remove any loose cables, small objects, or fragile items from the cleaning path to prevent entanglement or damage.
- Do not use the robot to pick up large debris, liquids, or burning objects.
- Regularly clean the brushes and filters to maintain optimal performance.
- Turn off the robot and unplug the charging base before performing any maintenance or cleaning.

PACKAGE CONTENTS

Ensure all items are present in the package:

- Lefant M1 Robot Vacuum and Mop
- Charging Adapter
- Charging Port (Docking Station)
- Filter (Pre-installed and/or spare)
- Side Brushes (Set of 2, plus spares)
- Mop Pad Plate

- Mop Pads (Reusable and/or disposable)
- Cleaning Tool
- User Manual



Image: Lefant M1 Robot Vacuum and Mop with its charging dock, side brushes, and cleaning tool.

SETUP

1. Unpacking and Initial Preparation

1. Remove the robot and all accessories from the packaging.
2. Remove any protective films or stickers from the robot and charging base.
3. Install the side brushes by pressing them onto the posts on the bottom of the robot until they click into place.

4000Pa Powerful Suction With 3 Adjustable Modes

4000Pa



Floating Main Brush



Image: Underside of the Lefant M1 robot vacuum, illustrating the attachment points for the side brushes.

2. Placing the Charging Base

1. Place the charging base against a wall in an open, uncluttered area.
2. Ensure there is at least 0.5 meters (1.6 feet) of clear space on either side of the charging base and 1.5 meters (4.9 feet) in front.
3. Connect the power adapter to the charging base and plug it into a wall outlet.

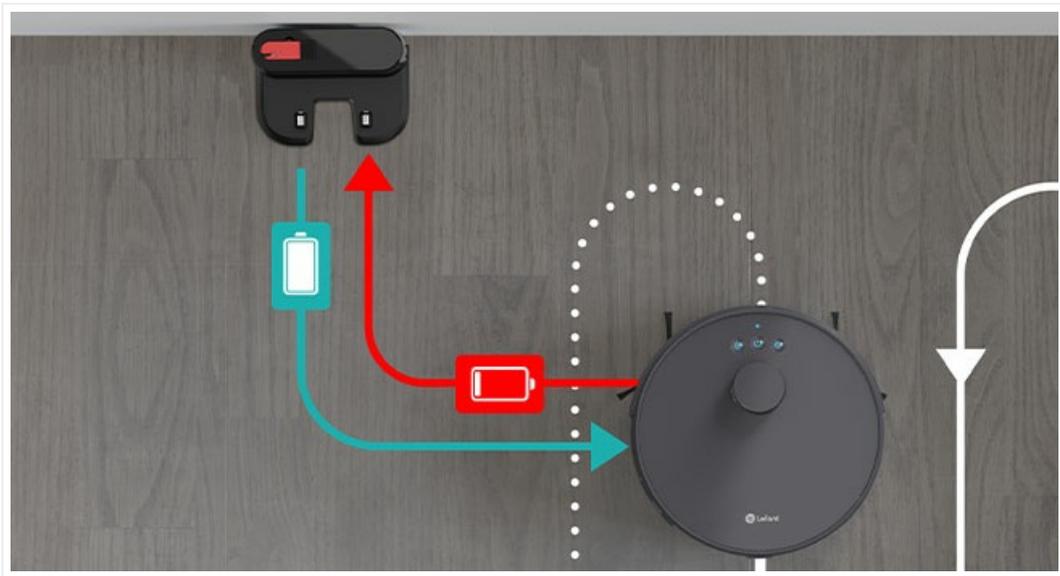


Image: The Lefant M1 robot vacuum docked for charging, showing its charging station against a wall.

3. Initial Charge

1. Place the robot on the charging base, ensuring the charging contacts align.
2. The robot will begin charging automatically. Allow it to fully charge before its first use (approximately 4-5 hours).
3. The indicator lights on the robot will show its charging status.

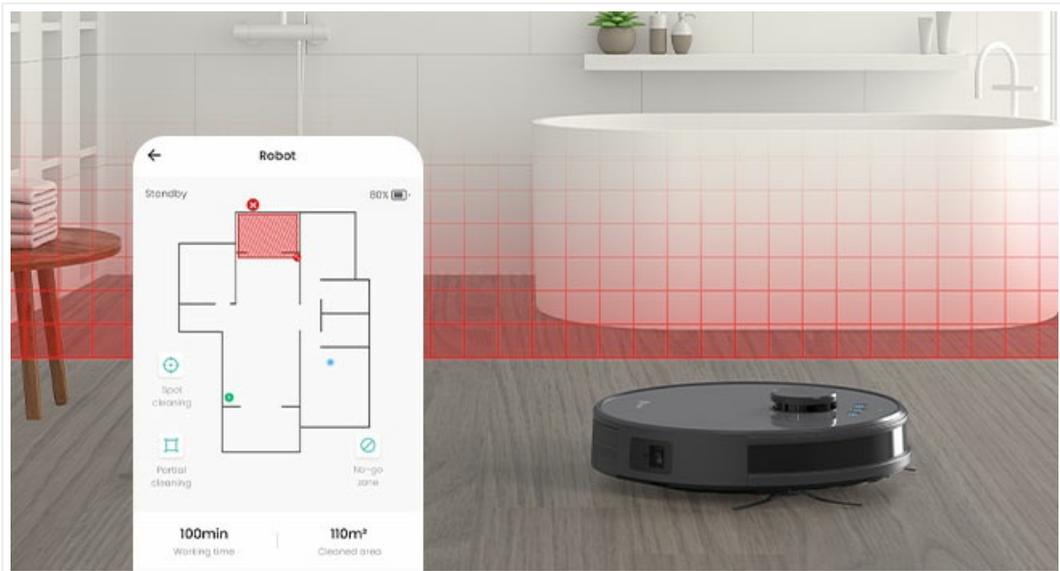


Image: A diagram illustrating the robot vacuum's path to its charging dock and the charging process.

4. App and Voice Control Setup

1. Download the "Lefant" app from the App Store (iOS) or Google Play Store (Android).
2. Open the app and follow the on-screen instructions to register an account and add your Lefant M1 robot.
3. Ensure your Wi-Fi network is 2.4GHz, as the robot only supports this frequency.
4. For voice control, link your Lefant account with Amazon Alexa or Google Home through their respective apps.

APP or Voice Control




2.4GHz WiFi



Amazon Alexa



Google Assistant

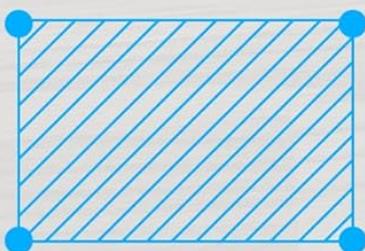

No-Go-Zones



Zone Cleaning




Spot Cleaning



Suction Control



Plan Cleaning

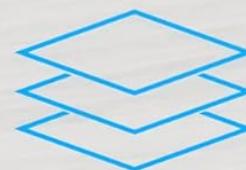

Multilayer Map

Image: The Lefant M1 robot vacuum next to a smartphone displaying the control app, with icons for 2.4GHz Wi-Fi, Amazon Alexa, and Google Assistant.

OPERATING INSTRUCTIONS

1. Starting a Cleaning Cycle

- **Manual Start:** Press the power button on the robot once to start a cleaning cycle.

- **App Control:** Open the Lefant app, select your M1 robot, and tap "Start Cleaning."
- **Voice Command:** Use a compatible voice assistant (Alexa/Google Home) with commands like "Alexa, tell Lefant to start cleaning."

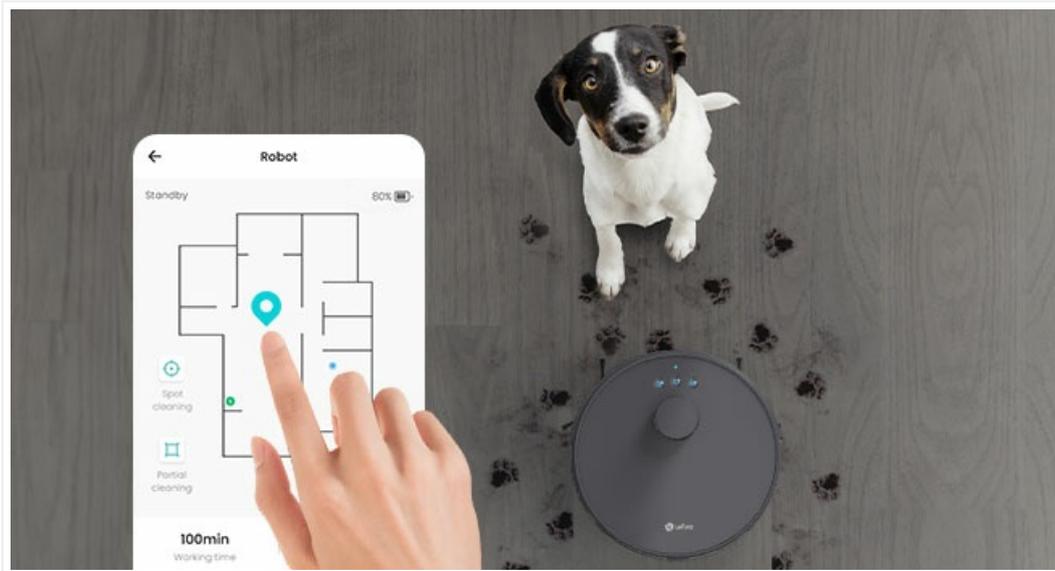


Image: A person pressing the start button on the Lefant M1 robot vacuum to initiate a cleaning cycle.

2. Lidar Navigation and Real-time Mapping

The Lefant M1 uses Lidar navigation to scan and create a real-time map of your home. This allows for efficient cleaning paths and avoids repeating areas. You can view the robot's cleaning route and map within the Lefant app.

Lidar Navigation + Freemove 3.0



Image: The Lefant M1 robot vacuum navigating a room, with visual cues indicating its Lidar scanning and obstacle detection capabilities.

3. Cleaning Modes and Features

- **Auto Cleaning:** The robot intelligently cleans your entire home.
- **Spot Cleaning:** Direct the robot to clean a specific area with concentrated effort.
- **Zoned Cleaning:** Define specific zones on the app map for the robot to clean.
- **No-Go Zones & Virtual Walls:** Set virtual boundaries in the app to prevent the robot from entering certain areas

(e.g., pet areas, fragile zones).

- **Adjustable Suction:** Choose from multiple suction levels (up to 4000Pa) via the app to suit different cleaning needs.
- **Adjustable Water Output:** For mopping, select from 3 water output levels to match floor types and cleaning requirements.

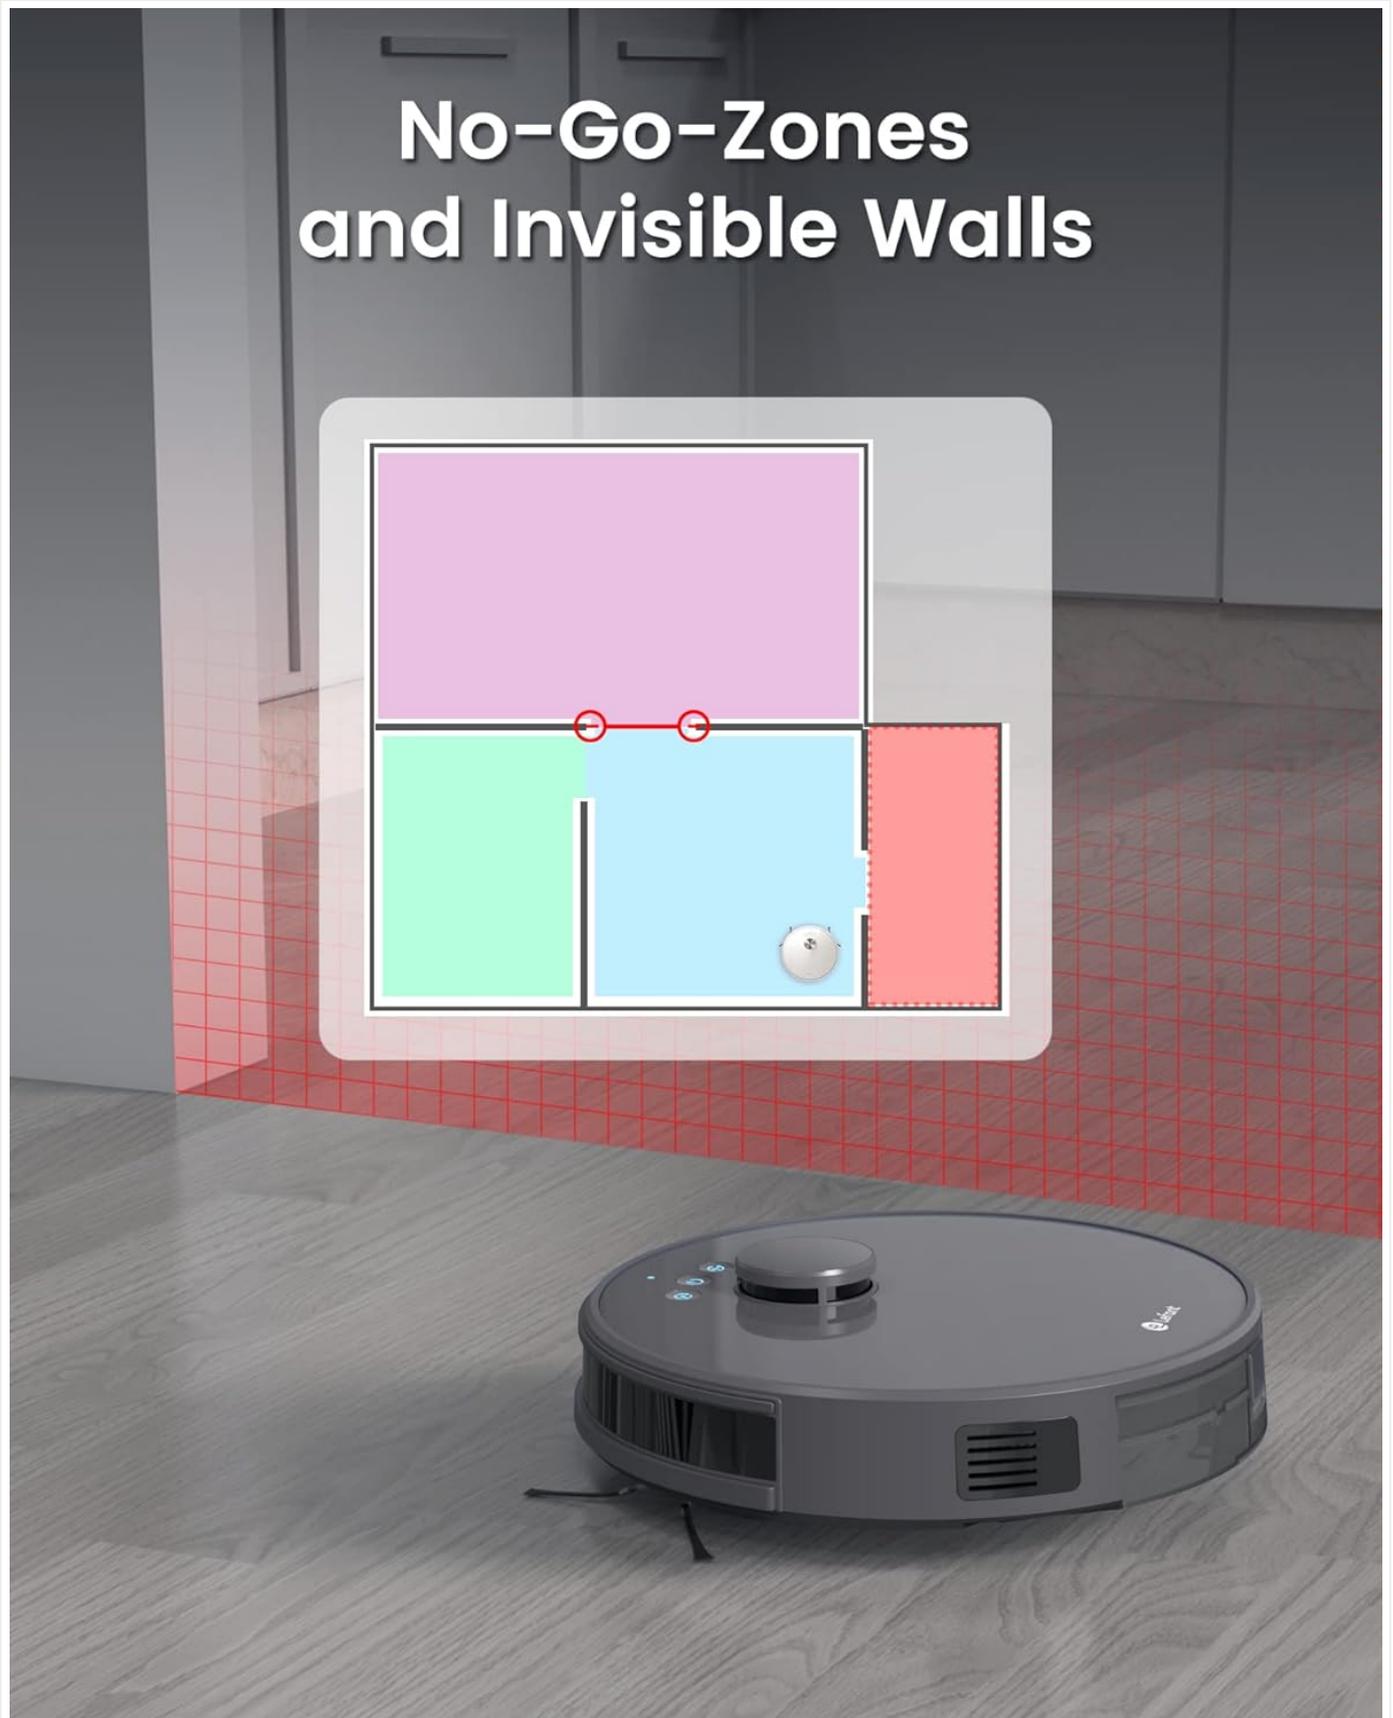


Image: A diagram showing the Lefant M1 robot vacuum avoiding a red-highlighted "No-Go Zone" on a floor plan, demonstrating the virtual wall feature.

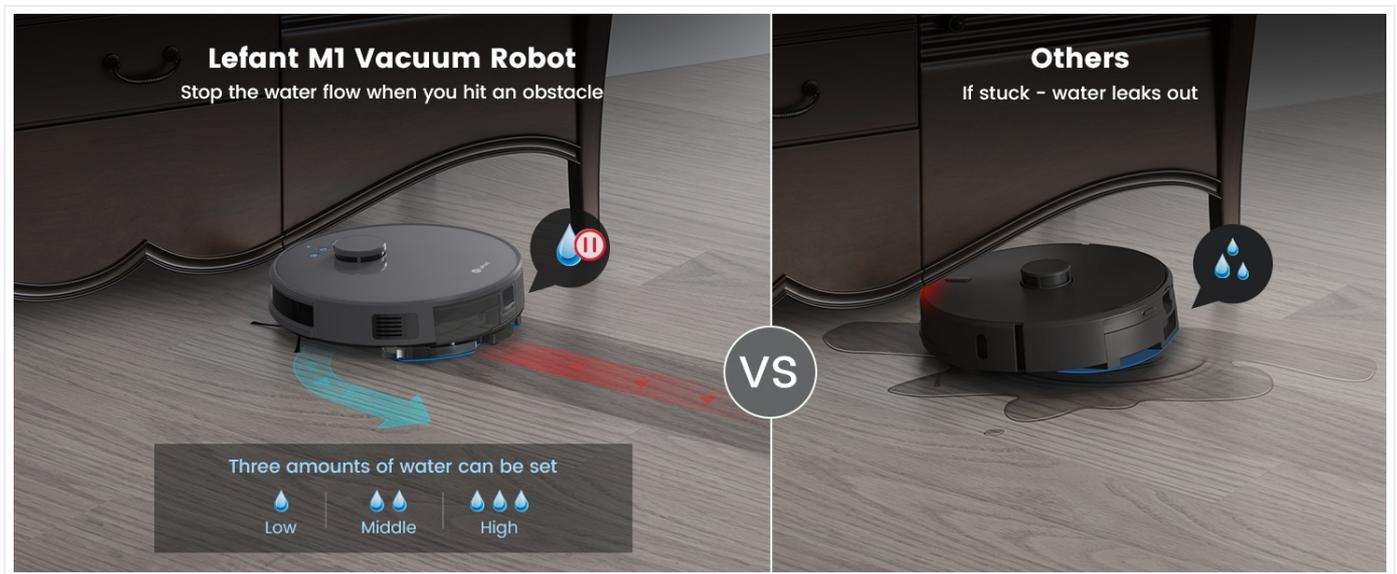


Image: The Lefant M1 robot vacuum mopping a floor, with an overlay showing options for low, middle, and high water output levels.

4. Vacuuming and Mopping

The M1 is equipped with a 520ml dustbin and a 160ml electric water tank, allowing for simultaneous vacuuming and mopping. The floating main brush and mop automatically adapt to uneven ground, ensuring effective cleaning on various surfaces including hard floors, carpets, and tiles.

Clean with Memory



Image: An exploded view of the Lefant M1 robot vacuum showing its 2-in-1 dust box and mopping pad plate, highlighting the electric water tank feature.



Image: The Lefont M1 robot vacuum demonstrating its 4000Pa powerful suction and the floating main brush adapting to different floor levels.

5. Self-Charging

When the battery is low, the robot will automatically return to its charging base to recharge. It can cover up to 200 square meters or 150 minutes of cleaning time on a full charge.

Electric Water Tank

Set water flow for different needs and floor types

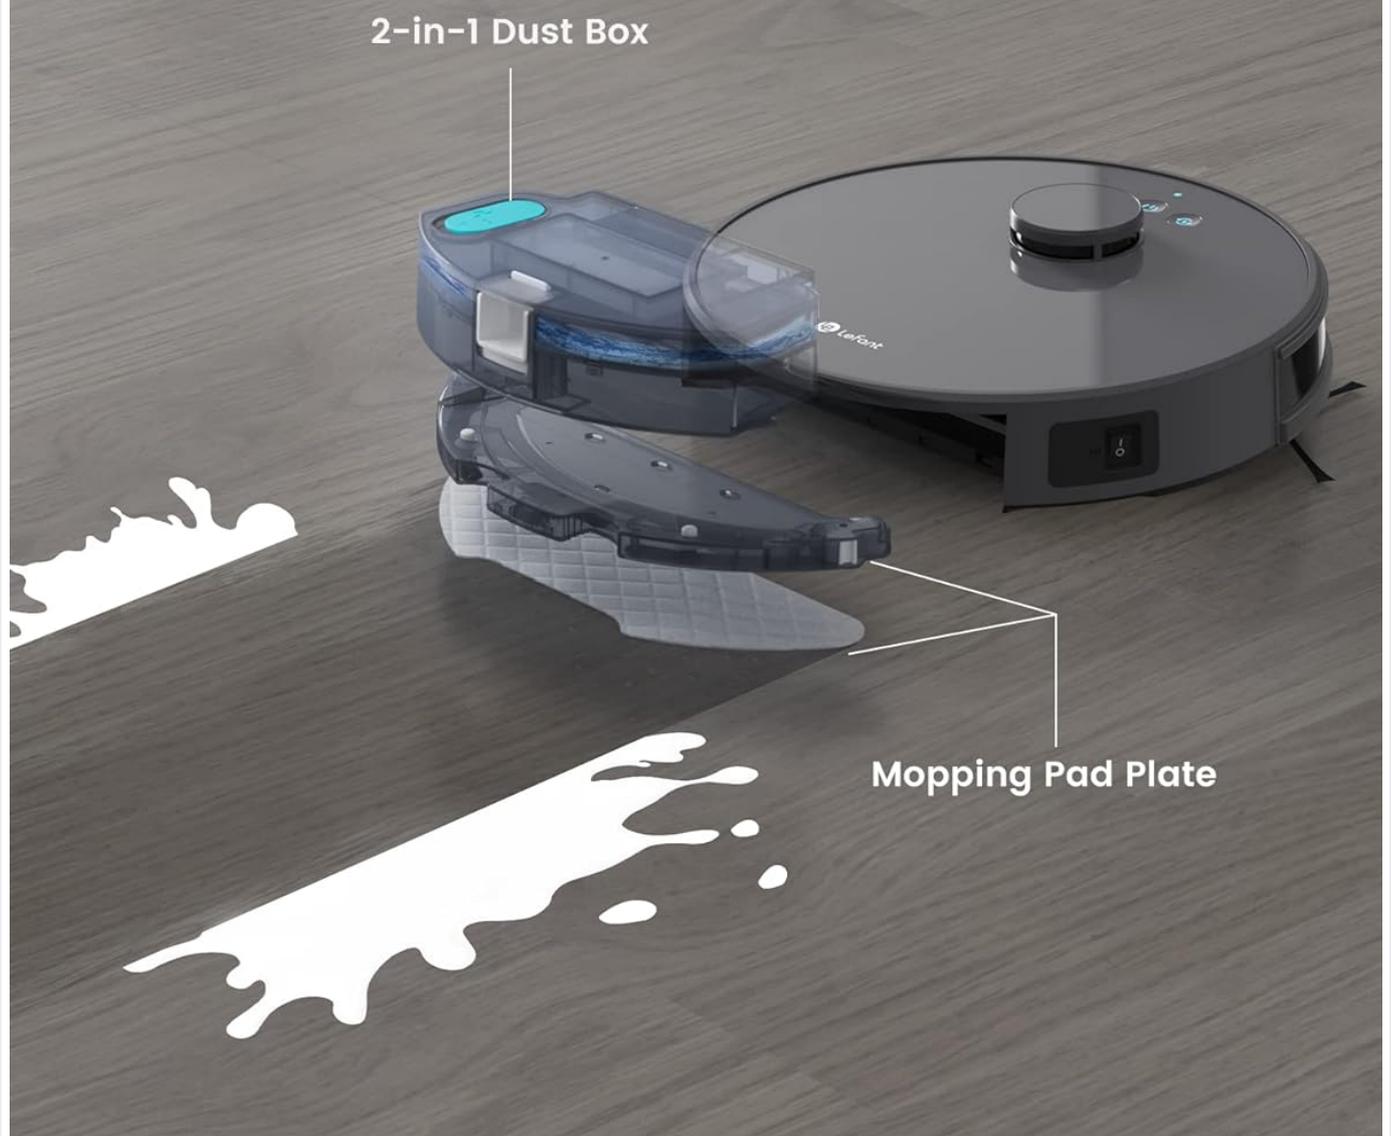


Image: The Lefant M1 robot vacuum navigating back to its charging station, illustrating its "Clean with Memory" and self-charging capabilities.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Lefant M1.

1. Cleaning the Dustbin and Filter

1. Press the dustbin release button and pull out the dustbin.
2. Open the dustbin cover and empty its contents into a trash bin.
3. Remove the filter and tap it gently to remove dust. Rinse the filter under running water if necessary, ensuring it is completely dry before re-inserting.
4. Wipe the inside of the dustbin with a dry cloth.
5. Re-install the filter and close the dustbin cover. Insert the dustbin back into the robot until it clicks.



Video: A demonstration of how to remove and empty the dustbin of the Lefant M1 robot vacuum, showing accumulated debris.

2. Cleaning the Mop Pad and Water Tank

1. Remove the mop pad plate from the robot.
2. Detach the mop pad from the plate. Wash reusable mop pads by hand or machine. Dispose of disposable mop pads.
3. Empty any remaining water from the water tank. Rinse the tank and allow it to air dry completely.
4. Reattach a clean mop pad to the plate and re-install the plate onto the robot.

3. Cleaning Side Brushes and Main Brush

- Regularly check side brushes for tangled hair or debris. Pull them off and clean as needed.
- Remove the main brush cover and lift out the main brush. Use the provided cleaning tool to cut and remove tangled hair.
- Re-install the main brush and cover.

4. Cleaning Sensors and Charging Contacts

Wipe all sensors (Lidar, anti-drop, anti-collision) and charging contacts on both the robot and the charging base with a clean, dry cloth.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Robot does not turn on.	Battery is low or depleted. Power switch is off.	Place the robot on the charging base. Ensure the main power switch is in the "ON" position.
Robot cannot connect to Wi-Fi/App.	Incorrect Wi-Fi band (only 2.4GHz supported). Incorrect password. Robot too far from router.	Ensure your Wi-Fi is 2.4GHz. Double-check password. Move robot closer to router. Reset Wi-Fi on robot if necessary.
Robot gets stuck frequently.	Obstacles (cables, rugs, furniture). Sensors are dirty.	Clear the cleaning area of obstacles. Clean all sensors. Use No-Go Zones in the app.
Poor cleaning performance.	Dustbin is full. Filter is clogged. Brushes are tangled.	Empty the dustbin. Clean or replace the filter. Clean the side and main brushes.
Robot does not return to charging base.	Charging base is obstructed or unplugged. Robot is too far from base.	Ensure charging base is clear and plugged in. Manually place robot on base if needed.

SPECIFICATIONS

Feature	Detail
Brand	Lefant
Model Name	Lefant M1G (M1)
Special Features	Anti-Fall, Easy-Empty Dirt Container, No-Go Zone, Obstacle Avoidance, Pet Hair Pick Up, Lidar Navigation, Real-time Map, 2-in-1 Vacuuming and Mopping, Freemove 3.0 Technology
Color	Gray
Product Dimensions	12.6"L x 12.6"W x 3.7"H
Included Components	Charging Adapter, Charging Port, Filter, Lefant M1, Side Brush
Filter Type	Cartridge
Battery Life	150 minutes
Voltage	19 Volts (DC)
Dustbin Capacity	520 Milliliters
Water Tank Capacity	160 Milliliters
Power Source	Battery Powered
Control Method	App, Touch, Voice
Compatible Devices	Amazon Echo, Google Home, Smartphones
Form Factor	Robotic
Smart Home Compatibility	Smart Home Compatible
Item Weight	9.33 pounds
Surface Recommendation	Hard Floor/Carpet/Tile/Wood/Marble/Glass

WARRANTY AND SUPPORT

Lefant products come with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your package or visit the official Lefant website. For technical support, troubleshooting assistance, or to purchase replacement parts, please contact Lefant customer service through the app or their official website.

Contact Information:

- **Website:** www.lefant.com (Example, actual URL might vary)
- **App:** Lefant App (available on App Store and Google Play)

