

Easytry16876

Generic Replacement Remote Control User Manual

For RCA, BG, and Hyundai Smart TVs

PRODUCT OVERVIEW

This document provides instructions for the Generic replacement infrared remote control. This remote is designed to function as a replacement for original remotes of various RCA, BG, and Hyundai Smart TV models. Please note that a replacement item may not offer all functions of the original remote.

Compatible TV Models include:

- RCA RNSM3203-D
- BG B5019UK6IP
- Hyundai H50LK68, HYLEDD3249NIM, HYLEDD247D, hy50s4bl20, HYLEDD4323NIM, HYLEDD3244NIM

PACKAGE CONTENTS

- 1 x Generic Replacement Remote Control
- *Note: Batteries are not included and must be purchased separately.*

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.



Image: Remote control with its battery compartment open, illustrating the correct orientation for inserting two AAA batteries.

OPERATING INSTRUCTIONS

Remote Control Layout and Functions

After installing batteries, the remote is ready for use. Point the remote directly at your television's infrared receiver. Below is a general overview of common buttons and their functions:



Image: Front view of the Generic replacement remote control, displaying its full button layout.

- **Power (Red Button):** Turns the TV on or off.
- **Input:** Cycles through available input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** Direct channel selection.
- **Info:** Displays program information.
- **Guide:** Accesses the electronic program guide.
- **Home (Green Button):** Navigates to the TV's smart home screen or main menu.
- **Navigation Pad (Up/Down/Left/Right/OK):** Used to navigate menus and confirm selections.
- **Back:** Returns to the previous screen or menu.
- **Exit:** Closes the current menu or application.
- **Vol +/-:** Adjusts the volume level.
- **Mute:** Mutes or unmutes the TV audio.
- **CH ^/v:** Changes channels up or down.
- **Playback Controls (Play/Pause, Stop, Rewind, Fast Forward):** Controls media playback.
- **Color Buttons (Red, Green, Yellow, Blue):** Functionality varies by TV model and application.

MAINTENANCE

Cleaning the Remote Control

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as these can damage the remote's electronics.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure fresh AAA batteries are correctly installed.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Verify that the remote is pointed directly at the TV.
- **Some functions do not work:**
 - As a replacement remote, it may not support all advanced or specific functions of your original TV remote. This is normal for universal or replacement remotes.
 - Ensure your TV model is listed as compatible. If your model is not listed, full functionality cannot be guaranteed.
- **Short operating range:**
 - Replace batteries with new ones.
 - Ensure there are no strong light sources or other infrared devices interfering with the signal.

SPECIFICATIONS

Brand	Generic
Model Number	Easytry16876
Connectivity Technology	Infrared (IR)
Maximum Range	8 Meters
Number of Batteries Required	2 AAA batteries
Compatible Devices	Television (Specific RCA, BG, Hyundai models)

WARRANTY AND SUPPORT

Warranty Information

This product comes with a 90-day warranty from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, or unauthorized modifications.

Customer Support

For any questions, troubleshooting assistance, or warranty claims, please contact the seller or retailer from whom you purchased this product. Please have your purchase details and product model number (Easytry16876) ready when contacting support.

