

RM-C3228

Replacement Remote Control User Manual

For JVC Smart TVs: LT-32N3105A, RM-C3228, LT-58N7105A-AU, LT-55N6105A, LT-55N7105A, LT-58N7105A, LT-65N7105A

INTRODUCTION

This manual provides essential information for the use and maintenance of your new replacement remote control. This remote is designed to function as a replacement for specific JVC Smart TV models. Please read this manual carefully to ensure proper operation.

Important Note: This replacement remote may not support all functions of your original remote control. If your specific TV model is not listed in the compatible models section, this remote may not be suitable for your device.

COMPATIBLE MODELS

This replacement remote control is compatible with the following JVC Smart TV models:

- JVC LT-32N3105A
- JVC RM-C3228
- JVC LT-58N7105A-AU
- JVC LT-55N6105A
- JVC LT-55N7105A
- JVC LT-58N7105A
- JVC LT-65N7105A

If your model is not listed, please verify compatibility before use.

SETUP

Inserting Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.

3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

No pairing or programming is required. The remote control is ready for use once batteries are installed.



Figure 1: Rear view of the remote control with the battery cover removed, illustrating the battery insertion process.

OPERATING INSTRUCTIONS

This remote control operates using infrared (IR) technology. Ensure there is a clear line of sight between the remote control and your television's IR receiver.



Figure 2: Front view of the remote control, displaying the button layout.

Basic Functions:

- **Power Button ():** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down (VOL +/-):** Adjusts the volume level.
- **Channel Up/Down (CH +/-):** Changes the TV channel.
- **Mute:** Mutes or unmutes the TV sound.
- **Input:** Selects the input source (HDMI, AV, etc.).
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Back:** Returns to the previous screen or menu.
- **Menu:** Opens the TV's main menu.
- **Netflix / YouTube Buttons:** Direct access to these streaming applications (functionality depends on TV model and app availability).

For advanced functions or specific TV settings, please refer to your JVC TV's original user manual.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and damage.
- **Environment:** Avoid exposing the remote control to extreme temperatures, humidity, or direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not working.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote has limited functionality.	This is a replacement remote; some advanced functions may not be supported.	Verify if the function is supported by this specific replacement model. Refer to your TV's original manual for full functionality.
Remote works intermittently.	Weak batteries or obstruction between remote and TV.	Replace batteries. Ensure clear line of sight to the TV's IR receiver.
Specific buttons do not respond.	Button malfunction or incompatibility.	Check if the button is physically stuck. If it's a specific function button (e.g., a smart app button), it might not be supported by your TV model or this replacement remote.

SPECIFICATIONS

Feature	Detail
Product Type	Replacement Remote Control
Brand	Generic
Connectivity Technology	Infrared (IR)
Compatible Devices	JVC Smart Televisions (specific models listed above)
Power Source	2 x AAA Batteries (not included)
Color	Random (typically black)
Manufacturer	SZHKHXD
ASIN	B0BPT23V7F

WARRANTY AND SUPPORT

As a generic replacement product, specific warranty details may vary. Please refer to the seller's return policy or contact the seller directly for information regarding warranty and support for this item.

- **Seller:** SZHKHXD
- **Return Policy:** Typically 30 days for refund/replacement (as per Amazon's standard policy for this item).
- For further assistance, please contact the seller through the platform where the purchase was made.

