



Manuals.plus /

› Cawevon /

› Cawevon Powkiddy X70 HD Retro Handheld Game Console User Manual

Cawevon X70

Cawevon Powkiddy X70 HD Retro Handheld Game Console User Manual

Model: X70 | Brand: Cawevon

INTRODUCTION

This manual provides comprehensive instructions for setting up, operating, and maintaining your Cawevon Powkiddy X70 HD Retro Handheld Game Console. It is designed to help you understand the device's features and ensure a smooth gaming experience. Please read through this manual carefully before using your console.

PRODUCT FEATURES

- **Retro Style:** The Powkiddy X70 handheld game console is pre-loaded with a wide selection of retro games, offering a nostalgic gaming experience.
- **Feature-Rich:** Compatible with 3.5mm stereo headphones and allows customization of display attributes such as brightness, energy-saving mode, and interface background.
- **Powerful Performance:** Operates on a Linux system and is equipped with an ATM7051 quad-core ARM Cortex-A9 900mhz processor, ensuring smooth gameplay.
- **Visual Enjoyment:** Features a 7-inch IPS high-definition screen with a resolution of 1024x600, providing clear and vivid game visuals.
- **Dual Gamepad Support:** The console supports connecting two external gamepads for two-player gaming.

SPECIFICATIONS

Attribute	Detail
Product Dimensions	23.6 x 11.7 x 1.4 cm (9.29 x 4.61 x 0.55 inches)
Item Weight	358g (1.04 pounds)
Model Number	X70-Games
RAM	LPDDR2 128M
Internal Memory	128M
System	Linux system
Display	7-inch IPS screen, resolution: 1024x600
Image Function Support	JPG, JPEG, JPE, BMP, PNG
Video Format Support	FLV, MP4
Music Function Support	Lossless music and MP3 full format audio
External Function	Double speakers, 3.5mm stereo earphone jack
Battery	3500mAh (Li-polymer)
TF Card Support	Up to 64GB expansion
Color	Black

SETUP

1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that all items listed below are present and undamaged:

- Powkiddy X70 Handheld Game Console
- Charging Cable
- User Manual



Image: Contents of the Powkiddy X70 package, including the console, charging cable, and user manual.

2. Charging the Console

Before first use, fully charge the console. Connect the provided charging cable to the console's charging port and plug the other end into a compatible USB power adapter (not included). The charging indicator light will typically show the charging status and turn off or change color when fully charged. The console features a 3500mAh battery.

3. Inserting a TF Card (Optional)

If you wish to expand storage or add more games, insert a TF (microSD) card (up to 64GB, not included) into the designated TF card slot. Ensure the card is inserted correctly until it clicks into place.

OPERATING INSTRUCTIONS

1. Power On/Off

- **To Power On:** Press and hold the power button located on the console until the screen illuminates.
- **To Power Off:** Press and hold the power button until a power-off menu appears, then select 'Power Off'. Alternatively, a long press may directly power off the device.

2. Basic Navigation

Use the D-pad or left joystick to navigate through menus and game lists. The A, B, X, Y buttons are used for selection and actions within games and menus. The 'SELECT' and 'START' buttons typically serve as menu or in-game function buttons.



Image: The Powkiddy X70 console, showing the 7-inch screen, D-pad, joysticks, and action buttons.

3. Game Selection and Play

The console comes with a large library of pre-installed games. Navigate to the game selection menu, choose your desired game, and press the appropriate button (usually 'A' or 'START') to launch it. Controls for individual games will vary, but generally follow standard retro gamepad layouts.



Image: The Powkiddy X70 displaying a fighting game, demonstrating the console's visual capabilities during gameplay.

4. Adjusting Settings

- **Brightness:** Access the system settings to adjust screen brightness for optimal viewing in various lighting conditions.

- **Volume:** Use the dedicated volume controls on the console to adjust audio output.
- **Headphones:** Plug 3.5mm stereo headphones into the headphone jack for private listening.
- **Energy Saving Mode:** Configure power-saving options in the settings to extend battery life.

5. Two-Player Battle

The Powkiddy X70 supports dual gamepad connections. Connect two compatible external gamepads (sold separately) to enjoy multiplayer games with friends or family.



Image: Two users engaging in a two-player game on the Powkiddy X70, utilizing external gamepads for a shared experience.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the console's exterior. Avoid using liquid cleaners or abrasive materials.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the console regularly, even if not in use for extended periods.
- **Storage:** Store the console in a cool, dry place away from direct sunlight and extreme temperatures.
- **Screen Protection:** Consider using a screen protector to prevent scratches on the 7-inch IPS display.



Image: The Powkiddy X70 screen, illustrating the importance of screen protection for the device's display.

TROUBLESHOOTING

- **Console Not Turning On:** Ensure the battery is charged. Connect the charging cable and try again. If the issue persists, perform a hard reset (refer to the device's specific reset procedure if available).
- **Screen Issues:** If the screen is dim, check brightness settings. If the screen is unresponsive or displays artifacts, try restarting the console.
- **Sound Problems:** Verify the volume is not muted or set too low. Check headphone connections if using external audio.
- **Game Performance Issues:** Ensure the TF card (if used) is properly inserted and not corrupted. Some games may require specific settings adjustments for optimal performance.
- **Controls Unresponsive:** Restart the console. If using external gamepads, ensure they are properly connected and powered.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact the retailer. Keep your proof of purchase for any warranty claims.

