Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > NERF /
- Nerf Rival Forerunner XXIII-1200 Blaster Instruction Manual

NERF XXIII-1200

Nerf Rival Forerunner XXIII-1200 Blaster Instruction Manual

Model: XXIII-1200

NTRODUCTION

The Nerf Rival Forerunner XXIII-1200 Blaster is a high-precision blaster designed for advanced battling. It features an adjustable rear sight for precise aiming and a streamlined barrel for enhanced performance. This blaster uses specially designed Accu-Rounds with an improved aerodynamic design and dimple pattern, enabling more stable flight. It is a breech-loading, pump-action blaster with a 12-Accu-Round capacity, capable of firing rounds at speeds up to 90 feet per second. The Forerunner XXIII-1200 comes equipped with an edge-glow front sight and a sliding rear sight for fine-tuning your aiming precision. It includes 12 high-impact Accu-Rounds that are compatible with all Nerf Rival Series blasters. For safety, the blaster includes a trigger lock to prevent accidental firing.

IMPORTANT SAFETY WARNINGS

WARNING: Do not aim or fire at eyes or face.

For safety, it is highly recommended that players and bystanders wear goggles (sold separately). Use only official Nerf Rival Accu-Rounds. Do not modify the blaster or the rounds.

This product is not intended for purchase or use by individuals under 18 years of age.

本商品は18才未満の方は ご購入いただけません

全性・ 質や顔に向けて発射しないでください。
を分がしないでください。
を分がしないでください。
を全のために、プレイヤーや周囲の人はゴーグルを使用
することを推奨します。公式のボールのみをお使いください。
ボールやブラスターを改造しないでください。

0723**F6320**2772



外箱

【カスタマーサービス】

customerservice.japan@ap.hasbro.com 平日 10:00~16:00 (祝日・年末年始を除く) ハズブロジャパン合同会社

ナーフ ライバル フォアランナー XXII-1200

セット内容: ブラスター、アキュボール12個、取扱説明書

パッケージの写真やイラストは実際の商品と 色や仕様が異なることがあります。

Image: Safety warnings and customer service contact details.

PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the main components of your Nerf Rival Forerunner XXIII-1200 Blaster.



 $Image: The \ Nerf \ Rival \ For erunner \ XXIII-1200 \ Blaster \ with \ included \ Accu-Rounds.$



Image: Detailed diagram showing the blaster's parts, including the adjustable sight, breech load, front sight, trigger lock, trigger, and pumpaction grip.

- Adjustable Rear Sight: For precise aiming.
- Front Sight: Works in conjunction with the rear sight for targeting.
- Breech Load: The opening where Accu-Rounds are inserted.
- Pump-Action Grip: Used to prime the blaster.
- Trigger: Activates firing.
- Trigger Lock: A safety mechanism to prevent accidental firing.

SETUP AND LOADING

Follow these steps to prepare your blaster for use.

- 1. **Unlock the Trigger:** Slide the trigger lock forward to unlock the trigger. When storing the blaster or not in use, always slide the trigger lock backward to lock it.
- 2. Prime the Blaster: Pull the pump-action grip all the way back. This will open the breech.



Image: Loading an Accu-Round into the open breech.

- 3. Load Accu-Rounds: Insert up to 12 Accu-Rounds into the breech.
- 4. **Close the Breech:** Push the pump-action grip all the way forward until it clicks into place. The breech will close, and the ready indicator will show that the blaster is primed.

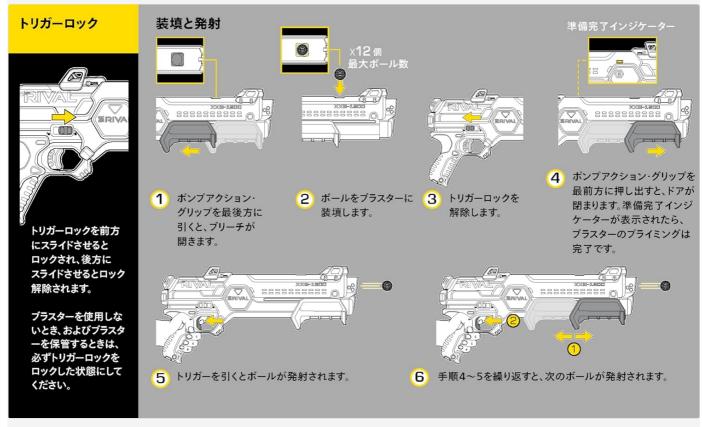


Image: Step-by-step diagram illustrating how to load and fire the blaster.

OPERATING INSTRUCTIONS

Firing the Blaster

- 1. Ensure the blaster is loaded and primed as described in the "Setup and Loading" section.
- 2. Aim the blaster at your target.



Image: A person aiming the blaster using the sights.

- 3. Pull the trigger to fire an Accu-Round.
- 4. To fire another round, repeat the priming and firing steps.

Adjusting the Sight


The blaster features adjustable sights to improve your accuracy.

- 1. Align the front sight with the center of the rear sight.
- 2. If your shots are not hitting the target, slide the knob on the rear sight forward or backward to adjust its position and improve accuracy.




Image: A hand adjusting the rear sight for better aim.



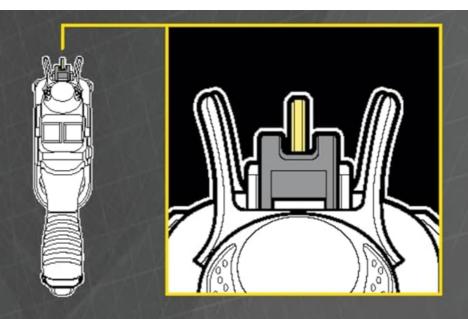

フロントサイトをリアサイトの中央に合わせます。フロントサイトをターゲットに合わせ、ボールを発射します。

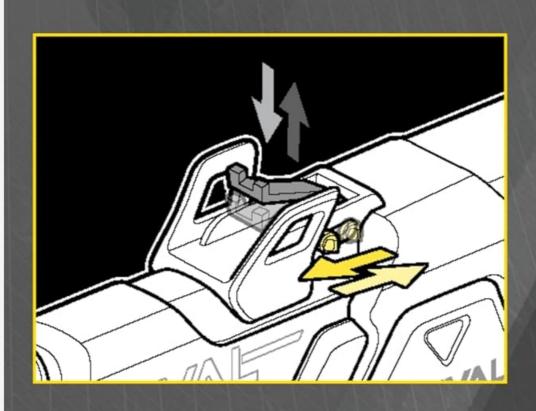

ターゲットにボールが当たらない場合は、ノブをスライドさせてリアサイトを調節し、精度を高めてください。

Image: Diagram showing how to align the front and rear sights and adjust the rear sight.

MAINTENANCE

Storing Your Blaster

Always store your blaster with the trigger lock engaged to prevent accidental firing. Do not store the blaster in a loaded or primed state.

Keep the blaster away from pets.

TROUBLESHOOTING

Clearing a Jam


If the blaster jams or the pump-action grip becomes stuck, follow these steps to clear the jam:

- 1. Slide the reset switch downwards.
- 2. Pull the pump-action grip all the way back to remove the jammed round from the breech.
- 3. Push the pump-action grip all the way forward to close the breech.

CAUTION: When removing a round, be careful not to point the blaster at yourself or others.

リセットスイッチ

ブラスターが詰まったり、ポンプアクション・グリップが動かなくなったときは、リセットスイッチを下にスライドさせ、ポンプアクション・グリップを後方に引き、詰まったボールをブリーチから取り除きます。 ポンプアクション・グリップを前方に押し出すと、ブリーチが閉まります。 ボールを取り除くときは、ブラスターを自分や周囲の人に向けないように注意してください。

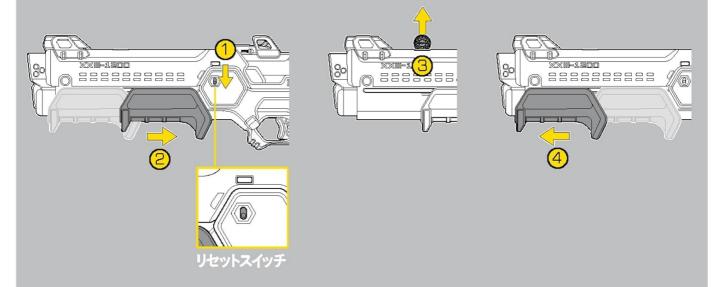

ブラスターの保管方法

ボールを装填して発射できる状態でブラスターを保管しないでください。

無断転載・複製を禁じます。 実際の商品とは仕様や色が異なる場合があります。 取扱説明書は大切に保管してください。

ペットに近づけないようにしてください。

NERF and HASBRO and all related trademarks and logos are trademarks of Hasbro, Inc.

0723**F6320**2772

Image: Diagram illustrating the use of the reset switch to clear a jammed round.

SPECIFICATIONS

Model NumberXXIII-1200 (F63202772)BrandNERF (Hasbro)Main MaterialPlasticProduct Dimensions6.6 x 50.8 x 28.5 cmProduct Weight655 gBatteries RequiredNoBatteries IncludedNoManufacturer Recommended Age18 years and up		
Main MaterialPlasticProduct Dimensions $6.6 \times 50.8 \times 28.5 \text{ cm}$ Product Weight 655 g Batteries RequiredNoBatteries IncludedNo	Model Number	XXIII-1200 (F63202772)
Product Dimensions 6.6 x 50.8 x 28.5 cm Product Weight 655 g Batteries Required No Batteries Included No	Brand	NERF (Hasbro)
Product Weight 655 g Batteries Required No Batteries Included No	Main Material	Plastic
Batteries Required No Batteries Included No	Product Dimensions	6.6 x 50.8 x 28.5 cm
Batteries Included No	Product Weight	655 g
	Batteries Required	No
Manufacturer Recommended Age 18 years and up	Batteries Included	No
	Manufacturer Recommended Age	18 years and up

Release Date	2023/11/10
--------------	------------

WARRANTY AND SUPPORT

For customer service inquiries, please contact Hasbro Japan at:

Email: customerservice.japan@ap.hasbro.com

Operating Hours: Weekdays 10:00 - 16:00 (excluding holidays and year-end/New Year period).

Please retain this instruction manual for future reference.

© 2023 Hasbro. All rights reserved. Nerf and all related properties are trademarks of Hasbro.