

[Manuals.plus](#) /

› [ELIVED](#) /

› ELIVED Ceiling TV Mount YD3016 Instruction Manual

## ELIVED YD3016

# ELIVED Ceiling TV Mount YD3016 Instruction Manual

Model: YD3016

## 1. INTRODUCTION

---

This manual provides detailed instructions for the safe and proper installation, operation, and maintenance of your ELIVED Ceiling TV Mount YD3016. Please read all instructions carefully before beginning installation to ensure optimal performance and safety.



Figure 1: ELIVED Ceiling TV Mount YD3016 with TV

## 2. PRODUCT FEATURES

- **Universal Compatibility:** Fits most 37-75 inch flat screen and curved TVs.
- **VESA Compliance:** Supports VESA patterns from 150x100 mm (6" x 4") to 600x400 mm (24" x 16").
- **High Weight Capacity:** Safely holds TVs up to 110 lbs (50 kg).
- **Adjustable Height:** Features 9 height settings, allowing the TV to hang from 25" up to 60.6" from the ceiling with the 3-pole design.
- **Optimal Viewing Angles:** Offers +/-3° screen level adjustment, +5°/-10° tilt to reduce glare, and 360° swivel for flexible positioning.
- **Versatile Application:** Suitable for various environments including shopping malls, airports, coffee shops, restaurants, gyms, grocery stores, schools, and homes. Accommodates both flat and sloped ceilings.

- **Integrated Cable Management:** Designed for clean cable routing through the pole.
- **Durable Construction:** Made from strong steel for stability and long-lasting usage.



Figure 2: Key Features of the ELIVED Ceiling TV Mount

### 3. SPECIFICATIONS

|                         |                           |
|-------------------------|---------------------------|
| Brand                   | ELIVED                    |
| Model                   | YD3016                    |
| TV Size Compatibility   | 37-75 inches              |
| VESA Compatibility      | 150x100 mm to 600x400 mm  |
| Weight Capacity         | 110 lbs (50 kg)           |
| Height Adjustment       | 25" to 60.6" (9 settings) |
| Tilt Angle              | +5°/-10°                  |
| Swivel Angle            | 360°                      |
| Screen Level Adjustment | +/-3°                     |

|                    |                            |
|--------------------|----------------------------|
| Material           | Metal                      |
| Color              | Black                      |
| Item Weight        | 14.6 pounds                |
| Package Dimensions | 30.08 x 8.98 x 4.72 inches |



Figure 3: TV Compatibility Overview

#### 4. SAFETY INFORMATION

Before installation, ensure you have read and understood all instructions. If you have any doubts, consult a qualified installer.

- **Weight Limit:** Do not exceed the maximum weight capacity of 110 lbs (50 kg). Exceeding this limit may result in serious injury or property damage.
- **TV Size and VESA:** Ensure your TV's size (37-75 inches) and VESA pattern (150x100 mm to 600x400 mm) are compatible with this mount.
- **Ceiling Type:** This mount is designed for installation on wood joists, solid concrete, or brick ceilings.
- **Drywall Warning:** **DO NOT MOUNT ON DRYWALL ALONE.** The mount must be secured into a wood stud, concrete, or brick ceiling. Do not use anchors on wood studs or drywall.

- **Input Access:** Check that the mount does not block any necessary input ports on your TV.
- **Hardware:** Use only the provided hardware and mounting template. If any parts are missing or defective, contact customer support.



Figure 4: Ceiling Compatibility and Safety Warning

## 5. SETUP AND INSTALLATION GUIDE

Follow these steps for a secure installation. It is recommended to have at least two people for installation.

### 5.1 Pre-Installation Checks

- Verify your TV's weight, VESA pattern, and input access.
- Identify your ceiling type (wood joist, concrete, or brick).
- Gather all necessary tools (not included): drill, stud finder (for wood joists), pencil, measuring tape, and a level.
- Unpack all components and ensure no parts are missing or damaged.

### 5.2 Attaching the Ceiling Plate

Locate the desired mounting position on your ceiling. For wood joists, use a stud finder. For concrete/brick, ensure the area is solid. Use the provided mounting template to mark drill holes. Pre-drill holes as per the manual's specifications for your ceiling type. Secure the ceiling plate using the appropriate hardware.

## 5.3 Assembling the Pole

Assemble the pole sections according to the desired height. The YD3016 features a 3-pole design for extended reach. Secure each section firmly with the provided screws and tools.

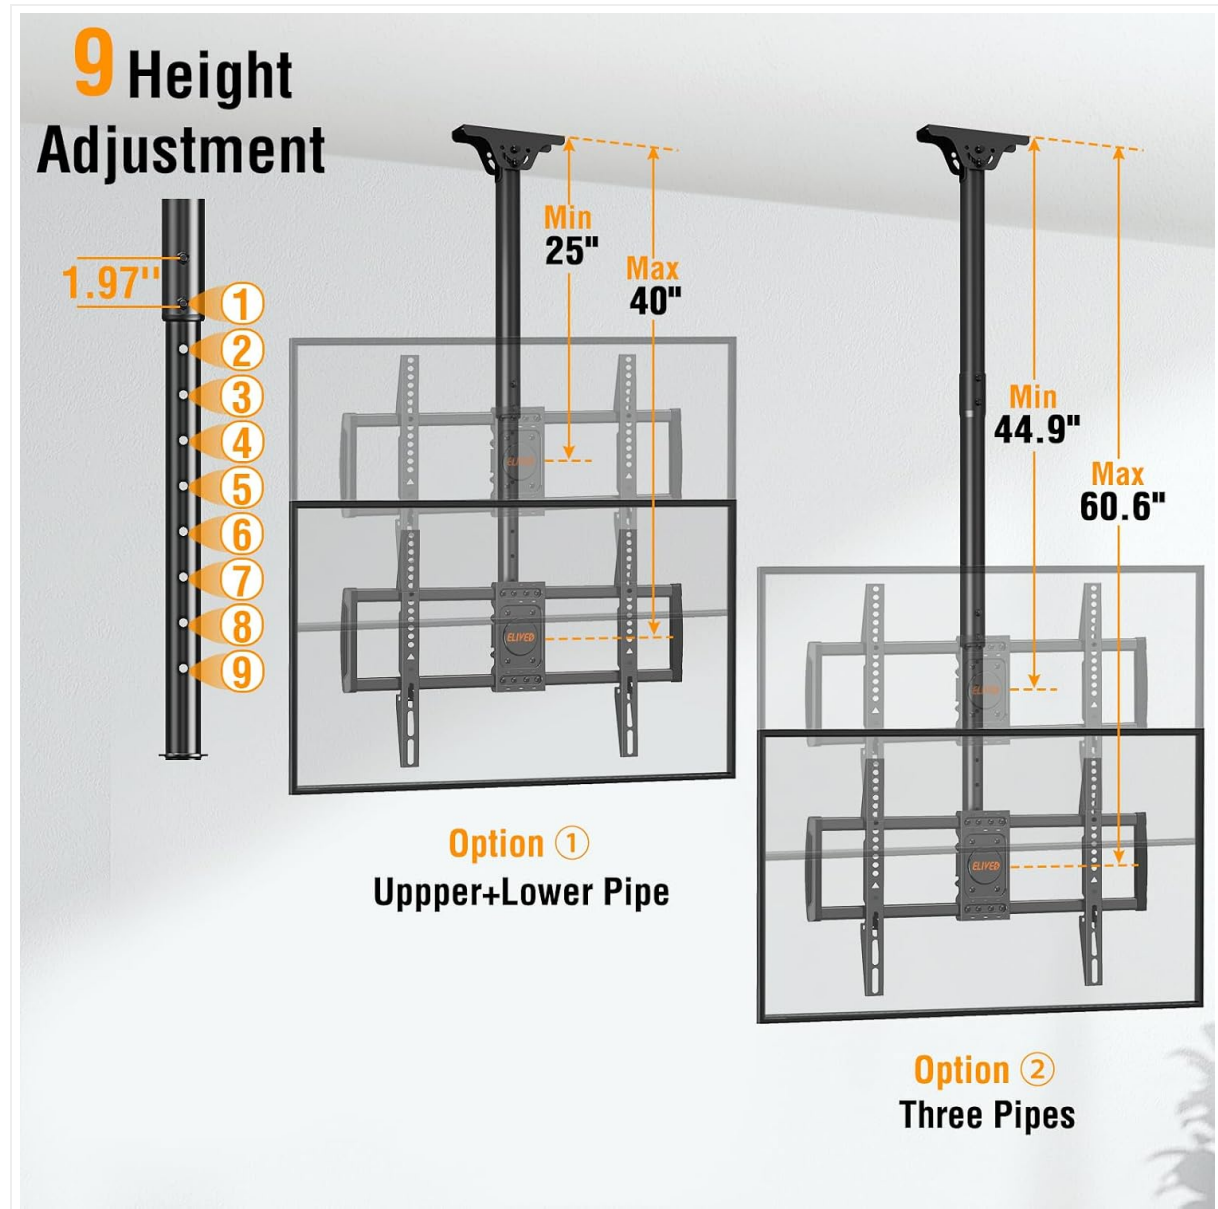


Figure 5: Height Adjustment Options

## 5.4 Attaching TV Brackets to TV

Lay your TV face down on a soft, clean surface. Attach the VESA brackets to the back of your TV using the appropriate screws and spacers from the hardware kit. Ensure they are securely tightened.

## 5.5 Mounting the TV to the Pole

Carefully lift the TV and hook the attached VESA brackets onto the mounting plate at the end of the pole. Secure the TV in place using the safety screws or locking mechanisms as indicated in the detailed manual.

## 5.6 Cable Management

Route all necessary cables (power, HDMI, etc.) through the integrated cable management channels within the pole for a neat and organized appearance.

## 5.7 Installation Videos

Video 1: ELIVED Ceiling TV Mount YD3016 Product Overview and Installation Highlights (0:35)

## 6. OPERATING THE MOUNT

Once installed, your ELIVED Ceiling TV Mount offers various adjustments for optimal viewing.

- **Height Adjustment:** To adjust the TV height, loosen the securing bolts on the pole, slide the pole to the desired height setting, and re-tighten the bolts. Refer to Figure 5 for height options.
- **Tilt Adjustment:** The TV can be tilted  $+5^{\circ}/-10^{\circ}$  to reduce glare or achieve a better viewing angle. Loosen the tilt adjustment screws, set the desired angle, and re-tighten.
- **Swivel Adjustment:** The mount allows for a full  $360^{\circ}$  swivel. Gently rotate the TV to face any direction.
- **Screen Level Adjustment:** Fine-tune the screen level by  $\pm 3^{\circ}$  to ensure a perfectly horizontal display.



Figure 6: Flat/Sloped Ceiling and Tilt Adjustment

## 7. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your TV mount.

- Periodically check all screws and connections to ensure they remain tight.

- Clean the mount with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- Ensure cables are not pinched or stressed during adjustments.

## 8. TROUBLESHOOTING

---

If you encounter any issues with your ELIVED Ceiling TV Mount, refer to the following common solutions:

- **TV is not level:** Adjust the screen level adjustment screws ( $\pm 3^\circ$ ) until the TV is perfectly horizontal.
- **Mount feels loose:** Re-check all mounting screws on the ceiling plate and TV brackets. Ensure they are securely tightened.
- **Difficulty adjusting height/tilt/swivel:** Ensure all locking mechanisms or adjustment screws are sufficiently loosened before attempting to move the TV, then re-tighten them after adjustment.
- **Cables are visible/messy:** Re-route cables through the integrated cable management system in the pole.

## 9. WARRANTY AND SUPPORT

---

For specific warranty information, please refer to the documentation included with your product at the time of purchase. For technical support or assistance with parts, please contact ELIVED customer service through the retailer where the product was purchased.

## 10. APPLICATION EXAMPLES

---

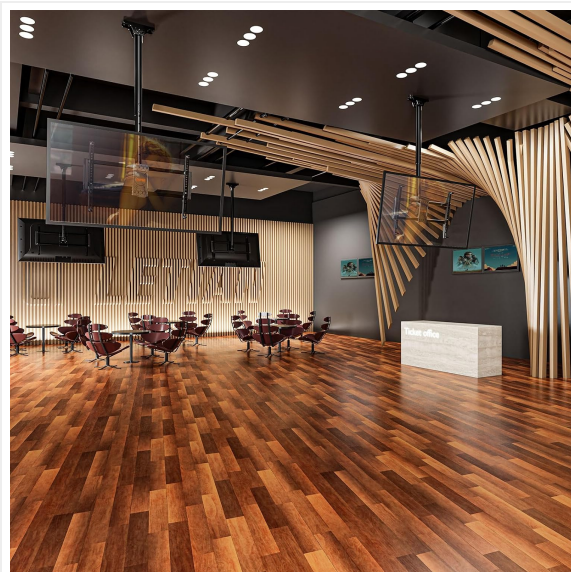


Figure 7: Restaurant/Cafe Application



Figure 8: Gym Application