

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TPOB](#) /

› [TPOB Goblin Professional Hair Clipper User Manual](#)

TPOB goblin

TPOB Goblin Professional Hair Clipper User Manual

Model: Goblin

INTRODUCTION

Thank you for choosing the TPOB Goblin Professional Hair Clipper. This manual provides essential information for the safe and effective use, maintenance, and care of your new professional hair clipper. Designed for precision and power, the Goblin clipper features an 11000 RPM motor and a Black Diamond Carbon DLC fade blade for superior cutting performance.

IMPORTANT SAFETY INFORMATION

Please read all instructions before using this appliance. To reduce the risk of electric shock, burns, fire, or injury to persons:

- **Electrical Safety:** Do not reach for an appliance that has fallen into water. Unplug immediately. Do not use while bathing or in a shower. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid. Always unplug this appliance from the electrical outlet immediately after using.
- **Blade Safety:** The Black Diamond Carbon DLC blade is sharp. Handle with care to prevent skin and eye injuries. Ensure the blade is properly aligned before use.
- **General Use:** Close supervision is necessary when this appliance is used by, on, or near children or invalids. Use this appliance only for its intended household use as described in this manual. Do not use attachments not recommended by the manufacturer. Keep the cord away from heated surfaces. Never drop or insert any object into any opening. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- **Power Source:** This appliance is designed for 100-240V, 50/60Hz, 40W operation. Use only the provided charging dock and USB cable.

PACKAGE CONTENTS

Your TPOB Goblin Professional Hair Clipper package includes the following items:

- TPOB Goblin Professional Hair Clipper
- Charging Dock
- USB Charging Cable
- Screwdriver (for blade adjustment/maintenance)
- Multiple Guide Combs (various sizes)



Image: Contents of the TPOB Goblin Professional Hair Clipper package, including the clipper, charging dock, USB cable, screwdriver, and various guide combs.

SETUP

1. Charging the Clipper

Before first use, fully charge your TPOB Goblin clipper. The clipper can be used corded or cordless.

1. Connect the USB charging cable to the charging dock.
2. Plug the other end of the USB cable into a suitable power adapter (not included) or a USB port.
3. Place the TPOB Goblin clipper onto the charging dock, ensuring it is seated correctly. The indicator

light on the clipper will illuminate to show it is charging.

4. Allow the clipper to charge for approximately 2-3 hours for a full charge. The indicator light may change color or turn off when fully charged (refer to specific model indicator behavior if available).





Image: The TPOB Goblin clipper placed on its charging dock.

2. Attaching and Detaching Guide Combs

Guide combs allow for precise hair length control.

- **To Attach:** Align the guide comb with the clipper blade and push firmly until it clicks into place.
- **To Detach:** Gently pull the guide comb away from the blade while holding the clipper securely.

3. Blade Adjustment (Zero-Gap)

The TPOB Goblin features a Black Diamond Carbon DLC fade blade, which can be adjusted for a closer cut (zero-gapped). This procedure should only be performed by experienced users.

1. Ensure the clipper is turned off and unplugged.
2. Using the provided screwdriver, carefully loosen the two screws on the blade assembly.
3. Gently slide the moving blade forward until it is aligned with the stationary blade, ensuring it does not extend past the stationary blade to prevent skin irritation.
4. Tighten the screws securely. Test the blade alignment before use.



Image: A detailed view of the TPOB Goblin clipper's Black Diamond Carbon DLC blade.

OPERATING INSTRUCTIONS

1. Powering On/Off

- To turn the clipper **ON**, press the power button located on the front of the clipper. The indicator light will illuminate.
- To turn the clipper **OFF**, press the power button again. The indicator light will turn off.





Image: Front view of the TPOB Goblin clipper, showing the power button and visible motor.

2. Hair Cutting and Trimming

For best results, ensure hair is clean and dry. Always start with a longer guide comb if unsure of the

desired length.

- Hold the clipper with the blade teeth pointing upwards.
- Begin cutting from the bottom of the head, moving upwards against the direction of hair growth.
- Use smooth, overlapping strokes for an even cut.
- For fading, gradually switch to shorter guide combs or use the lever to adjust blade length.

3. Using the Taper Lever

The taper lever on the side of the clipper allows for seamless blending and precise adjustments to cutting length without changing guide combs.

- Move the lever upwards for a shorter cut.
- Move the lever downwards for a longer cut.
- Utilize the lever in conjunction with guide combs for advanced fading techniques.

MAINTENANCE

1. Blade Cleaning and Oiling

Regular cleaning and oiling are crucial for maintaining the performance and longevity of your Black Diamond Carbon DLC blade.

1. After each use, turn off and unplug the clipper.
2. Use the cleaning brush (not explicitly listed but standard for clippers) to brush away any loose hair from the blades.
3. Apply 1-2 drops of clipper oil (not included) to the teeth and heel of the blades.
4. Turn the clipper on for a few seconds to distribute the oil, then turn it off and wipe off any excess oil.

2. General Cleaning

Wipe the body of the clipper with a clean, damp cloth. Do not immerse the clipper in water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted; power button not pressed correctly.	Charge the clipper fully. Ensure the power button is pressed firmly.
Clipper pulls hair or cuts poorly.	Blades are dull, dirty, or not oiled; hair is too thick or wet.	Clean and oil the blades. Ensure hair is dry. Consider professional blade sharpening or replacement if blades are dull.
Blades get hot during use.	Lack of lubrication; prolonged continuous use.	Ensure blades are properly oiled. Take short breaks during extended use to allow the clipper to cool.

SPECIFICATIONS

Feature	Detail
Model Number	goblin
Motor Speed	11000 RPM
Blade Type	Black Diamond Carbon DLC Fade Blade
Power Source	Corded Electric / Cordless
Voltage	100-240V
Frequency	50/60Hz
Power Consumption	40W
Dimensions	10.08 x 8.78 x 2.72 inches (Package)
Weight	2.25 Pounds (Package)





Image: Rear view of the TPOB Goblin clipper, displaying model and electrical specifications.

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the contact information provided with your purchase or visit the official TPOB website. Keep your proof of purchase for warranty claims.

Manufacturer: TPOB

Date First Available: December 28, 2022