

## Brandt AS0010960

# Brandt Dishwasher Door Seal AS0010960 Instruction Manual

Model: AS0010960 | Brand: Brandt

## 1. INTRODUCTION

This instruction manual provides essential information for the proper installation, maintenance, and troubleshooting of your Brandt Dishwasher Door Seal, model AS0010960. This seal is a critical component for maintaining the efficiency and preventing leaks in your dishwasher. Please read this manual thoroughly before proceeding with installation or any maintenance.

## 2. PRODUCT OVERVIEW

The Brandt Dishwasher Door Seal AS0010960 is a replacement rubber gasket designed to create a watertight seal around the dishwasher door. A properly functioning door seal is crucial for preventing water leaks during operation and ensuring optimal washing performance.



Figure 1: The Brandt Dishwasher Door Seal AS0010960, shown coiled. This black rubber gasket is designed to fit around the perimeter of your dishwasher door, ensuring a tight seal to prevent water leakage during wash cycles.

### 3. SAFETY INFORMATION

---

- **Disconnect Power:** Always ensure the dishwasher is disconnected from the main power supply before attempting any installation or maintenance. Failure to do so can result in electric shock.
- **Wear Protective Gear:** It is recommended to wear gloves to protect your hands during installation.
- **Handle with Care:** The seal should be handled carefully to avoid damage or kinks that could compromise its sealing ability.
- **Professional Assistance:** If you are unsure about any step of the installation process, consult a qualified appliance technician.

### 4. INSTALLATION INSTRUCTIONS

---

Follow these steps to replace your dishwasher door seal:

#### 1. Preparation:

- Disconnect the dishwasher from the electrical outlet or turn off the circuit breaker.

- Open the dishwasher door completely.
- Gather necessary tools: a flat-head screwdriver (optional, for prying), a clean cloth, and a mild cleaning solution.

2. **Remove Old Seal:**

- Carefully pull the old door seal out of the groove around the dishwasher tub. It may be held in place by friction or small clips. Start from one corner and work your way around.
- Inspect the old seal for any signs of wear, tears, or hardening.

3. **Clean the Groove:**

- Thoroughly clean the seal groove on the dishwasher tub using a clean cloth and a mild cleaning solution. Remove any food debris, detergent residue, or mold. Ensure the groove is completely dry before installing the new seal.

4. **Install New Seal:**

- Begin by pressing one end of the new seal into the groove at the top center of the dishwasher tub.
- Carefully work your way around the perimeter, pressing the seal firmly into the groove. Ensure the seal is seated evenly and completely.
- Pay close attention to the corners, ensuring the seal is not twisted or kinked.
- Once fully installed, gently close and open the dishwasher door a few times to help the seal settle into place.

5. **Test for Leaks:**

- Reconnect the dishwasher to the power supply.
- Run a short wash cycle and carefully observe the perimeter of the door for any signs of water leakage.
- If leaks occur, check the seal's seating, especially in the area of the leak, and re-adjust if necessary.

5. MAINTENANCE

Regular maintenance can extend the life of your dishwasher door seal:

- **Regular Cleaning:** Periodically wipe down the door seal with a damp cloth to remove food particles, grease, and detergent residue. This prevents buildup that can harden the rubber and compromise the seal.
- **Inspect for Damage:** Routinely check the seal for cracks, tears, hardening, or any signs of wear. Early detection of damage can prevent leaks and allow for timely replacement.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners or harsh chemicals on the door seal, as these can degrade the rubber material.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Water leaking from dishwasher door	Damaged, worn, or improperly installed door seal.	Inspect the seal for damage. If damaged, replace it. If new, ensure it is seated correctly in the groove. Clean any debris from the seal and groove.
Door not closing tightly	Seal is stiff, swollen, or improperly seated.	Clean the seal. If it's stiff or swollen, it may need replacement. Ensure the seal is fully pushed into its groove.

Problem	Possible Cause	Solution
Unpleasant odor from dishwasher	Food debris or mold buildup on the seal.	Thoroughly clean the door seal and its groove with a mild detergent and brush.

## 7. SPECIFICATIONS

- **Model:** AS0010960
- **Material:** Rubber
- **Color:** Multicolour (typically black or grey for seals)
- **Dimensions (L x W x H):** Approximately 21 x 17 x 14 cm (packaged dimensions); 120 grams (weight)
- **Manufacturer:** Brandt

## 8. COMPATIBILITY

The Brandt Dishwasher Door Seal AS0010960 is compatible with a wide range of dishwashers from various brands, including Brandt, De Dietrich, Sauter, Fagor, and Vedette. This seal is designed to fit numerous models, ensuring a reliable replacement for your appliance.

Some compatible models include (but are not limited to):

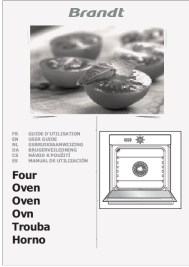

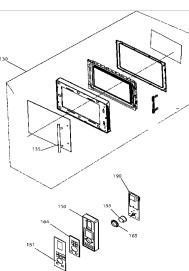
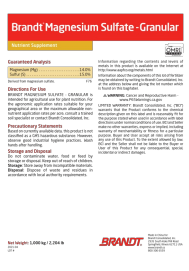
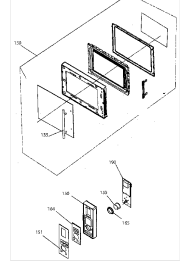

- **Brandt:** Dfh1030e/c, Dfh1031/a, Dfh1042/b, Dfh1042e/c, Dfh1044/a, Dfh1044/b, Dfh1044ex/a, Dfh1044ex/b, Dfh1044x/a, Dfh10s/a, Dfh1125/a-f, Dfh1125/b, Dfh1129, Dfh1129/a, Dfh1130/a, Dfh1130b/b, Dfh1132/b, Dfh1132x/a, Dfh1230, Dfh1330/a, Dfh510 hb0bbrffa, Dfh525 hb1cbrffa, Dfh625 hb1bbrffd, Dfh725we1/a, Dfh725x, Dfh745 hb2fbrffd, Dfh745x, Dfh815/a, Dfh825we1/b, Dfh825xe1/a, Dfh925e/a, Dfh925x/a, Dvh1054b/a, Dvh1054w/a, Dvh1054x/b, Dvh1064x/a, Dvh1084j/a, Dvh1084j/a-e, Dvh1084j/b, Dvh1084x/a, Dvh1100j/a, Dvh1100j/b, Dvh1110b/a, Dvh1110b/b, Dvh1110j/a, Dvh1110j/b, Dvh1110w/a, Dvh1110x/a, Dvh1110x/b, Dvh1120b/a, Dvh1120j/a, Dvh1120w/a, Dvh1120x/a, Dvh1140b/a, Dvh1140b/b, Dvh1140j/b, Dvh1140j/c, Dvh1140w/a, Dvh1140w/b, Dvh1140x/a, Dvh1140x/b, Dvh1150b/a, Dvh1150j/b, Dvh1150jc, Dvh1150jc/a, Dvh1150ju/a, Dvh1150w/a, Dvh1150wc/a, Dvh1230b, Dvh1230x/a, Dvh1238b/a, Dvh1238j/a, Dvh1238w/a, Dvh1238x/a, Dvh1245b/a, Dvh738be1/a, Dvh740be1/a, Dvh740xe1/a, Fdh835aaa, Fdh836ax/a, Fdw100lx 906010021, Fdw200we 906010043, Ho2fstffa, Lff-350w 906010019
- **De Dietrich:** Dkh1315i/a, Dkh810ix/b, Dkh915i/a
- **Sauter:** Es2+2/a, Es2+2/b, Es2+2it/b-e, Es2+2x/b, Es2+2x/b-e, Es23/a, Es23x/b, Es25/b, Es25x, Es25x/b, Es26/a, Es26/a-e, Es26x/a-e, Es30/a, Es30it/a, Es30it/b, Es38x/a, Es40it/a, Es90it
- **Fagor:** Dvc829xe1/a, Dvf1064x/a, Dvf1230w/b, Dvf1235w/a, Dvf1280w/a, Dvf1280wu/a, Dvf1285x, Dvf720xa1/a, Dvf720xa1/b, Dvf742we1/a, Dvf742xe1/a, Dvf754xe1/a, Dvf910we1/a, Dvf910we1/b, Dvf910xe1/a, Dvf910xe1/a-e, Dvf910xe1/b, Dvf910xe1/c, Dvf942we1/a, Dvf942xe1/a, Dvf942xe1/b, Dvf943be1/a, Dvf943we1/a, Dvf943xe1/a
- **Vedette:** Lvf32x/a, Lvf74it/a, Lvf75it/a, Lvf78it/a, Lvi-11fb lvi-11fb/b

Always verify the compatibility with your specific dishwasher model before purchasing and installing the seal.

## 9. SUPPORT AND WARRANTY

For technical assistance, further information, or warranty inquiries, please refer to the documentation provided with your original dishwasher appliance or contact Brandt customer support directly. Ensure you have your dishwasher's model number and the seal's model number (AS0010960) available when seeking support.

Related Documents - AS0010960

	<p><a href="#">Guide d'Utilisation Four Brandt : Installation, Fonctionnement et Entretien</a></p> <p>Ce manuel d'utilisation détaillé pour les fours Brandt couvre l'installation, les modes de cuisson, les fonctions de sécurité, le nettoyage et l'entretien. Découvrez comment utiliser votre four Brandt de manière optimale.</p>
	<p><a href="#">BRANDT In-Cyte Liquid Phosphate Fertilizer - Product Information</a></p> <p>BRANDT In-Cyte is a liquid fertilizer containing phosphate, seaweed extract, humic acids, and amino acids designed to stimulate plant growth, improve root viability, and enhance nutrient availability. Learn about its components, guaranteed analysis, and application methods.</p>
	<p><a href="#">Brandt Microwave GEC2632S Exploded View Parts List</a></p> <p>Official exploded view diagram and parts list for the Brandt GEC2632S microwave oven, detailing component numbers for service and repair.</p>
	<p><a href="#">Brandt Magnesium Sulfate - Granular Nutrient Supplement</a></p> <p>Brandt Magnesium Sulfate - Granular is a nutrient supplement for agricultural use, providing essential Magnesium and Sulfur for plant nutrition. This document outlines guaranteed analysis, directions for use, precautionary statements, storage and disposal information, and warranty details.</p>
	<p><a href="#">Brandt GE2622W Microwave Oven Exploded Parts Diagram</a></p> <p>Detailed exploded view parts diagram for the Brandt GE2622W microwave oven, listing all components and their identification numbers for service and repair.</p>
	<p><a href="#">Brandt B1931WHD Replacement Remote Control Button Guide</a></p> <p>A comprehensive guide comparing the original remote control buttons for the Brandt B1931WHD television with its replacement model, detailing function mapping for all keys.</p>