

AEG QX6-1-45AN

AEG QX6 Cordless Stick Vacuum Cleaner Instruction Manual

Model: QX6-1-45AN | Brand: AEG

INTRODUCTION

Welcome to the AEG QX6 Cordless Stick Vacuum Cleaner instruction manual. This guide provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read this manual thoroughly before first use and keep it for future reference.

The AEG QX6 is a versatile and powerful cordless stick vacuum cleaner designed for quick and thorough cleaning of all floor types. Its integrated handheld unit and accessories make it easy to clean various surfaces, from floors to hard-to-reach areas.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Store the appliance indoors.

PACKAGE CONTENTS

Verify that all components are present in the package:

- AEG QX6 Cordless Stick Vacuum Cleaner main unit
- PowerPro turbo nozzle with LED lighting (Standard nozzle)
- PetPro mini turbo nozzle (for pet hair)
- Telescopic nozzle (crevice tool)
- Furniture brush (dusting brush)
- Floor charging stand
- Power adapter
- Instruction Manual (this document)

ACCESSORIES INCLUDED IN THIS MODEL



BRUSH ROLL NOZZLE

Designed for optimal suction on all floor types



PETPRO NOZZLE

Efficiently removes pet hair from upholstery, sofa and carpet



TELESCOPIC REACH TOOL

Extendable tool that gives you extra reach to clean hard to reach places



DUSTING BRUSH

For quick and easy cleaning of countertops and shelves

This image displays the AEG QX6 cordless stick vacuum cleaner along with its various attachments, including the main floor nozzle, the specialized PetPro nozzle for pet hair, a telescopic crevice tool, and a dusting brush. These accessories are designed to enhance the vacuum's versatility for different cleaning tasks.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your AEG QX6 vacuum cleaner.

- **Main Unit:** Contains the motor, dustbin, and battery.
- **PowerPro Floor Nozzle:** Equipped with LED lighting and Brush Roll Clean function for effective cleaning on all floor types.
- **Handheld Vacuum Cleaner:** Detachable unit for quick cleaning of elevated or hard-to-reach surfaces.
- **Accessories:** Includes a PetPro mini turbo nozzle, telescopic nozzle, and furniture brush, stored conveniently on-board.
- **5-Step Air Filter System:** Captures up to 99.99% of fine dust particles.
- **Charging Stand:** Freestanding design for easy storage and charging.





A full view of the AEG QX6 cordless stick vacuum cleaner, showcasing its sleek grey design. The image highlights the main vacuum unit, the floor nozzle, and a collection of detachable accessories, including a crevice tool and a brush, indicating its multi-functional design.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.

2. **Assembly:**

- Insert the main unit into the PowerPro floor nozzle until it clicks securely into place.
- Ensure the dustbin is correctly installed.

3. **Initial Charging:**

- Place the assembled vacuum cleaner onto the floor charging stand.
- Connect the power adapter to the charging stand and plug it into a wall outlet.
- Allow the battery to fully charge before first use. The charging time is approximately 4.5 hours. The battery indicator lights will show charging status.



This image shows the AEG QX6 vacuum cleaner docked on its charging stand. A battery icon and text 'LESS CHARGING, MORE ACTION' are overlaid, emphasizing the long runtime and efficient charging capabilities of the device.

OPERATING INSTRUCTIONS

Powering On/Off

Press the power button located on the handle to turn the vacuum cleaner on or off.

Using the Stick Vacuum

For general floor cleaning, use the vacuum in its upright stick configuration. The PowerPro floor nozzle is suitable for all floor types. LED lighting on the nozzle illuminates the cleaning path.



An individual is depicted using the AEG QX6 cordless stick vacuum cleaner on a wooden floor in a modern kitchen. The vacuum is in its full stick configuration, demonstrating its ease of use for floor cleaning.

Using the Handheld Vacuum

To clean elevated surfaces, furniture, or tight spaces, detach the handheld unit by pressing the release button.

Attach the appropriate accessory (telescopic nozzle, furniture brush, or PetPro mini turbo nozzle) to the handheld unit.

5-LAYER FILTRATION

FINE PARTICLE
FILTER

2-LAYER
PRE-FILTER

MESH FILTER

AXIAL FLOW CYCLONE
SEPARATOR

EACH LAYER CAN BE WASHED AND REUSED



CLEANER AIR. HEALTHIER HOME

5-step filtration system captures up to 99.99%*
of particles >1 microdust

*Tested according to ISO16890

This image illustrates the versatile cleaning capabilities of the AEG QX6. Several individuals are shown using the vacuum in different modes: as a full stick vacuum for floors and as a detached handheld unit for cleaning countertops and other elevated surfaces, highlighting its adaptability.

Brush Roll Clean Function

The PowerPro floor nozzle features a Brush Roll Clean function. To activate, step on the pedal located on the nozzle while the vacuum is running. This will cut and remove tangled hair and fibers from the brush roll.

PetPro Nozzle

Use the PetPro mini turbo nozzle with the handheld unit for efficient removal of pet hair from upholstery, carpets, and stairs.



The specialized PetPro nozzle of the AEG QX6 vacuum is shown in action, effectively cleaning pet hair from a purple upholstered sofa. The accompanying text 'NO MORE PET HAIR' emphasizes its primary function.

MAINTENANCE AND CLEANING

Emptying the Dustbin

The dustbin has a capacity of 0.3 liters. Empty the dustbin regularly to maintain optimal suction performance.

1. Turn off the vacuum cleaner.
2. Detach the dustbin from the main unit.
3. Open the dustbin lid and empty contents into a waste bin.
4. Reattach the dustbin securely.

Cleaning the Filters

The 5-step air filter system (Fine Particle Filter, 2-Layer Pre-Filter, Mesh Filter, Axial Flow Cyclone Separator) should be cleaned regularly. All filter layers are washable and reusable.

1. Remove the dustbin and then carefully remove the filter components.
2. Tap off loose dust.
3. Rinse the filters under lukewarm running water until the water runs clear.
4. Allow filters to air dry completely for at least 24 hours before reassembling. Do not use a dryer or direct heat.
5. Reassemble the filters in the correct order and place them back into the dustbin.



VERSATILE CLEANING AT HAND

Quickly switch between the full cleaner and the hand unit for those hard-to-reach areas

This detailed diagram illustrates the AEG QX6's 5-layer filtration system. It breaks down the components, including the fine particle filter, 2-layer pre-filter, mesh filter, and axial flow cyclone separator, explaining how each layer contributes to capturing up to 99.99% of micro-dust particles for cleaner air.

Cleaning the Brush Roll

If the Brush Roll Clean function is insufficient, manually remove tangled hair or debris from the PowerPro floor nozzle's brush roll.

Exterior Cleaning

Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged; Power button not pressed correctly.	Charge the battery fully; Ensure the power button is pressed firmly.
Reduced suction power.	Dustbin full; Filters clogged; Nozzle or hose blocked.	Empty the dustbin; Clean or replace filters; Check for and remove blockages in the nozzle or hose.
Brush roll not spinning.	Brush roll tangled; Nozzle not properly attached.	Use Brush Roll Clean function or manually remove debris; Ensure nozzle is securely attached.
Short battery life.	Battery not fully charged; Battery nearing end of life.	Ensure battery is fully charged before use; Contact customer support for battery replacement if necessary.
Unusual noise.	Blockage in air path; Damaged component.	Check for and remove any blockages; Contact customer support if noise persists.

SPECIFICATIONS

- **Model:** QX6-1-45AN
- **Brand:** AEG
- **Color:** Gray
- **Power:** 27 watts
- **Battery Type:** 18V High Density Li-ion battery (Lithium Ion)
- **Charging Time:** Approximately 4.5 hours
- **Runtime:** Up to 45 minutes (with PowerPro floor nozzle)
- **Dustbin Capacity:** 0.3 Liters
- **Filter System:** 5-step air filter system, E10 filter material (removes up to 99.99% fine dust particles >1µm)
- **Noise Level:** 79 dB
- **Product Dimensions:** 10.04"L x 5.51"W x 43.5"H
- **Item Weight:** 6.16 pounds
- **Special Features:** PetPro turbo nozzle, LED lighting on PowerPro nozzle, Brush Roll Clean function, Self-standing parking function, Floor charging stand.
- **EU Spare Part Availability Duration:** 10 Years

WARRANTY AND SUPPORT

For warranty information, technical support, or spare parts, please refer to the official AEG website or contact your local AEG service center.

EU Spare Part Availability Duration: 10 Years.

UPC: [7332543982837](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question