

Cecotec 08251

Cecotec ReadyWarm 2000 Max Dual Fan Heater User Manual

Model: 08251

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in accidents or damage.

- Ensure the voltage indicated on the rating label matches your mains voltage before connecting the appliance.
- Do not cover the heater to prevent overheating.
- Keep flammable materials (curtains, furniture, etc.) at least 1 meter away from the heater.
- Do not use the heater in bathrooms, laundries, or similar wet locations.
- Always unplug the heater when not in use or before cleaning.
- Do not insert objects into the heater's openings.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

2. PRODUCT OVERVIEW

The Cecotec ReadyWarm 2000 Max Dual is a compact fan heater designed for efficient heating of small to medium-sized rooms.



Figure 1: Front-side view of the Cecotec ReadyWarm 2000 Max Dual Fan Heater.

Components:

- **Air Outlet Grille:** Front grille for warm or cool air dispersion.
- **Control Dials:** Two rotary dials for mode selection and thermostat adjustment.
- **Air Intake Grille:** Rear grille for air intake.
- **Integrated Handle:** For easy portability.
- **Stable Base:** Ensures the heater remains upright.



Figure 2: Top view showing the control dials for mode and temperature settings.



Figure 3: Close-up of the two control dials. The left dial selects operating mode, and the right dial adjusts the thermostat.

3. SETUP

1. **Unpacking:** Carefully remove the heater from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the heater on a firm, level surface. Ensure there is at least 1 meter of clear space around the heater to allow for proper airflow and prevent fire hazards. Do not place it directly under a power outlet.
3. **Power Connection:** Plug the power cord into a suitable electrical outlet (230V).



Figure 4: Proper placement of the fan heater in a room, ensuring adequate clearance.

4. OPERATING INSTRUCTIONS

The heater features two control dials for easy operation.

Mode Selection:

Use the left rotary dial to select one of the three operating modes:

- **OFF (O):** Turns the heater off.
- **COOL (Fan Symbol):** Operates as a fan, circulating cool air without heating.
- **WARM (I):** Provides low heat output (1000W).
- **HOT (II):** Provides high heat output (2000W).

Thermostat Adjustment:

Use the right rotary dial to adjust the desired room temperature. The heater will cycle on and off to maintain the set temperature.

- Rotate clockwise for a higher temperature setting.
- Rotate counter-clockwise for a lower temperature setting.



Figure 5: The fan heater operating in a heating mode, showing warm air being emitted.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your heater.

1. Cleaning:

- Always unplug the heater and allow it to cool completely before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Use a vacuum cleaner with a brush attachment to remove dust from the air intake and outlet grilles.
- Never immerse the heater in water or any other liquid.

2. Storage:

- If storing the heater for an extended period, clean it thoroughly.

- Store the heater in its original packaging in a cool, dry place, away from direct sunlight and moisture.



Figure 6: The integrated handle facilitates easy transport and storage of the heater.

6. TROUBLESHOOTING

If you encounter issues with your heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in; power outlet faulty; mode dial set to OFF; overheat protection activated.	Ensure plug is fully inserted. Test outlet with another device. Set mode dial to WARM or HOT. Unplug, wait 30 minutes for cooling, then restart.
No heat output.	Mode dial set to COOL; thermostat set too low.	Set mode dial to WARM or HOT. Increase thermostat setting.

Problem	Possible Cause	Solution
Heater cycles on and off frequently.	Thermostat setting reached; poor ventilation.	This is normal operation if the room temperature matches the thermostat setting. Ensure adequate clearance around the heater.
Unusual smell or noise.	New unit (initial use); dust accumulation.	A slight odor is normal during first use and will dissipate. Clean the heater thoroughly as per maintenance instructions. If problem persists, discontinue use and contact support.

If the problem persists after trying these solutions, please contact Cecotec customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Cecotec
Model Number	08251
Power	2000 Watts
Voltage	230 Volts
Operating Modes	3 (Cool, Warm, Hot)
Thermostat	Adjustable
Safety Features	Overheat protection
Dimensions (L x W x H)	1 x 1 x 1 cm (Product); 10P x 10I x 10H millimeters (Detailed)
Weight	1.2 Kilograms
Recommended Use	Heating small to medium-sized rooms
Form Factor	Pedestal (Floor Mount)

8. WARRANTY AND SUPPORT

Cecotec products are manufactured to high-quality standards. For information regarding warranty terms, technical support, or spare parts availability, please refer to the official Cecotec website or contact their customer service department.

Spare parts availability: 10 Years (as per product specifications).

For further assistance, please visit the [Cecotec official website](#).

	Manual de Usuario Cecotec ReadyWarm 2070 Max Force Black Termoventilador Instrucciones y Especificaciones Manual completo del termoventilador Cecotec ReadyWarm 2070 Max Force Black (modelo 08254). Incluye instrucciones de seguridad, funcionamiento, limpieza, mantenimiento y especificaciones técnicas para un uso óptimo y seguro.
	Cecotec ReadyWarm 6500 Turbo Convection Heater - User Manual and Safety Guide This comprehensive user manual provides detailed instructions for the Cecotec ReadyWarm 6500 Turbo Convection heater, covering safety guidelines, operation, cleaning, maintenance, technical specifications, and disposal information.
	Cecotec ReadyWarm 4000/6000/8000 Thermal Ceramic Connected: Manual de Instrucciones y Características Descubra el Cecotec ReadyWarm 4000/6000/8000 Thermal Ceramic Connected, un termoventilador vertical inteligente. Este manual de instrucciones cubre su funcionamiento, seguridad y especificaciones.
	Cecotec ReadyWarm 1500 Max Ceramic Design: Manual de Instrucciones Manual de instrucciones completo para el Cecotec ReadyWarm 1500 Max Ceramic Design (modelos White y Black), incluyendo seguridad, funcionamiento, mantenimiento y especificaciones técnicas.
	ReadyWarm 2050 Max Ceramic Rotate Smart Heater User Manual This manual provides instructions for the Cecotec ReadyWarm 2050 Max Ceramic Rotate Smart heater, covering safety, operation, cleaning, maintenance, and technical specifications.
	Cecotec Ready Warm 9820 Force Dual Fan Heater: User Manual and Specifications Comprehensive guide for the Cecotec Ready Warm 9820 Force Dual fan heater, covering safety instructions, operation, cleaning, maintenance, technical specifications, disposal, and warranty information.



[\[pdf\]](#) User Manual Instructions Specifications Warranty

Manuel de l'utilisateurCecotec Chauffage électrique à faible consommation ReadyWarm 2000 Max Dual White Ventilateur chauffant W Oscillation 65° 3 Modes Thermostat réglable Zone couverture 20 m2 Blanc Amazon.fr Cuisine et MaisonA1tmE9FwFtLm media amazon images I A1tmE9FwFtL ref dp product quick view READYWARM MAX DUAL BLACK WHITE PlytixManuel utilisateurSi el cable presenta daños debe ser sustituido por Servicio Asistencia Técnica oficial Cecotec para evitar cualquier tipo peligro 08251 08258 Cecotec Maison08251 MaxDual Black IM CECOTECfiles plytix api v1 1 file public files pim assets 3b 55 d9 62 62d9553be8b24d002a3f8cc2 texts 67 e5 1e 65 651ee5672f49b4979464a87b CECOTECm ||| ||| READYWARM 2000 MAX DUAL BLACK/WHITE Termoventilador /Fan heater Manual de instrucciones Instruction manual Manuel d'instructions Bedienungsanleitung Manuale di istruzioni Manual de instrues Handleiding Instrukcja obsługi Nvod k použití Instr READYWARM 2000 MAX DUAL BLACK/WHITE Termoventilador /Fan heater Manual de instrucciones Instruction ... DYWARM 2000 MAX DUAL BLACK/WHITE 31 ESPAOL 5. ESPECIFICACIONES TCNICAS Referencia del producto: **08251/08258** Producto: ReadyWarm 2000 Max Dual Black/White Potencia: 2000W Voltaje: 220-240 V- Frecue... lang:it **score:38** filesize: 1.22 M page_count: 72 document date: 2023-09-06



[\[pdf\]](#) User Manual Instructions Specifications Warranty

Descargar manual ReadyWarm 2000 Max Dual White Termoventilador Calefactor W Cecotec readywarm max dual white user es cdn cecotec cloud media files ||| READYWARM 2000 MAX DUAL BLACK/WHITE Termoventilador /Fan heater Manual de instrucciones Instruction ... DYWARM 2000 MAX DUAL BLACK/WHITE 31 ESPAOL 5. ESPECIFICACIONES TCNICAS Referencia del producto: **08251/08258** Producto: ReadyWarm 2000 Max Dual Black/White Potencia: 2000W Voltaje: 220-240 V- Frecue... lang:it **score:32** filesize: 1.22 M page_count: 72 document date: 2023-09-06



[\[pdf\]](#)

Catálogo Termoventiladores CECOTEC 2023 ENcdn cecotec cloud s3 amazonaws media IFA2023 EN ||| FAN HEATERS H E AT I N G Fast and efficient heating Acclimatise the atmosphere in the rooms of you ... anual de instrucciones GARANTA: 3 aos 8435484082501 caja 18435484082508 mster 08250 14 8435484**082518** caja 18435484**082515** mster **08251** Descubre la gama 15 ReadyWarm 2000 Max Dual White Ter... lang:en **score:17** filesize: 6.18 M page_count: 17 document date: 2023-08-23