

Cecotec Bolero Dresscode 8500

Cecotec Bolero Dresscode 8500 Inverter Washing Machine User Manual

Model: Bolero Dresscode 8500 (2466)

1. INTRODUCTION

Thank you for choosing the Cecotec Bolero Dresscode 8500 Inverter Washing Machine. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read it thoroughly before first use and keep it for future reference.



Image 1.1: Front view of the Cecotec Bolero Dresscode 8500 Inverter Washing Machine, highlighting its modern design and control panel.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

2.1 General Safety

- Ensure the appliance is properly grounded.
- Do not operate the washing machine if it is damaged or malfunctioning. Contact qualified service personnel.
- Keep children and pets away from the appliance during operation. The Kid Lock function can prevent accidental changes to settings.
- Do not wash items that have been cleaned, washed, soaked, or spotted with combustible or explosive substances.
- Unplug the appliance before cleaning or performing any maintenance.

2.2 Installation Safety

- Install the washing machine on a firm, level surface.
- Ensure adequate ventilation around the appliance.
- Connect to a cold water supply using new hose sets. Do not reuse old hose sets.
- The power cord must not be pinched or damaged.

3. PRODUCT OVERVIEW

The Cecotec Bolero Dresscode 8500 is a front-load washing machine designed for efficient and thorough laundry care. It features an Inverter Plus motor for quiet operation and energy saving, along with a variety of programs and special functions.

3.1 Components

- **Control Panel:** Located at the top front, featuring a program selector knob, LED display, and touch buttons for various functions.
- **Detergent Dispenser:** Compartments for pre-wash, main wash detergent, and fabric softener.
- **Drum:** Pearl Drum design with a snowflake texture for gentle yet effective washing and improved garment sliding.
- **Door:** Front-loading door for easy access to the drum.
- **Filter Cover:** Located at the bottom front, providing access to the drain pump filter.



Image 3.1: Detailed view of the control panel, showing the program selector knob, LED display, and function buttons.

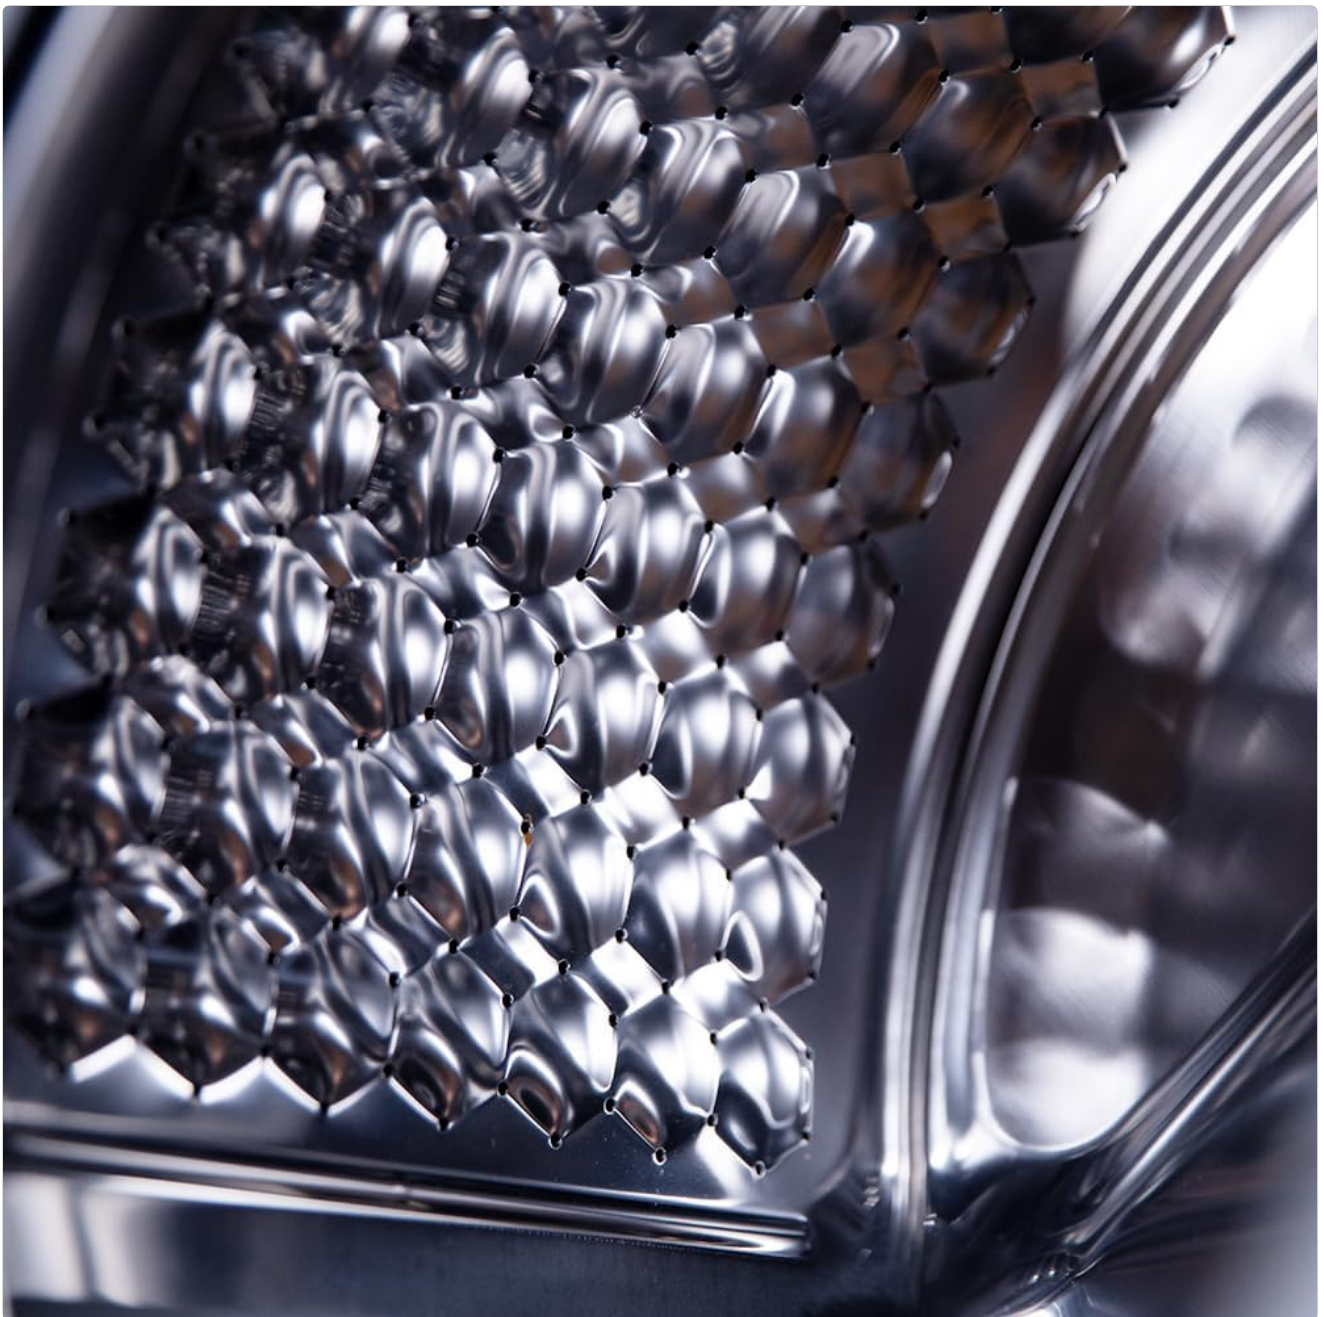


Image 3.2: The Pearl Drum interior, featuring a unique snowflake texture designed to protect fabrics during washing.

4. SETUP

Proper installation is crucial for the performance and longevity of your washing machine.

4.1 Unpacking and Positioning

1. Carefully remove all packaging materials.
2. Remove all transport bolts from the rear of the machine. Keep them for future transport.
3. Position the washing machine on a flat, stable floor. Use a spirit level to ensure it is perfectly level. Adjust the adjustable feet as necessary.



Image 4.1: Side view of the washing machine illustrating its dimensions: 85 cm height, 60 cm width, and 52 cm depth.

4.2 Water and Drain Connections

1. Connect the inlet hose to a cold water tap with a 3/4-inch thread. Ensure a tight seal to prevent leaks.
2. Place the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining. The drain hose should be positioned at a height between 60 cm and 100 cm from the floor.

4.3 Electrical Connection

1. Plug the power cord into a grounded electrical outlet.
2. Ensure the voltage and frequency match the specifications of your appliance (220-240V, 50Hz).

5. OPERATING INSTRUCTIONS

This section guides you through the daily use of your washing machine.

5.1 Loading Laundry and Detergent

1. Open the door and load laundry, ensuring not to overload the drum. The maximum capacity is 8 kg.
2. Add appropriate detergent to the main wash compartment and, if desired, fabric softener to its designated compartment in the dispenser drawer.
3. Close the detergent dispenser drawer and the washing machine door securely.

5.2 Program Selection

Turn the program selector knob to choose one of the 16 available programs:

- **Mixto (Mixed):** For mixed loads of cotton and synthetics.
- **Algodón (Cotton):** For durable cotton items.
- **Súper rápido (Super Quick):** For lightly soiled items needing a fast wash.
- **Eco 40-60:** Energy-efficient program for normally soiled cotton items washable at 40°C or 60°C.
- **Lana (Wool):** Gentle program for wool and delicate items.
- **Prelavado (Prewash):** Adds a pre-wash cycle for heavily soiled items.
- **Camisetas (Shirts):** Specific program for shirts.
- **Deporte (Sport):** For sportswear.
- **Intensivo (Intensive):** For heavily soiled, durable items.
- **Cama (Bed Linen):** For bedding and larger items.
- **Antialérgico (Allergy Care):** Uses steam to sterilize and remove allergens.
- **Centrifugado/Drenaje (Spin/Drain):** For spinning or draining water without a wash cycle.
- **Centrifugado (Spin):** For spinning only.
- **Limpieza tambor (Drum Clean):** Self-cleaning program for the drum.
- **Delicado (Delicate):** For very delicate items.
- **Algodón 20°C (Cotton 20°C):** Low-temperature cotton wash.

5.3 Special Functions

After selecting a program, you can choose additional functions using the touch buttons on the control panel:

- **SteamMax:** Envelops laundry with steam to sterilize, remove stains, and odors.
- **Allergy Care:** Utilizes steam for 99.9% sterilization, effective even in cold water washes.
- **Delay Start:** Allows you to set a delayed start time for the wash cycle, so it finishes when convenient.
- **Stop&Go:** Pause the washing machine to add or remove items during a cycle.
- **Eco Mode:** Reduces energy consumption and noise during the wash cycle.
- **Kid Lock:** Locks the control panel to prevent children from accidentally changing settings.



Image 5.1: A user selecting a program on the washing machine's intuitive LED display and control knob.

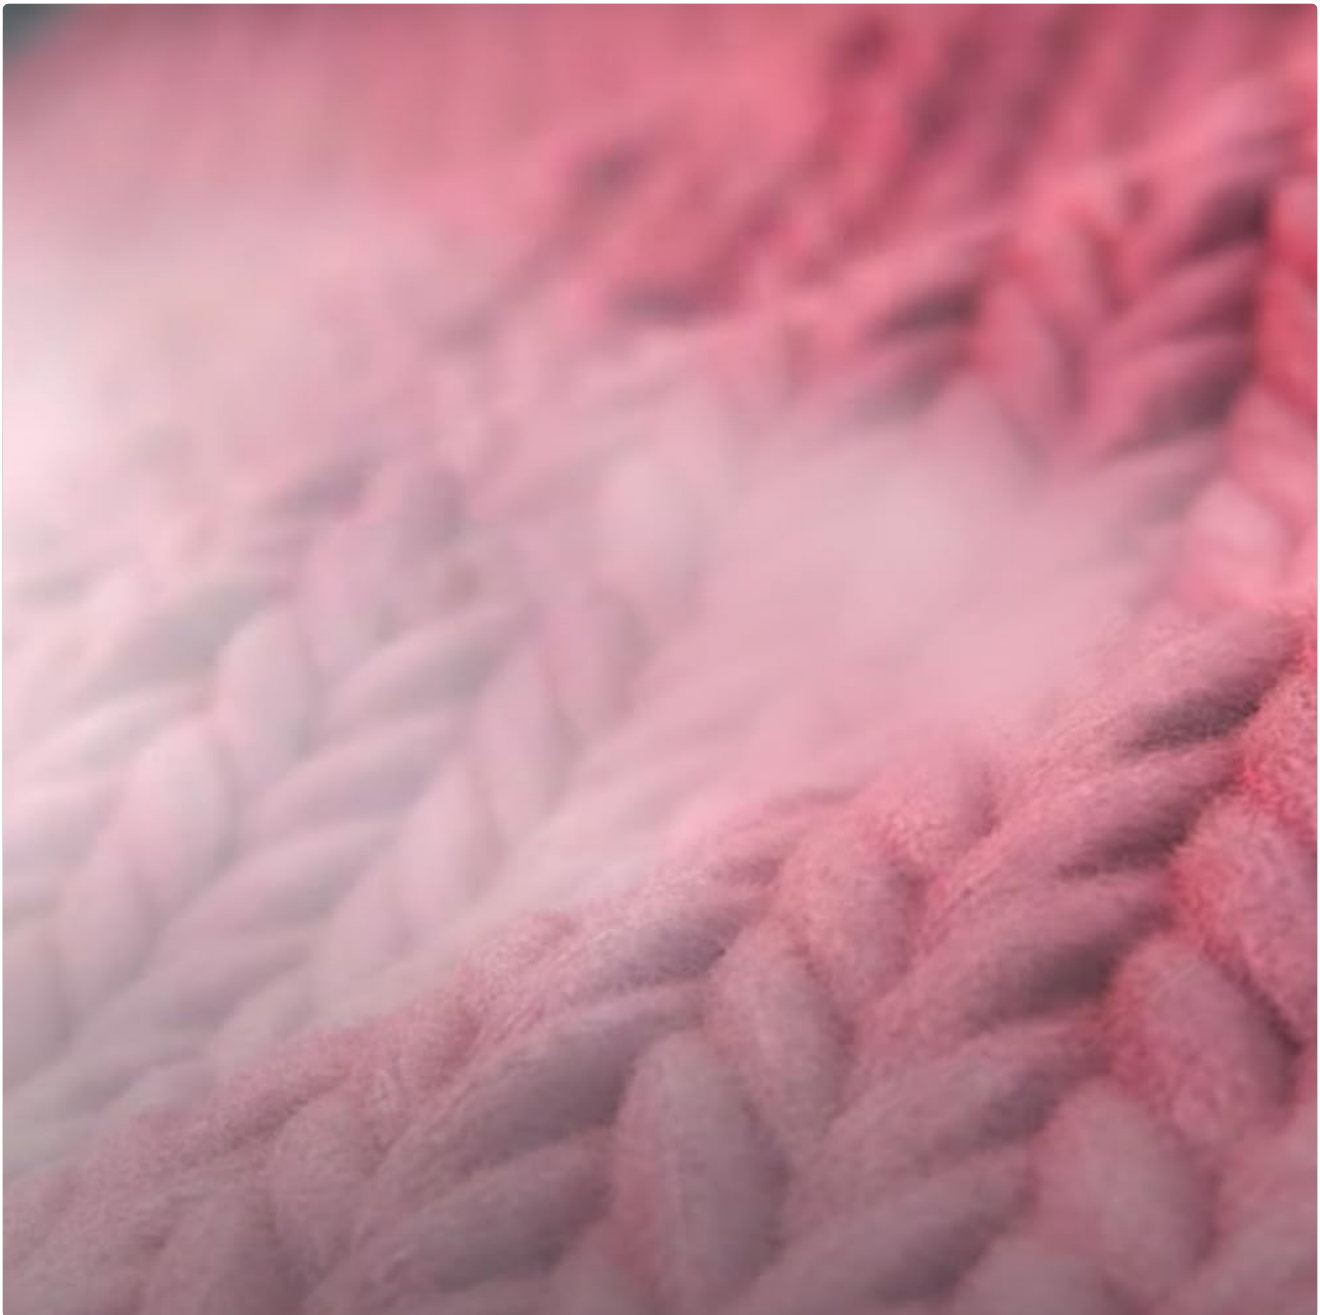


Image 5.2: Visual representation of the SteamMax function, showing steam penetrating fabric for enhanced cleaning and sanitization.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

6.1 Drum Cleaning (Drum Clean Program)

The Drum Clean program helps maintain the drum's hygiene and prevents odors.

1. Ensure the drum is empty.
2. Select the 'Limpieza tambor' (Drum Clean) program.
3. Start the cycle. No detergent is typically needed for this program, or a specific drum cleaner can be used if recommended by the manufacturer.

6.2 Cleaning the Detergent Dispenser

1. Pull out the detergent dispenser drawer completely.
2. Remove any removable parts and rinse them under running water.
3. Clean the drawer housing with a brush.
4. Reassemble and reinsert the drawer.

6.3 Cleaning the Drain Pump Filter

The drain pump filter should be cleaned periodically to prevent blockages.

1. Open the filter cover at the bottom front of the machine.
2. Place a shallow container beneath the filter to catch any residual water.
3. Carefully unscrew the filter counter-clockwise and remove it.
4. Clean the filter under running water, removing any lint or debris.
5. Screw the filter back in clockwise and close the cover.

6.4 Exterior Cleaning

Wipe the exterior of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

Before contacting service, refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Door not closed; Program not selected; Delay Start active.	Check power connection; Ensure door is latched; Select a program; Cancel or wait for Delay Start.
No water intake	Water tap closed; Water inlet hose kinked; Water pressure too low.	Open water tap; Straighten hose; Check household water pressure.
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Check and clear drain hose; Clean drain pump filter.
Excessive vibration/noise	Transport bolts not removed; Machine not level; Uneven load.	Remove transport bolts; Adjust feet to level machine; Redistribute laundry evenly.
Detergent residue in dispenser	Insufficient water pressure; Detergent caked; Dispenser dirty.	Check water pressure; Use less detergent; Clean dispenser regularly.

8. SPECIFICATIONS

Detailed technical specifications for the Cecotec Bolero Dresscode 8500 Inverter Washing Machine.

Feature	Specification
---------	---------------

Feature	Specification
Brand	Cecotec
Model Number	2466
Capacity	8 Kilograms
Maximum Spin Speed	1400 rpm
Energy Efficiency Class	A
Motor Type	Inverter Plus
Number of Programs	16
Special Functions	SteamMax, Allergy Care, Drum Clean, Delay Start, Stop&Go, Kid Lock
Dimensions (HxWxD)	85 x 60 x 52 cm
Weight	57.2 Kilograms
Control Type	Knob, Touch Buttons
Material	Aluminum (Drum)

Ficha de información del producto

REGLAMENTO DELEGADO (UE) 2019/2014 DE LA COMISIÓN en relación con el etiquetado energético de lavadoras y lavadoras-secadoras domésticas.

Nombre del proveedor o marca comercial: Cecotec Innovaciones, S.L.

Dirección del proveedor: C/ de la Pinadeta, s/n 46930 Quart de Poblet (Valencia) SPAIN

Identificador del modelo: 02466 Bolero DressCode 8500 Inverter A

Parámetros generales del producto:

Parámetro	Valor	Parámetro	Valor
Capacidad (kg)	8,0	Dimensiones en cm	Altura 85
			Ancho 60
			Profundidad 52
EEIW (a)	52,0	Clase de eficiencia energética (a)	A (c)
Índice de eficiencia de lavado (a)	1,031	Efectividad del aclarado (g/kg) (a)	5,0
Consumo de energía en kWh por ciclo, basado en el programa eco 40-60. El consumo real de energía depende de las condiciones de utilización del aparato	0,473	Consumo de agua en litros por ciclo, basado en el programa eco 40-60. El consumo real de agua depende de las condiciones de utilización del aparato y de la dureza del agua	48
Temperatura máxima de los textiles tratados (°C) (a)	Capacidad 34	Humedad residual (%) (a)	Capacidad 53,9
	Media 28		Media 53,9
	Un cuarto 23		Un cuarto 53,9
Velocidad de centrifugado (rpm) (a)	Capacidad 1400	Clase de eficiencia de centrifugado y secado (a)	B (c)
	Media 1400		
	Un cuarto 1400		
Duración del programa (h:min) (a)	Capacidad 3:28	Tipo	De libre instalación
	Media 2:48		
	Un cuarto 2:20		
Ruido aéreo emitido expresado durante la fase de centrifugado (dB(A) re 1 pW) (a)	76	Ruido aéreo emitido expresado (fase de centrifugado) (a)	B (c)
Apagado (W)	0,50	Modo standby (W)	N/A
Inicio diferido (W) (si procede)	4,00	Modo preparado en red (W) (si procede)	N/A

Duración mínima de la garantía ofrecida por el proveedor (b): 36 meses

Este producto ha sido diseñado para liberar iones de plata durante el ciclo de lavado: NO

Información adicional:

Enlace al sitio web del proveedor, en el que se encuentra la información contemplada en el punto 9 del anexo II del Reglamento (UE) 2019/2023 de la Comisión: www.cecotec.es

- (a) Para el programa ECO 40-60
- (b) Los cambios en estos elementos no se considerarán pertinentes a los efectos del apartado 4 del artículo 4 del Reglamento (UE) 2017/1369
- (c) Si la base de datos de productos genera automáticamente el contenido definitivo de esta celda, el proveedor no deberá adjuntar estos datos.

9. WARRANTY AND SUPPORT

Your Cecotec Bolero Dresscode 8500 Inverter Washing Machine comes with a manufacturer's warranty.

9.1 Warranty Information

The minimum warranty period offered by the provider is **36 months** from the date of purchase. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, spare parts, or warranty claims, please contact Cecotec customer service. You can find contact information on the official Cecotec website or through your retailer.

For more information, visit the official Cecotec website: www.cecotec.com

© 2023 Cecotec. All rights reserved.

Related Documents


	Manual de Usuario Lavadora Cecotec Bolero DressCode 8500 Inverter A / Steel A Manual de usuario completo para las lavadoras Cecotec Bolero DressCode 8500 Inverter A y Steel A. Incluye instrucciones de seguridad, instalación, funcionamiento, mantenimiento, solución de problemas y especificaciones técnicas.
	Cecotec Bolero DressCode Lavadoras: Manual de Instrucciones y Guía de Uso Manual completo de instrucciones para las lavadoras Cecotec Bolero DressCode (modelos 7610, 8610, 9610, 10610 Inverter). Incluye guías de instalación, operación, seguridad, mantenimiento y especificaciones técnicas.
	Bolero DressCode Washing Machine Manuals Instruction manual for the Bolero DressCode 6000, 7000, and 8000 washing machines by Cecotec. Includes safety instructions, operation, cleaning, maintenance, and troubleshooting.



[Manual de Instrucciones: Cecotec Bolero Dresscode 8300/9300 Inverter Max A Lavadora](#)

Guía completa de instrucciones para las lavadoras Cecotec Bolero Dresscode 8300 y 9300 Inverter Max A. Aprenda sobre instalación, funcionamiento, mantenimiento y solución de problemas para optimizar el uso de su electrodoméstico.

Documents - Cecotec – Bolero Dresscode 8500

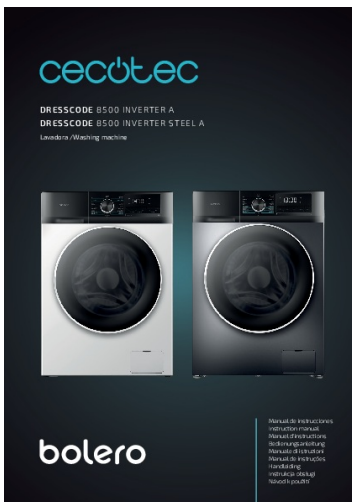

[Manual de Usuario Lavadora Cecotec DRESSCODE 8500 INVERTER A / STEEL A](#)

Manual de usuario completo para las lavadoras Cecotec DRESSCODE 8500 INVERTER A y STEEL A, que cubre seguridad, instalación, funcionamiento, mantenimiento y solución de problemas. Disponible en varios idiomas.

lang:it **score:54** filesize: 3.95 M page_count: 128 document date: 2023-06-16



[Manual de Usuario Lavadora Cecotec Bolero DressCode 8500 Inverter A / Steel A](#)

Manual de usuario completo para las lavadoras Cecotec Bolero DressCode 8500 Inverter A y Steel A. Incluye instrucciones de seguridad, instalación, funcionamiento, mantenimiento, solución de problemas y especificaciones técnicas.

lang:it **score:46** filesize: 3.95 M page_count: 128 document date: 2023-06-16



[pdf]

Catálogo Bolero Lavadoras 2023 CECOTEC EN 1cdn cecotec cloud s3 amazonaws media IFA2023 1 ||| BOLERO DRESSCODE Washing machines Efficient washing that takes care of your world. Bolero DressCod ... function 76 dB 15 N N N S S S N S S S N N N N N N N N N N N N BOLERO DRESSCODE 8300 INVERTER MAXX A **BOLERO DRESSCODE 8500 INVERTER A** 2792 8 kg Inverter 1400 rpm A 76 dB 15 N N N S S S N S S S N N N N...


lang:en score:27 filesize: 12.05 M page_count: 27 document date: 2023-09-01



[Cecotec Bolero Dresscode 7500 Inverter A Washing Machine User Manual](#)

Comprehensive user manual for the Cecotec Bolero Dresscode 7500 Inverter A washing machine, covering safety instructions, installation, operation, maintenance, and troubleshooting.

lang:it score:26 filesize: 3.26 M page_count: 115 document date: 2023-06-16

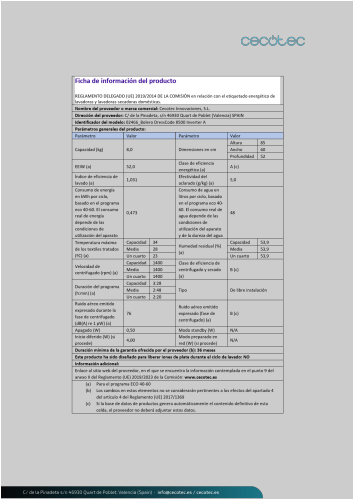

[pdf]

02466 Roberto Cortina Ficha de producto Bolero DressCode 8500 Inverter A Lavadora 8 Kg Cecotec

bolero dresscode inverter a productenergyinformation 0 spec url es cdn cecotec cloud media files |||

Ficha de informacin del producto REGLAMENTO DELEGADO UE 2019/2014 DE LA COMISIN en relacin con el etiquetado energtico de lavadoras y lavadoras-secadoras domsticas. Nombre del proveedor o marca comercial: Cecotec Innovaciones, S.L. Direccin del proveedor: C/ de la Pinadeta, s/n 46930 Quart de P...

lang:es score:25 filesize: 209.83 K page_count: 1 document date: 2023-05-10

[illegible]

lang:es score:25 filesize: 209.88 K page_count: 1 document date: 2023-05-10