

Cecotec 08388

Cecotec Conga Rockstar Deepclean Flex Cordless Vacuum Cleaner User Manual

Model: 08388



1. INTRODUCTION

Thank you for choosing the Cecotec Conga Rockstar Deepclean Flex Cordless Vacuum Cleaner. This 3-in-1 appliance is designed for efficient cleaning, functioning as a vertical, broom, and handheld vacuum. It features a powerful motor, long-lasting battery, and a flexible tube for enhanced maneuverability. Please read this manual thoroughly before use to ensure proper operation and maintenance.



Image 1.1: The Cecotec Conga Rockstar Deepclean Flex in its vertical, broom, and handheld configurations, alongside its accessories.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance. Read all instructions before using this vacuum cleaner.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

- Do not use without the dust cup and/or filters in place.
- Turn off the appliance before connecting or disconnecting the motorized brush.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not handle the charger or appliance with wet hands.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Exercise extra care when cleaning on stairs.

3. PRODUCT COMPONENTS

The Cecotec Conga Rockstar Deepclean Flex comes with the following components:

- Main vacuum unit with digital display
- Extension tube with ErgoFlex system
- Motorized brush with Jalisco brush and LED lights
- Corner accessory
- 2-in-1 accessory (upholstery and furniture brush)
- Wall mount bracket
- Power adapter/charger



Image 3.1: Included accessories: Jalisco brush, corner tool, 2-in-1 tool, and wall mount.

4. SETUP AND INITIAL USE

4.1 Assembly

1. **Attach the Extension Tube:** Insert the extension tube into the main vacuum unit until it clicks securely into place.
2. **Attach the Motorized Brush:** Connect the motorized brush head to the other end of the extension tube, ensuring it locks firmly.
3. **Alternative Attachments:** For handheld use, attach the corner accessory or 2-in-1 accessory directly to the main unit.

4.2 Charging the Battery

Before first use, fully charge the vacuum cleaner's battery. The lithium-ion battery provides up to 40-45 minutes of autonomy and requires approximately 4-5 hours for a full charge.

- Connect the power adapter to the charging port on the main unit.
- Plug the adapter into a power outlet.
- The digital display on the main unit will indicate the charging status.
- Once fully charged, disconnect the adapter.



Image 4.1: Digital display showing battery level and mode.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Mode Selection

- Press the power button on the main unit to turn the vacuum cleaner on or off.
- The vacuum features two operating modes: **Eco** and **Turbo**.
- Press the mode selection button to switch between Eco (extended battery life, standard cleaning) and Turbo (maximum suction power for tough dirt and carpets).
- The digital display will show the selected mode.



Image 5.1: Two cleaning programs: Eco and Turbo.

5.2 Using the ErgoFlex System

The ErgoFlex system allows the extension tube to bend, making it easier to clean under furniture and in hard-to-reach areas without excessive bending.

- Locate the ErgoFlex joint on the extension tube.
- Press the release button on the joint to bend the tube.
- Adjust the angle as needed to clean under low obstacles.
- Return the tube to its straight position until it locks for standard cleaning.



Image 5.2: Utilizing the ErgoFlex system to clean under furniture.

5.3 Using Attachments

- **Motorized Jalisco Brush:** Ideal for all floor types, including hard floors and carpets. The integrated LED lights illuminate dust and debris for thorough cleaning.
- **Corner Accessory:** Use for narrow gaps, corners, and edges.
- **2-in-1 Accessory:** Use the brush for delicate surfaces like upholstery or furniture, and the nozzle for general dusting.



Image 5.3: Motorized brush with LED lights for enhanced visibility.

6. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Emptying the Dust Tank

- Ensure the vacuum cleaner is turned off.
- Press the dust tank release button to detach it from the main unit.
- Open the dust tank lid and empty the contents into a waste bin.
- Close the lid and reattach the dust tank to the main unit until it clicks.

6.2 Cleaning Filters

The vacuum cleaner uses a Parallel Cyclone System and HEPA filtration. Clean the filters regularly to maintain suction power.

- Remove the dust tank as described above.

- Carefully remove the pre-filter and HEPA filter from the dust tank.
- Tap the filters gently to remove loose dust. For a deeper clean, rinse them under running water.
- Allow filters to air dry completely for at least 24 hours before reinserting them. Do not use a dryer or direct heat.
- Reassemble the filters and dust tank.



Image 6.1: Parallel Cyclone System for efficient dust separation.

6.3 Cleaning the Motorized Brush

- Turn off the vacuum and detach the motorized brush head.
- Locate the brush roll release mechanism (usually a latch or screw).
- Remove the brush roll and carefully cut away any tangled hair or fibers using scissors.
- Clean the brush housing and reinsert the brush roll, ensuring it is securely locked.

7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is depleted Power button not pressed correctly	Charge the battery Ensure the power button is fully pressed
Low suction power	Dust tank is full Filters are clogged Hose/tube is blocked Brush roll is jammed	Empty the dust tank Clean or replace filters Check and clear any blockages Clean the brush roll
Motorized brush not spinning	Brush roll is jammed Connection issue	Clean the brush roll of tangled debris Ensure the brush head is securely attached
Short battery life	Battery not fully charged Operating in Turbo mode continuously Aging battery	Ensure battery is fully charged Use Eco mode for longer runtime Contact customer support for battery replacement options

8. PRODUCT SPECIFICATIONS

Feature	Specification
Model Number	08388
Type	3-in-1 Cordless (Vertical, Broom, Handheld)
Power	215 Watts
Suction Power	21 kPa
Battery	2200 mAh, 25.2 Volts Lithium-Ion
Autonomy	Up to 40-45 minutes
Charging Time	4-5 hours
Dust Tank Capacity	500 Milliliters
Filter Type	HEPA Filter
Dimensions (L x W x H)	44 x 34.5 x 19 cm
Weight	2.47 Kilograms
Special Features	ErgoFlex System, Parallel Cyclone System, Digital Display, LED lights on brush

9. WARRANTY AND SUPPORT


Cecotec products are manufactured to high-quality standards. For information regarding your product's warranty, please refer to the warranty card included in the packaging or visit the official Cecotec website. Spare parts availability is typically 10 years from the date of purchase.






For technical support, troubleshooting assistance, or to inquire about spare parts, please contact Cecotec customer service through their official channels. Contact details can usually be found on the product packaging or the Cecotec website.



© 2023 Cecotec. All rights reserved.

Related Documents - 08388

	<p>Conga RockStar Micro 6000 & 8000: Manual de Instrucciones y Guía de Usuario</p> <p>Manual completo de instrucciones para los aspiradores de mano Cecotec Conga RockStar Micro 6000 y Conga RockStar Micro 8000. Incluye guías de seguridad, funcionamiento, limpieza, mantenimiento y especificaciones técnicas.</p>
---	---

	<p>Manual de Instrucciones Conga Rockstar 2500 Thunder Jalisco</p> <p>Guía completa de instrucciones para el aspirador vertical Conga Rockstar 2500 Thunder Jalisco de Cecotec. Aprenda a usar, limpiar y mantener su aspirador para un rendimiento óptimo.</p>
	<p>Cecotec Conga Rockstar 6500 Century ErgoWet Animal Instruction Manual</p> <p>Comprehensive instruction manual for the Cecotec Conga Rockstar 6500 Century ErgoWet Animal upright vacuum cleaner, covering safety, assembly, operation, cleaning, maintenance, and troubleshooting.</p>
	<p>Cecotec Conga Rockstar 1500 Ray Jalisco Manual de Instrucciones</p> <p>Manual de instrucciones para el aspirador vertical Cecotec Conga Rockstar 1500 Ray Jalisco. Incluye instrucciones de seguridad, uso, limpieza, mantenimiento y solución de problemas.</p>
	<p>Cecotec Conga Rockstar Hand 8.4V Instruction Manual</p> <p>Comprehensive instruction manual for the Cecotec Conga Rockstar Hand 8.4V handheld vacuum cleaner, covering safety, operation, maintenance, troubleshooting, and technical specifications.</p>
	<p>Cecotec Conga Robot Vacuum Cleaners: Ultra-Powerful & Smart Cleaning Solutions</p> <p>Explore the advanced range of Cecotec Conga robot vacuum cleaners, featuring ultra-powerful suction, intelligent navigation, and versatile 4-in-1 cleaning capabilities for a spotless home.</p>