

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Cecotec](#) /
- › [Cecotec HydroBoost 1400 Essential High Pressure Washer User Manual](#)

## Cecotec 08135

# Cecotec HydroBoost 1400 Essential High Pressure Washer

## USER MANUAL

[Features](#)   [Setup](#)   [Introduction](#)   [Safety Instructions](#)   [Package Contents](#)   [Product](#)  
[Operation](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. Introduction

Thank you for choosing the Cecotec HydroBoost 1400 Essential High Pressure Washer. This manual provides important information regarding the safe operation, assembly, maintenance, and troubleshooting of your new pressure washer. Please read this manual thoroughly before first use and keep it for future reference. This powerful and efficient pressure washer is designed for various cleaning tasks around your home, garden, and car.

## 2. Safety Instructions

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- **Read all instructions:** Familiarize yourself with the controls and proper use of the pressure washer.
- **Wear appropriate safety gear:** Always wear safety glasses or goggles and protective clothing when operating the unit.
- **Electrical safety:** Ensure the power outlet is properly grounded. Do not operate the unit with a damaged cord or plug. Keep all connections dry and off the ground.
- **Water pressure:** Never direct the water jet at people, pets, or electrical equipment. The high pressure can cause serious injury.
- **Stability:** Operate the pressure washer on a stable, level surface to prevent tipping.
- **Children and bystanders:** Keep children and bystanders away from the operating area.
- **Chemicals:** Use only detergents recommended for pressure washers. Follow detergent manufacturer's instructions for use and disposal.
- **Maintenance:** Disconnect the power supply before performing any maintenance or cleaning.

## 3. Package Contents

---

Carefully unpack all items and ensure you have received all components listed below. If any parts are missing or damaged, contact Cecotec customer support.



*Image: The Cecotec HydroBoost 1400 Essential High Pressure Washer unit, high-pressure gun with lance, and soap bottle attachment.*

- Cecotec HydroBoost 1400 Essential Pressure Washer Unit
- High-Pressure Gun
- Lance
- High-Pressure Hose
- Water Inlet Connector
- Adjustable Foam Soap Bottle
- User Manual (this document)

## 4. Product Features

---

The Cecotec HydroBoost 1400 Essential is engineered with features to provide efficient and reliable cleaning performance:

- **Powerful 1400W Motor:** Delivers strong pressure to effectively remove stubborn dirt.
- **105 Bar Admitted Pressure:** Ideal for cleaning decks, balconies, patios, and pool curbs.
- **High Flow Rate (408 litres/hour):** Enables faster cleaning of larger surfaces.
- **HardPump Aluminium Pump:** Ensures optimal reliability and extended use times compared to composite pumps.
- **Oversized Handle:** Designed for effortless transport and convenient maneuverability.
- **9m Action Radius:** Provides comfortable use and complete freedom of movement during cleaning tasks.
- **Anti-Impurity Filter:** Facilitates quick and easy connection of the water hose while protecting the pump.
- **Quick Click System:** Allows for fast and easy connection of the high-pressure hose and lance to the gun.
- **Auto Start-Stop System:** Trigger-activated system for optimum safety and control, protecting the motor and conserving water.
- **Adjustable Foam Soap Bottle:** For efficient application of detergents.

## 5. Setup

---

Follow these steps to set up your pressure washer before first use:

1. **Position the Unit:** Place the pressure washer on a flat, stable surface near a water source and a grounded electrical outlet.
2. **Connect Water Supply:**
  - Attach a standard garden hose (not included) to the water inlet connector on the pressure washer. Ensure the anti-impurity filter is in place.
  - Connect the other end of the garden hose to your water tap.
  - Turn on the water tap fully to ensure a steady water flow to the unit.
3. **Assemble High-Pressure Gun and Lance:**
  - Connect the lance to the high-pressure gun using the quick click system. Ensure it clicks securely into place.
  - Connect the high-pressure hose to the high-pressure gun.
  - Connect the other end of the high-pressure hose to the outlet on the pressure washer unit.



*Image: Hands demonstrating the quick and easy connection of the lance to the high-pressure gun.*

4. **Purge Air from System:** Before plugging in the unit, squeeze the trigger on the high-pressure gun to allow water to flow through the system and expel any trapped air. Continue until a steady stream of water emerges.
5. **Connect Power:** Plug the power cord into a grounded electrical outlet.



*Image: A person using the Cecotec HydroBoost 1400 pressure washer to clean a patio, demonstrating typical setup and operation.*

## 6. Operating Instructions

---

Once the unit is set up, you can begin your cleaning tasks.


### 6.1 Basic Operation

1. Ensure the water supply is fully open and the unit is plugged in.
2. Turn on the pressure washer's power switch. The auto start-stop system means the motor will only run when the trigger is squeezed.
3. Aim the lance at the surface to be cleaned, keeping a safe distance. Start with a wider spray pattern or greater distance and gradually move closer or adjust the nozzle for more concentrated cleaning if needed.
4. Squeeze the trigger on the high-pressure gun to begin spraying. Release the trigger to stop the flow and the motor will automatically shut off.
5. Work in sections, overlapping slightly to ensure even cleaning.

### 6.2 Using the Adjustable Foam Soap Bottle

The included adjustable foam soap bottle allows for effective application of detergents.


1. Fill the soap bottle with a pressure washer-safe detergent, following the detergent manufacturer's dilution instructions.
2. Attach the foam soap bottle to the high-pressure gun in place of the lance.
3. Adjust the nozzle on the soap bottle to control the foam concentration.
4. Apply the foam evenly to the surface you wish to clean. Allow the detergent to dwell for the recommended time (check detergent instructions).
5. Remove the soap bottle and reattach the lance. Rinse the surface thoroughly with clean water.

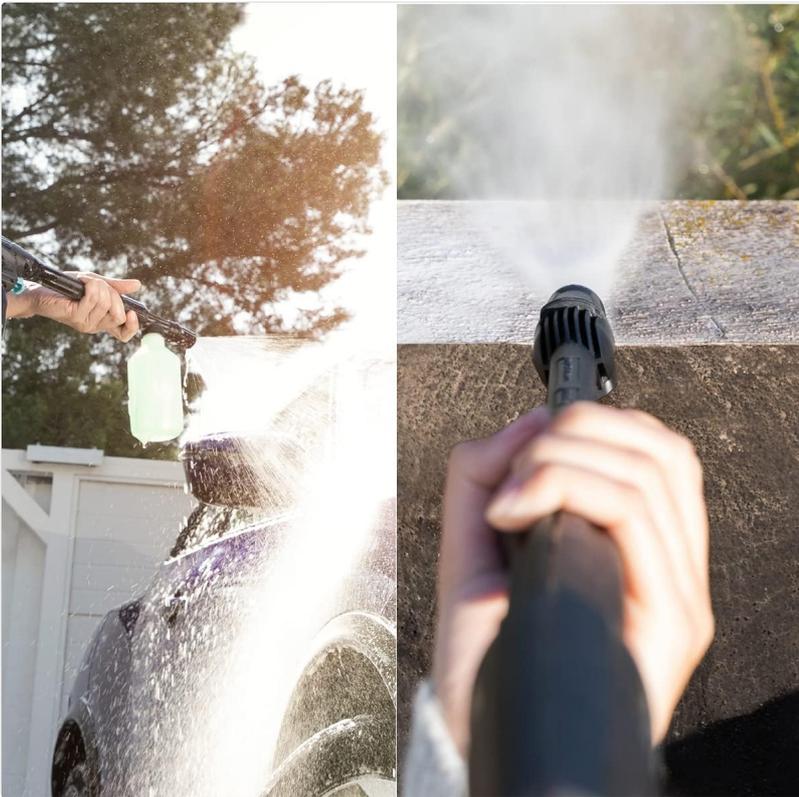

*Image: A man applying foam to a car with the pressure washer (left), and a split image demonstrating both foam application for car washing and direct high-pressure cleaning for hard surfaces (right).*

### 6.3 Cleaning Applications

- **Patios and Decks:** Use a sweeping motion, keeping the nozzle a consistent distance from the surface.
- **Vehicles:** Apply foam, let it soak, then rinse thoroughly. Avoid spraying directly into engine compartments or sensitive electrical components.
- **Garden Furniture:** Use a lower pressure or greater distance to avoid damaging delicate surfaces.
- **Bicycles:** Maintain a safe distance to prevent damage to bearings and seals.

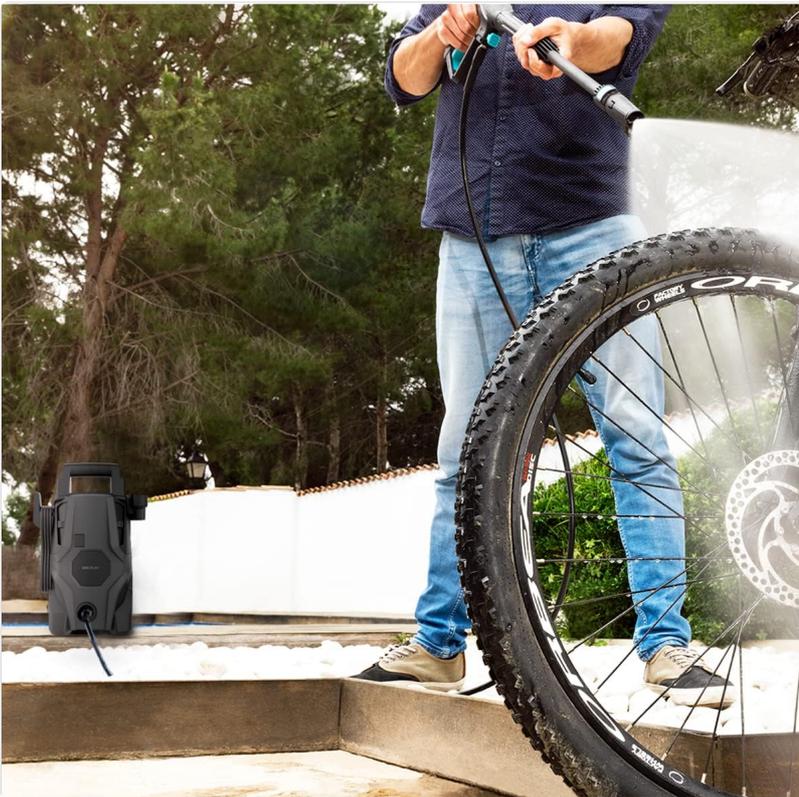

*Image: A woman cleaning a pool deck, illustrating the 9-meter action radius (left). A man cleaning a bicycle, demonstrating another common application (right).*

## 7. Maintenance

---

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

### 7.1 After Each Use

- **Turn Off and Disconnect:** Turn off the power switch, unplug the unit, and turn off the water supply.
- **Relieve Pressure:** Squeeze the trigger on the gun to release any remaining pressure in the system.

- **Drain Water:** Disconnect all hoses and drain any water from the pump, hoses, and gun.
- **Clean Unit:** Wipe down the exterior of the unit with a damp cloth.
- **Clean Water Inlet Filter:** Regularly check and clean the anti-impurity filter at the water inlet to prevent blockages.

## 7.2 Storage

Store the pressure washer in a dry, frost-free area. Freezing temperatures can damage the pump and hoses.



*Image: Rear view of the pressure washer, illustrating the integrated storage for the high-pressure hose and gun.*

## 8. Troubleshooting

If you encounter issues with your pressure washer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Unit does not start	No power supply; Power switch off; Thermal overload activated.	Check power connection and outlet; Turn power switch ON; Allow unit to cool down for 30 minutes.
Low pressure	Insufficient water supply; Clogged water inlet filter; Air in pump; Clogged nozzle.	Ensure water tap is fully open; Clean water inlet filter; Purge air from system (see Setup); Clean or replace nozzle.
Motor runs continuously when trigger is not squeezed	Air in pump; Leak in system; Bypass valve issue.	Purge air from system; Check all connections for leaks; Contact customer support if issue persists.
Water leaks from connections	Loose connections; Damaged O-rings.	Tighten all connections; Inspect and replace damaged O-rings.

If the problem persists after attempting these solutions, please contact Cecotec customer support.

## 9. Specifications

Technical specifications for the Cecotec HydroBoost 1400 Essential High Pressure Washer:

Attribute	Value
Model Number	08135
Power	1400 W
Maximum Pressure	105 Bars
Flow Rate	408 litres/hour
Action Radius	9 meters
Pump Material	Aluminium (HardPump)
Power Source Type	Corded Electric
Product Dimensions	36 x 34 x 58 cm
Item Weight	5.43 kg
Manufacturer	Cecotec

## 10. Warranty and Support

Cecotec products are manufactured to high quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Cecotec website. In case of technical issues, missing parts, or warranty claims, please contact Cecotec customer support directly. Have your model number (08135) and purchase details ready when contacting support.

**Cecotec Official Website:** [www.cecotec.com](http://www.cecotec.com) (Note: This is a placeholder URL, please refer to your product documentation for the exact support contact information.)

© 2025 Cecotec. All rights reserved.  
This manual is subject to change without notice.

### Related Documents - 08135

	<p><a href="#">Manual de Usuario Cecotec Hydroboost 1400 Essential Hidrolimpiadora</a></p> <p>Manual completo de usuario para la hidrolimpiadora Cecotec Hydroboost 1400 Essential. Incluye instrucciones de seguridad, montaje, funcionamiento, mantenimiento, solución de problemas y especificaciones técnicas en múltiples idiomas.</p>
---	---

	<p><a href="#">Cecotec HydroBoost 1600 Car&amp;Garden Pressure Washer Manual</a></p> <p>Comprehensive user manual for the Cecotec HydroBoost 1600 Car&amp;Garden pressure washer, covering safety instructions, operation, maintenance, and troubleshooting.</p>
	<p><a href="#">Cecotec HidroBoost 1400 EasyMove Pressure Washer Manual</a></p> <p>Instruction manual for the Cecotec HidroBoost 1400 EasyMove pressure washer, covering safety instructions, operation, cleaning, maintenance, troubleshooting, and technical specifications.</p>
	<p><a href="#">Cecotec HydroSteam 1040 Active &amp; Soap Instruction Manual</a></p> <p>Comprehensive guide for the Cecotec HydroSteam 1040 Active &amp; Soap steam cleaner, covering safety instructions, parts, assembly, operation, cleaning, maintenance, troubleshooting, and technical specifications.</p>
	<p><a href="#">Cecotec HydroSteam 1040 Active &amp; Soap Instruction Manual</a></p> <p>Comprehensive instruction manual for the Cecotec HydroSteam 1040 Active &amp; Soap steam cleaner, covering safety instructions, parts and components, product assembly, operation, cleaning and maintenance, troubleshooting, technical specifications, disposal, and warranty information.</p>
	<p><a href="#">Manual de Usuario Motocicleta Eléctrica Cecotec Halo</a></p> <p>Guía completa para la motocicleta eléctrica Cecotec Halo. Aprenda sobre su funcionamiento, seguridad, mantenimiento y especificaciones técnicas para un uso óptimo y seguro.</p>



### [Manual de Usuario Cecotec Hydroboost 1400 Essential Hidrolimpiadora](#)

Manual completo de usuario para la hidrolimpiadora Cecotec Hydroboost 1400 Essential. Incluye instrucciones de seguridad, montaje, funcionamiento, mantenimiento, solución de problemas y especificaciones técnicas en múltiples idiomas.

lang:it score:29 filesize: 1.62 M page\_count: 132 document date: 2023-05-18



### [\[pdf\] Accessories](#)

Catálogo Hidrolimpiadoras 2023 CECOTEC EN cdn cecotec cloud s3 amazonaws media IFA2023 ||| HYDROBOOST Pressure washers Ultra-powerful outdoor cleaning. Discover HydroBoost, the range of pre ... n. Standard nozzle. Anti-impurities filter. Adjustable soap bottle. Instruction manual. 8435484**081351** Box 18435484**081358** Master **08135** Discover the range 15 HydroBoost 1400 EasyGo pressure...

lang:en score:16 filesize: 9.45 M page\_count: 15 document date: 2023-03-31



### [\[pdf\]](#)

C T ES Agosto 23 CECOTEC cdn cecotec cloud s3 amazonaws media IFA2023 ||| CATLOGO GENERAL IFA 2023 Introduccin de la compaa CECOTEC es una compaa joven y disruptiva que, en ... de instrucciones. 26 x 21 x 42 cm, 5.6 kg caja 60 uds/palet 28 x 19.5 x 40.3 cm 4.76 kg 8435484**081351** caja 18435484**081358** mster **08135** ASPIRACIN Y LIMPIEZA Enero 23 Hidrolimpiadora HydroBoo...

lang:es score:8 filesize: 88.75 M page\_count: 2028 document date: 2023-09-01