

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cecotec](#) /

› [Cecotec AirClima 12000 Smartfresh Split Air Conditioner User Manual](#)

Cecotec 08182

Cecotec AirClima 12000 Smartfresh Split Air Conditioner User Manual

Model: 08182 | Brand: Cecotec

1. IMPORTANT SAFETY INSTRUCTIONS

Please read this manual carefully before operating your Cecotec AirClima 12000 Smartfresh air conditioner. Keep this manual for future reference.

- Ensure the unit is installed by a qualified professional to prevent electric shock, fire, or other injuries.
- Do not attempt to repair or modify the unit yourself. Contact authorized service personnel for all repairs.
- Keep children away from the unit and remote control.
- Do not insert objects into the air outlet or inlet.
- Ensure the power supply matches the unit's specifications.
- Turn off the power supply before cleaning or performing any maintenance.
- Use only the specified refrigerant (R32) for this unit.

2. PRODUCT OVERVIEW

The Cecotec AirClima 12000 Smartfresh is a split air conditioning system designed for efficient cooling and heating of spaces up to 22 m². It features an Inverter system for optimized energy consumption and a DC motor for enhanced efficiency.



Figure 2.1: Indoor Unit. This image shows the sleek white indoor unit of the air conditioner, designed to be mounted on a wall, with a digital display on the right side showing "26°".



Figure 2.2: Outdoor Unit (Compressor). This image displays the white outdoor compressor unit, featuring a large circular fan grille on the left and a rectangular panel with the Cecotec logo on the right.

Key Features:

- **12000 BTU Cooling Capacity:** Equivalent to 3000 frigories, suitable for areas up to 22 m².
- **Heat Pump Function:** Provides heating during colder months.
- **Inverter System:** Maximizes compressor efficiency by maintaining constant speed and temperature, extending unit lifespan.
- **LED Display:** Shows current settings for easy control.
- **Remote Control:** Convenient operation from a distance.
- **5 Operating Modes:** Automatic, Cooling, Ventilation, Heating, and Dehumidification.
- **8 Fan Speeds:** For customized comfort.
- **Special Functions:** Night mode (minimum noise), Eco mode (minimum consumption), Self-cleaning.
- **DC Motor:** Auto-regulates speed for maximum efficiency.
- **Removable and Washable Air Filter:** Helps prevent dust particles from re-entering the environment.
- **R32 Refrigerant Gas:** Environmentally friendly and efficient.

3. SETUP AND INSTALLATION

Installation of this split air conditioner requires specialized knowledge and tools. It is highly recommended that installation be performed by a certified HVAC professional to ensure proper functioning, safety, and compliance with local regulations.

General Installation Steps (for professional reference):

1. **Site Selection:** Choose appropriate locations for both indoor and outdoor units, considering air circulation, drainage, and noise levels.
2. **Mounting the Indoor Unit:** Securely mount the indoor unit on a wall, ensuring it is level and has adequate clearance.
3. **Mounting the Outdoor Unit:** Install the outdoor unit on a stable surface, ensuring proper ventilation and drainage.
4. **Refrigerant Piping:** Connect the indoor and outdoor units with refrigerant pipes, ensuring proper insulation and leak-free connections.
5. **Electrical Wiring:** Connect the power supply and communication cables according to the wiring diagram provided in the full technical manual.
6. **Drainage Pipe Installation:** Install the drainage pipe for condensate removal from the indoor unit.
7. **Vacuuming and Charging:** Evacuate air from the refrigerant lines and charge with the correct amount of R32 refrigerant.
8. **Test Run:** Perform a test run to verify proper operation of all functions.

Note: Incorrect installation can lead to refrigerant leakage, electric shock, fire, or water leakage.

4. OPERATING INSTRUCTIONS

Your AirClima 12000 Smartfresh air conditioner can be controlled using the included remote control. The LED display on the indoor unit provides visual feedback on current settings.



Figure 4.1: Remote Control. This image shows the white remote control with an orange backlit LCD screen displaying "25°C" and various function icons. Buttons for power, mode, fan speed, temperature adjustment, timer, and special functions are visible.

4.1. Basic Operation

- 1. Power On/Off:** Press the **Power** button on the remote control to turn the unit on or off.
- 2. Mode Selection:** Press the **Mode** button to cycle through the 5 operating modes:
 - **Automatic:** The unit automatically selects the appropriate mode (cooling or heating) based on the ambient temperature.
 - **Cooling:** Reduces room temperature.
 - **Heating:** Increases room temperature (heat pump function).

- **Ventilation:** Circulates air without cooling or heating.
- **Dehumidification:** Reduces humidity in the room.

3. **Temperature Adjustment:** Use the **Up** and **Down** arrow buttons to set your desired temperature.
4. **Fan Speed:** Press the **Fan Speed** button to select one of the 8 available fan speeds.

4.2. Advanced Functions

- **Timer Function:** The timer can be programmed for up to 24 hours to set desired operating times. Refer to the remote control section of the full manual for detailed timer setup.
- **Night Mode:** Activates a quiet operation mode, reducing noise levels for undisturbed sleep.
- **Eco Mode:** Optimizes operation for minimum energy consumption.
- **Self-cleaning:** Initiates an internal cleaning cycle to maintain unit hygiene.



Figure 4.2: Icons representing the LED display, 5 operating modes, and 8 fan speeds, highlighting key operational features.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your air conditioner. Always disconnect power before performing any maintenance.

5.1. Air Filter Cleaning

The air conditioner features a removable and washable air filter designed to capture dust particles. Clean the filter regularly (e.g., every two weeks, or more often depending on usage) to maintain air quality and unit efficiency.

1. **Turn off the unit** and disconnect it from the power supply.
2. **Open the front panel** of the indoor unit.
3. **Remove the air filters** by gently pulling them out.
4. **Clean the filters** with a vacuum cleaner or wash them with lukewarm water and a mild detergent.
5. **Rinse thoroughly** and allow the filters to dry completely in a shaded area before re-installing.
6. **Re-install the filters** and close the front panel.



Figure 5.1: Indoor unit with an overlay icon indicating the air filter and its function to prevent dust. This image shows the white indoor unit with a graphic overlay of a filter symbol, emphasizing the air purification feature.

5.2. Outdoor Unit Maintenance

Periodically check the outdoor unit for any obstructions (leaves, debris) around the fan and coils. Gently clean the exterior with a soft cloth. For internal cleaning or inspection, contact a professional technician.

6. TROUBLESHOOTING

Before contacting customer support, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Unit does not turn on	No power supply; Remote control batteries depleted.	Check power connection and circuit breaker; Replace remote control batteries.

Problem	Possible Cause	Solution
Insufficient cooling/heating	Dirty air filter; Doors/windows open; Incorrect mode selected; Obstruction of air flow.	Clean air filter; Close doors/windows; Select appropriate mode; Remove obstructions.
Unusual noise from outdoor unit	Loose parts; Debris in fan; Unit not level.	Contact a professional technician for inspection.
Water leakage from indoor unit	Clogged drainage pipe; Improper installation.	Check and clear drainage pipe; Contact a professional for inspection.
Remote control not working	Depleted batteries; Obstruction between remote and unit.	Replace batteries; Ensure clear line of sight to indoor unit.

If the problem persists after attempting these solutions, please contact Cecotec customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	08182
Cooling Capacity	12000 BTU (3000 frigories)
Coverage Area	Up to 22 m ²
Refrigerant Type	R32
Motor Type	DC Inverter
Energy Efficiency (SEER)	16
Indoor Unit Dimensions (L x W x H)	82 x 20 x 31 cm (approx.)
Indoor Unit Weight	9 kg (approx.)
Noise Level	60 Decibels (max)
Voltage	28 Volts
Special Functions	Remote control, Timer, Night mode, Eco mode, Self-cleaning

Note: The listed voltage of 28 Volts may refer to a specific internal component. Please refer to the product's main power label for the correct operating voltage (typically 220-240V for split AC units).

8. WARRANTY AND SUPPORT

Cecotec products are manufactured to high-quality standards and are covered by a warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Cecotec website.

For technical assistance, spare parts, or any inquiries regarding your AirClima 12000 Smartfresh air conditioner, please contact Cecotec customer support:

- **Website:** www.cecotec.com (Example link, actual link may vary)
- **Contact Information:** Refer to your product's packaging or the official website for the most up-to-date contact details.

Please have your model number (08182) and purchase date available when contacting support.

© 2026 Cecotec. All rights reserved.