

## Cecotec 08266

# Cecotec Ready Warm 2000 Now Mica Heater User Manual

Model: 08266

## 1. INTRODUCTION

---

Thank you for choosing the Cecotec Ready Warm 2000 Now Mica Heater. This manual provides essential information for the safe and efficient use of your new heater. Please read it thoroughly before operation and retain it for future reference.

The Cecotec Ready Warm 2000 Now is a 2000W mica heater designed to provide rapid and efficient heating for areas up to 25 m². It features an adjustable thermostat and two power levels (1000W and 2000W) for customized comfort. Its lightweight design and integrated wheels ensure easy portability between rooms.

## 2. SAFETY INSTRUCTIONS

---

To prevent personal injury or property damage, always observe basic safety precautions when using electrical appliances. This heater is equipped with a triple safety system, including automatic shutdown in case of tipping or overheating, and a protective grille.

- Read all instructions before using the heater.
- Do not use the heater near water or in damp environments.
- Ensure the voltage indicated on the rating label matches your mains voltage.
- Do not cover the heater or obstruct its air inlets/outlets.
- Keep flammable materials at least 1 meter away from the heater.
- Always unplug the heater when not in use or before cleaning.
- Do not insert objects into the grilles.
- Supervise children and individuals with reduced physical, sensory, or mental capabilities when the heater is in use.
- Do not use the heater if the cord or plug is damaged. Contact authorized service personnel for repairs.

## 3. PRODUCT COMPONENTS

---

Familiarize yourself with the main parts of your Cecotec Ready Warm 2000 Now Mica Heater.



**Figure 1:** Angled view of the Cecotec Ready Warm 2000 Now Mica Heater, showing the mica heating elements behind the protective grille, control knobs on the side, and wheels for portability.

1. Mica Heating Elements
2. Protective Grille
3. Control Panel (Thermostat and Power Selector)
4. Power Indicator Light
5. Base with Wheels

## 6. Power Cord and Plug



**Figure 2:** Front view of the heater, highlighting the mica heating elements glowing red when active, visible through the mesh grille.



**Figure 3:** Side view of the heater, showing the compact profile and the control panel on the right side.

## 4. SETUP

---

### 4.1 Unpacking

Carefully remove the heater from its packaging. Retain the packaging for storage or future transport. Check for any signs of damage. If the product is damaged, do not use it and contact customer support.

### 4.2 Assembly (if required)

The Cecotec Ready Warm 2000 Now Mica Heater typically comes pre-assembled with its base and wheels. If the wheels or base require attachment, follow these steps:

1. Place the heater upside down on a soft, flat surface to avoid scratching.
2. Align the wheel assemblies with the designated slots on the heater's base.
3. Secure the wheel assemblies using the provided screws. Ensure they are firmly attached.
4. Return the heater to an upright position.



**Figure 4:** The heater's lightweight design and integrated wheels allow for easy movement between rooms.

### 4.3 Placement

Place the heater on a firm, level surface. Ensure there is adequate clearance around the heater (at least 1 meter from walls, furniture, curtains, and other flammable materials) to allow for proper air circulation and prevent fire hazards. Do not place the heater directly below a power outlet.

## 5. OPERATING INSTRUCTIONS

---

The Cecotec Ready Warm 2000 Now Mica Heater offers simple and intuitive controls for optimal heating.



**Figure 5:** Close-up of a hand adjusting one of the two control knobs on the side panel of the heater.

## 5.1 Powering On and Off

1. Plug the power cord into a suitable electrical outlet. The power indicator light may illuminate.
2. To turn on the heater, rotate the lower control knob (Power Selector) to your desired power level:
  - I: 1000W (Low Power)
  - II: 2000W (High Power)
3. To turn off the heater, rotate the Power Selector knob to the "0" (Off) position and unplug the unit from the wall outlet.

## 5.2 Adjusting the Thermostat

The upper control knob functions as the adjustable thermostat. This allows you to set your desired room temperature.

1. Once the heater is powered on (Power Selector set to I or II), rotate the upper control knob (Thermostat) clockwise to increase the desired temperature setting, or counter-clockwise to decrease it.
2. The heater will cycle on and off to maintain the set temperature. When the room temperature reaches the set level, the

heater will temporarily stop heating. It will resume heating when the temperature drops below the set point.



**Figure 6:** Detailed view of the control panel, showing the upper thermostat knob and the lower power selector knob.

## 6. MAINTENANCE

---

Regular maintenance ensures the longevity and efficient operation of your heater.

### 6.1 Cleaning

- Always unplug the heater and allow it to cool completely before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Do not immerse the heater in water or any other liquid.
- Use a vacuum cleaner with a brush attachment to remove dust from the grilles.
- Ensure the heater is completely dry before plugging it back in.

### 6.2 Storage

When not in use, store the heater in a cool, dry place, preferably in its original packaging, to protect it from dust and damage. The heater features a foldable system for minimal space storage.

## 7. TROUBLESHOOTING

If you encounter issues with your heater, refer to the following troubleshooting guide. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in. Power selector set to "0". Thermostat set too low. Overheat protection activated. Tipping switch activated.	Ensure the power cord is securely plugged into a working outlet. Turn the power selector knob to "I" or "II". Increase the thermostat setting. Unplug the heater, let it cool for 10-15 minutes, then plug it back in. Ensure proper ventilation. Ensure the heater is on a stable, level surface.
Heater produces insufficient heat.	Power level set too low. Thermostat set too low. Room size exceeds coverage area.	Increase the power level to "II" (2000W). Increase the thermostat setting. Ensure the room size is within the recommended 25 m² coverage.
Unusual odor during initial use.	New appliance burning off manufacturing residues.	This is normal for the first few uses. Ensure good ventilation. The odor should dissipate quickly.

## 8. SPECIFICATIONS

Technical details for the Cecotec Ready Warm 2000 Now Mica Heater.

Feature	Detail
Brand	Cecotec
Model Number	08266
Power	2000 W (2 levels: 1000W / 2000W)
Heating Method	Radiant and Convection
Coverage Area	Up to 25 m²
Thermostat	Adjustable
Safety System	Triple (Auto-off for tip-over/overheat, protective grille)
Dimensions (L x W x H)	78 x 13.5 x 62.5 cm
Weight	4.3 kg
Color	Black
Power Source	Corded Electric



**Figure 7:** Rear view of the heater, showing the power cord exit point and the overall construction.









**Figure 8:** The heater positioned in a living room, demonstrating its compact size and suitability for various indoor spaces.

## 9. WARRANTY AND SUPPORT

Cecotec products are manufactured to high-quality standards. This product comes with a manufacturer's warranty. Please refer to the warranty card included in the packaging for specific terms and conditions.

Spare parts availability for this model is indicated as 10 years from the date of purchase. For technical assistance, repairs, or questions regarding your product, please contact Cecotec customer support through their official website or the contact information provided in your product documentation.

For more information, visit the official Cecotec website: [www.cecotec.com](http://www.cecotec.com)


	<p><a href="#">Cecotec Ready Warm 9820 Force Dual Fan Heater: User Manual and Specifications</a></p> <p>Comprehensive guide for the Cecotec Ready Warm 9820 Force Dual fan heater, covering safety instructions, operation, cleaning, maintenance, technical specifications, disposal, and warranty information.</p>
	<p><a href="#">Cecotec READY WARM 9890 FORCE ROTATE Fan Heater User Manual</a></p> <p>Comprehensive user manual for the Cecotec READY WARM 9890 FORCE ROTATE fan heater, covering safety instructions, operation, cleaning, maintenance, technical specifications, and warranty information.</p>
	<p><a href="#">Cecotec Ready Warm 9650 Horizon Force - User Manual and Specifications</a></p> <p>Instruction manual and technical specifications for the Cecotec Ready Warm 9650 Horizon Force fan heater. Includes safety instructions, operation guide, cleaning, maintenance, and warranty information.</p>
	<p><a href="#">Cecotec Ready Warm 3100 Smart Now Mica Panel Heater - User Manual</a></p> <p>Comprehensive instruction manual for the Cecotec Ready Warm 3100 Smart Now mica panel heater. Covers safety, assembly, operation, cleaning, maintenance, technical specifications, disposal, and warranty information.</p>
	<p><a href="#">Cecotec Ready Warm 6600 Turbo Convection Plus User Manual   Safety. Operation. Specifications</a></p> <p>Comprehensive user manual for the Cecotec Ready Warm 6600 Turbo Convection Plus electric convector heater. Includes safety instructions, operating guide, technical specifications, and warranty information.</p>
	<p><a href="#">Cecotec Ready Warm 7000 Quartz Bath: User Manual &amp; Technical Specifications</a></p> <p>Comprehensive user manual and technical specifications for the Cecotec Ready Warm 7000 Quartz Bath, a 1200W quartz heater. Includes safety instructions, operation guide, cleaning, maintenance, warranty information, and detailed technical data.</p>



### [Cecotec ReadyWarm 2000 Now: Manual de Instrucciones y Uso](#)

Manual completo para el Cecotec ReadyWarm 2000 Now, una placa radiante de mica diseñada para calefacción auxiliar. Incluye instrucciones de seguridad, funcionamiento, limpieza, mantenimiento y especificaciones técnicas.


lang:it **score:32** filesize: 1.31 M page\_count: 64 document date: 2023-09-06

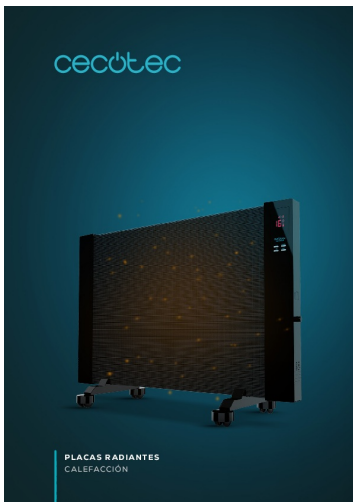

### [Cecotec ReadyWarm Radiant Panel Heaters: Product Catalog](#)

Explore the Cecotec ReadyWarm series of radiant panel heaters, featuring models 2000 Now, 3000 Now, and 3100 Smart Now. This catalog details their features, specifications, and includes a comparative table for easy selection.

lang:en **score:20** filesize: 3.23 M page\_count: 6 document date: 2023-08-16

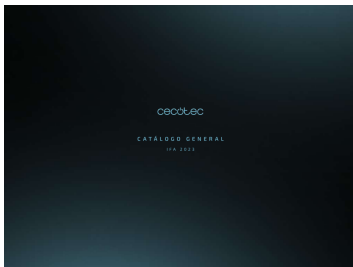

### [\[pdf\]](#)

C T ES Agosto 23 CECOTEC cdn cecotec cloud s3 amazonaws media IFA2023 |||

CATLOGO GENERAL IFA 2023 Introduccin de la compaa CECOTEC es una compaa joven y disruptiva que, en ... , 77.5 x 13.5 x 62.5 cm 5.55 kg mster 1 uds/mster 27 uds/palet 62 x 29 x 74.5 cm 4.3 kg 8435484**082662** caja 18435484**082669** mster **08266** ReadyWarm 3000 Now Placa radiante de mica, mecnica, con...

lang:es **score:8** filesize: 88.75 M page\_count: 2028 document date: 2023-09-01