

Cecotec 03826

Cecotec Electric Pizza Grill Oven Fun Pizza&Co Mamma Mía Vista User Manual

Model: 03826 | Brand: Cecotec

INTRODUCTION

Thank you for choosing the Cecotec Fun Pizza&Co Mamma Mía Vista Electric Pizza Grill Oven. This appliance is designed to help you prepare authentic pizzas quickly and efficiently. Please read this manual carefully before using the appliance to ensure safe and optimal performance. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the appliance is placed on a stable, flat, and heat-resistant surface.
- Do not touch hot surfaces. Use handles or knobs.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Cecotec Pizza Oven:



Figure 1: Top view of the Cecotec Fun Pizza&Co Mamma Mía Vista oven, showing the temperature and timer controls, and the viewing window.



Figure 2: The oven opened, revealing the upper and lower heating elements and the removable stone plate.



Figure 3: The pizza oven in use, with a pizza cooking on the stone plate and the included wooden pizza peels.

Key components include the main unit, removable stone plate, upper and lower heating elements, temperature control knob, timer knob, and viewing window.

SETUP

1. Unpack the appliance and all accessories. Remove all packaging materials.
2. Place the oven on a stable, flat, and heat-resistant surface, ensuring adequate ventilation around the unit.
3. Insert the stone plate into its designated position inside the oven.
4. Before first use, wipe the exterior with a damp cloth. Do not use abrasive cleaners.
5. Plug the power cord into a grounded electrical outlet.
6. It is recommended to pre-heat the oven empty for 10-15 minutes at maximum temperature during the first use to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated.

OPERATING INSTRUCTIONS

Pre-heating the Oven

1. Ensure the stone plate is clean and in place.
2. Close the oven lid.
3. Turn the temperature control knob to the desired setting (e.g., maximum for pizza). The power indicator light will illuminate.
4. Allow the oven to pre-heat for approximately 3-5 minutes until it reaches the desired temperature (up to 420°C).

Cooking Pizza

1. Once pre-heated, carefully open the oven lid.
2. Using the provided wooden peels, carefully slide your prepared pizza onto the hot stone plate.
3. Close the oven lid immediately.
4. Set the timer knob for the desired cooking time (e.g., 3-5 minutes for a typical pizza).
5. Monitor the cooking process through the viewing window. Cooking times may vary based on pizza thickness and toppings.
6. When the timer rings, carefully open the lid and use the peels to remove the cooked pizza.
7. Close the lid to maintain heat for subsequent pizzas or turn off the appliance.

Temperature and Timer Controls

The oven features an adjustable thermostat with multiple temperature levels and a timer of up to 15 minutes with an alarm function. Adjust these according to your recipe and desired doneness.



Figure 4: Detail of the temperature and timer control knobs on the Cecotec Pizza Oven.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your pizza oven.

1. Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Stone Plate:** The stone plate should be cleaned only when completely cool. Scrape off any burnt-on food residues using a plastic scraper or brush. Do not use soap or detergents on the stone plate, as it is porous and will absorb them, affecting future pizza taste. For stubborn stains, you can gently scrub with a stiff brush and warm water, but avoid soaking. Allow the stone to air dry completely before next use.
3. **Exterior:** Wipe the exterior surfaces with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
4. **Interior (non-stone parts):** Wipe the interior metal surfaces with a damp cloth. Be careful around heating elements.
5. Do not immerse the main unit in water or any other liquid.
6. Store the oven in a dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Pizza not cooking evenly or quickly.	Insufficient pre-heating time; incorrect temperature setting; lid not fully closed.	Allow adequate pre-heating time (at least 3-5 minutes). Ensure the temperature knob is set correctly. Verify the lid is fully closed during cooking.
Smoke or odor during first use.	Manufacturing residues burning off.	This is normal for first use. Ensure good ventilation. It should dissipate after initial use.
Stone plate is stained.	Food spills or burnt-on residue.	Stains are normal and do not affect performance. Scrape off loose residue. Do not use soap.

SPECIFICATIONS

- Brand:** Cecotec
- Model:** 03826 (Fun Pizza&Co Mamma Mía Vista)
- Power:** 1200 W
- Max Temperature:** 420°C (achieved in approx. 3 minutes)
- Timer:** Up to 15 minutes with alarm
- Material:** Ceramic stone plate, metal housing
- Product Dimensions:** 36.6 x 34.2 x 15.8 cm
- Item Weight:** 4.27 kg

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your purchase or visit the official Cecotec website. Keep your proof of purchase for warranty claims.

Online Resources: www.cecotec.com

	Cecotec Rock'n Grill 1500 Take&Clean Stone User Manual and Instructions Comprehensive user manual for the Cecotec Rock'n Grill 1500 Take&Clean Stone electric grill, covering safety instructions, operation, cleaning, maintenance, and technical specifications.
	Cecotec PIZZA&CO 500 MAX Multifunctional Pizza Oven Manual User manual for the Cecotec PIZZA&CO 500 MAX multifunctional pizza oven, providing safety instructions, operation guidelines, cleaning and maintenance tips, and troubleshooting.
	Cecotec Cecofry&Grill Smokin' 6500: Руководство пользователя для Цифровой мультипечи с двумя нагревательными элементами и коптильной Полное руководство пользователя для Cecotec Cecofry&Grill Smokin' 6500. Инструкции по эксплуатации, безопасности, чистке, уходу и технические характеристики мультипечи с функцией гриля и коптильни.
	Manual de Usuario Cecotec ReadyWarm 2070 Max Force Black Termoventilador Instrucciones y Especificaciones Manual completo del termoventilador Cecotec ReadyWarm 2070 Max Force Black (modelo 08254). Incluye instrucciones de seguridad, funcionamiento, limpieza, mantenimiento y especificaciones técnicas para un uso óptimo y seguro.
	Cecotec Rock'nGrill Pro Electric Grill - User Manual and Instructions This document provides comprehensive instructions for the Cecotec Rock'nGrill Pro electric grill. It covers safety guidelines, product components, operation modes (contact grill, press grill, open grill), cleaning and maintenance, technical specifications, and warranty information.
	Cecotec Rock'nGrill 700 W Electric Grill - User Manual and Safety Instructions Comprehensive user manual for the Cecotec Rock'nGrill 700 W electric contact grill, covering safety instructions, operation, cleaning, maintenance, technical specifications, and warranty information.

