

Cecotec 01803

Cecotec Cremmaet Touch OCS Super Automatic Coffee Machine User Manual

Model: 01803

1. INTRODUCTION

Welcome to your new Cecotec Cremmaet Touch OCS Super Automatic Coffee Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

To ensure safe operation, always follow these basic precautions:

- Read all instructions carefully before using the appliance.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children and individuals with reduced physical, sensory, or mental capabilities.
- Ensure the power supply voltage matches the rating label on the appliance.
- Unplug the appliance from the power outlet when not in use and before cleaning.
- Do not operate the appliance with a damaged cord or plug, or if it malfunctions or has been damaged in any manner.
- Use only accessories recommended by the manufacturer.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Always ensure the water tank is properly filled before brewing.
- Exercise caution when handling hot surfaces and steam.

3. PRODUCT OVERVIEW

The Cecotec Cremmaet Touch OCS is a super automatic coffee machine designed for convenience and quality. It features a 7-inch TFT touchscreen, a 19-bar pressure pump, and a Thermoblock heating system for rapid coffee preparation.

3.1. Components

- Cecotec Cremmaet Touch OCS Coffee Machine
- External Milk Tank (600 ml capacity)
- Quick Start Guide
- User Manual



Figure 1: The Cecotec Cremmaet Touch OCS Super Automatic Coffee Machine with various coffee beverages prepared.

4. SETUP AND FIRST USE

4.1. Unpacking

1. Carefully remove the coffee machine and all accessories from the packaging.
2. Remove any protective films or packaging materials from the appliance.
3. Place the machine on a stable, level, and heat-resistant surface.

4.2. Filling the Water Tank

The machine is equipped with a 2-liter water tank. Ensure it is filled with fresh, clean water before use.

1. Remove the water tank from the machine.
2. Fill the tank with fresh tap water up to the MAX indicator.
3. Reinsert the water tank securely into the machine.



Figure 2: A hand pouring water into the machine's water tank.

4.3. Adding Coffee Beans

The machine features a 400g airtight coffee bean tank to preserve the aroma.

1. Open the lid of the coffee bean hopper.
2. Pour fresh whole coffee beans into the hopper. Do not overfill.

3. Close the lid securely to maintain bean freshness.



Figure 3: A hand pouring coffee beans into the machine's bean hopper.

4.4. Adjusting Grinding Level

The integrated ceramic grinder offers 9 levels of grinding. Adjust the setting according to your preference for different coffee types.

1. Locate the grinding adjustment knob inside the bean hopper.
2. Turn the knob to select your desired grinding level. A finer grind is typically for espresso, while a coarser grind is for milder coffee.



Figure 4: A hand adjusting the coffee grinder settings on the machine.

4.5. Connecting the Milk Tank

For milk-based beverages, connect the 600ml external milk tank.

1. Fill the milk tank with fresh milk.
2. Connect the milk tube from the machine to the milk tank.
3. Ensure the milk tank is placed securely next to the machine.



Figure 5: The coffee machine with the external milk tank connected, ready for milk-based drinks.

5. OPERATING INSTRUCTIONS

5.1. Powering On

Press the power button to turn on the machine. The 7-inch TFT touchscreen will display the main menu after a brief initialization process.

5.2. Selecting a Beverage

Use the intuitive touchscreen to select your desired coffee type. The machine offers a variety of options including Ristretto, Espresso, Americano, Cappuccino, and Latte.



Figure 6: A hand interacting with the touchscreen to select a coffee beverage.

5.3. Customizing Your Coffee

The machine allows you to customize coffee quantity and intensity. You can save up to 15 personalized preferences for up to 8 users using the DIY function.

1. After selecting a beverage, tap on the customization options on the screen.
2. Adjust parameters such as coffee volume, strength, and milk foam level (for milk-based drinks).
3. You can save your customized settings for future use.



Figure 7: A hand adjusting coffee intensity and quantity settings on the touchscreen.

5.4. Brewing Coffee

After selection and customization, press the start button on the touchscreen to begin brewing. The 19-bar pressure pump and Thermoblock system ensure optimal extraction and rapid preparation.



Figure 8: Coffee being dispensed from the machine into a glass cup.

6. MAINTENANCE AND CLEANING

6.1. Automatic Cleaning System

The machine features an automatic cleaning system that cleans its internal circuits. Follow the prompts on the touchscreen for routine cleaning cycles to ensure optimal performance and hygiene.



Figure 9: A hand selecting a maintenance option, specifically deep cleaning for the coffee system, on the touchscreen.

6.2. Descaling

Regular descaling is crucial for the longevity and performance of your coffee machine. The frequency depends on water hardness and usage. Refer to the on-screen instructions for the descaling process.

6.3. Cleaning the Milk System

If you frequently prepare milk-based beverages, clean the milk system regularly to prevent blockages and maintain hygiene. Follow the instructions on the touchscreen for milk system cleaning.

6.4. General Cleaning

Wipe the exterior of the machine with a damp cloth. The drip tray and coffee grounds container should be emptied and cleaned regularly. Note that the machine components are **not dishwasher safe**.

7. TROUBLESHOOTING

Refer to the table below for common issues and their solutions. If the problem persists, contact customer

support.

Problem	Possible Cause	Solution
No coffee dispensed	Water tank empty or not properly inserted.	Refill water tank and ensure it is correctly seated.
Coffee is too weak	Grinding level too coarse or insufficient coffee quantity selected.	Adjust grinder to a finer setting. Increase coffee intensity via the touchscreen.
Machine not turning on	Power cable not connected or power outlet issue.	Check power connection and try a different outlet.
Milk not frothing properly	Milk tank empty, milk system clogged, or milk is not cold enough.	Refill milk tank. Clean the milk system. Use cold milk.
Error message on screen	Specific internal issue or maintenance required.	Refer to the on-screen message for specific instructions or consult the full user manual.

8. TECHNICAL SPECIFICATIONS

Brand	Cecotec
Model Name	Cremmaet Touch OCS
Model Number	01803
Product Dimensions (L x W x H)	26 x 49 x 45 cm
Item Weight	14.36 kg
Power	1500 Watts
Pressure	19 Bars
Water Tank Capacity	2 Liters
Coffee Bean Tank Capacity	400g
Milk Tank Capacity	600ml
Human Interface Input	Touchscreen
Coffee Type	Whole Beans
Material	Stainless steel and plastic

Special Features	Automatic cleaning function, Integrated coffee grinder
Operation Mode	Fully Automatic
Manufacturing Year	2024

9. WARRANTY AND SUPPORT

For technical assistance, warranty claims, or spare parts, please contact Cecotec customer support. Spare parts are available for **10 years** from the manufacturing date.

For more information and detailed support, visit the official Cecotec website: www.cecotec.com