

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Cecotec](#) /
- › [Cecotec Bolero Dresscode 7410 Front-Load Washing Machine User Manual](#)

Cecotec Bolero Dresscode 7410

Cecotec Bolero Dresscode 7410 Front-Load Washing Machine User Manual

Model: Bolero Dresscode 7410 | Capacity: 7 kg | Max Spin Speed: 1200 rpm

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Cecotec Bolero Dresscode 7410 front-load washing machine. Please read all instructions carefully before installation and operation. Keep this manual for future reference.



Image 1.1: Front view of the Cecotec Bolero Dresscode 7410 washing machine, showing its overall dimensions of 85 cm height, 60 cm width, and 50 cm depth.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the washing machine is properly grounded.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not touch the machine with wet hands.
- Unplug the appliance before cleaning or maintenance.
- Do not wash items that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. It is crucial to remove the transit bolts located at the rear of the machine before use. These bolts secure the drum during transport and must be removed to prevent damage during operation.

3.2 Placement and Leveling

Place the washing machine on a firm, level surface. Adjust the leveling feet until the machine is perfectly stable and level. Use a spirit level to ensure accuracy. Proper leveling minimizes vibration and noise during operation.



Image 3.1: The washing machine correctly installed in a laundry setting, highlighting its energy efficiency rating.

3.3 Water and Power Connections

- **Water Inlet:** Connect the water inlet hose to a cold water tap and to the corresponding inlet on the back of the machine. Ensure connections are tight to prevent leaks.
- **Drain Hose:** Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining.
- **Power Supply:** Plug the power cord into a grounded electrical outlet. Verify that the voltage and frequency match the specifications of your appliance.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The washing machine features a central program selector dial and a touch display for additional settings and cycle information.



Image 4.1: Detailed view of the control panel, showing the program selection dial and digital display for cycle settings.

4.2 Loading Laundry

Open the door and load clothes loosely into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely. The maximum capacity is 7 kg.



Image 4.2: A user loading laundry into the washing machine's drum.

4.3 Adding Detergent

Add the appropriate amount of detergent and fabric softener to the dispenser compartments. Refer to your detergent packaging for recommended dosages.

4.4 Program Selection

Turn the program selector dial to choose one of the 16 available programs:

- Mix
- Cotton
- Super Fast
- Eco 40-60
- Wool
- Prewash
- Shirts
- Sport

- Intensive
- Bed Linen
- Allergy Care
- Spin/Drain
- Spin
- Drum Clean
- Delicate
- Cotton 20°C

4.5 Special Functions

- **SteamMax:** Provides steam cleaning for tough stains and garment sterilization.
- **Allergy Care:** Sterilizes garments with steam up to 99.9%, effective even in cold water washes, eliminating germs and bacteria.
- **Anti-wrinkle:** Reduces creases in clothes, making ironing easier or potentially unnecessary.
- **Delay Start:** Allows you to program the washing machine to finish at a desired time, fitting your schedule.
- **My Fav:** Saves your most frequently used program and settings for quick access.
- **Drum Clean:** A dedicated program to clean the drum, preventing bacteria buildup and odors.



Image 4.3: Visual representation of the sterilization process, demonstrating the effectiveness of the Allergy Care function.

4.6 Starting a Cycle

After selecting the program and any desired special functions, press the Start/Pause button to begin the wash cycle.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

5.1 Drum Cleaning

Use the dedicated 'Drum Clean' program periodically to remove detergent residue and prevent odors. Run this cycle without any laundry in the drum.



Image 5.1: The internal drum during a self-cleaning cycle, showing water jets for thorough cleaning.

5.2 Detergent Dispenser Cleaning

Remove the detergent dispenser drawer and rinse it under running water to clear any accumulated detergent or softener residue. Clean the housing of the dispenser as well.

5.3 Filter Cleaning

Locate the drain pump filter, usually at the bottom front of the machine. Open the cover, drain any residual water, and carefully remove and clean the filter of lint and debris. Reinstall securely.

5.4 Exterior Cleaning

Wipe the exterior surfaces of the washing machine with a soft, damp cloth. Avoid abrasive cleaners or solvents.

6. TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Machine does not start	No power supply; Door not closed properly; Program not selected.	Check power plug and fuse; Ensure door is latched; Select a program and press Start.
Excessive vibration/noise	Transit bolts not removed; Machine not level; Unbalanced load.	Remove transit bolts (if not already done); Adjust leveling feet; Redistribute laundry in the drum.
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Check and clear drain hose; Clean the drain pump filter.
Poor washing results	Incorrect program/temperature; Overloading; Insufficient detergent.	Select appropriate program; Do not overload; Use correct detergent dosage.

7. SPECIFICATIONS

Feature	Detail
Brand	Cecotec

Feature	Detail
Model	Bolero Dresscode 7410 (02465)
Type	Front-Load Washing Machine
Capacity	7 Kilograms
Max Spin Speed	1200 rpm
Power (Wattage)	1850 Watts
Voltage	230 Volts
Energy Efficiency Class	A
Motor Type	Inverter Plus
Number of Programs	16
Special Features	SteamMax, Pearl Drum, Delay Start, Drum Clean, Allergy Care, Anti-wrinkle, My Fav
Product Dimensions (D x W x H)	50 x 60 x 85 cm
Item Weight	58.1 Kilograms
Material	Plastic

8. WARRANTY INFORMATION

Your Cecotec Bolero Dresscode 7410 washing machine comes with a standard manufacturer's warranty. The Inverter motor is specifically covered by an extended 10-year warranty, ensuring long-term reliability and energy efficiency. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included with your product or visit the official Cecotec website.

9. CUSTOMER SUPPORT

If you encounter any issues that cannot be resolved using the troubleshooting guide, or if you require further assistance, please contact Cecotec customer service. Our specialized support team is available to help you with any queries or service requests.

Contact Information:

- Refer to the contact details provided in your product packaging or on the official Cecotec website.
- When contacting support, please have your model number (Bolero Dresscode 7410) and purchase date ready.