


Cecotec 02467

Cecotec Bolero Dresscode 8500 Inverter Steel Washing Machine User Manual

Model: 02467 | Brand: Cecotec

1. INTRODUCTION

 Thank you for choosing the Cecotec Bolero Dresscode 8500 Inverter Steel Washing Machine. This appliance is designed to provide efficient and convenient laundry care for your home. With its 8 kg capacity, 1400 rpm spin speed, and advanced features like the Inverter Plus Motor and SteamMax function, it offers superior performance and energy efficiency. Please read this manual carefully before using the appliance to ensure safe and optimal operation. Keep this manual for future reference.

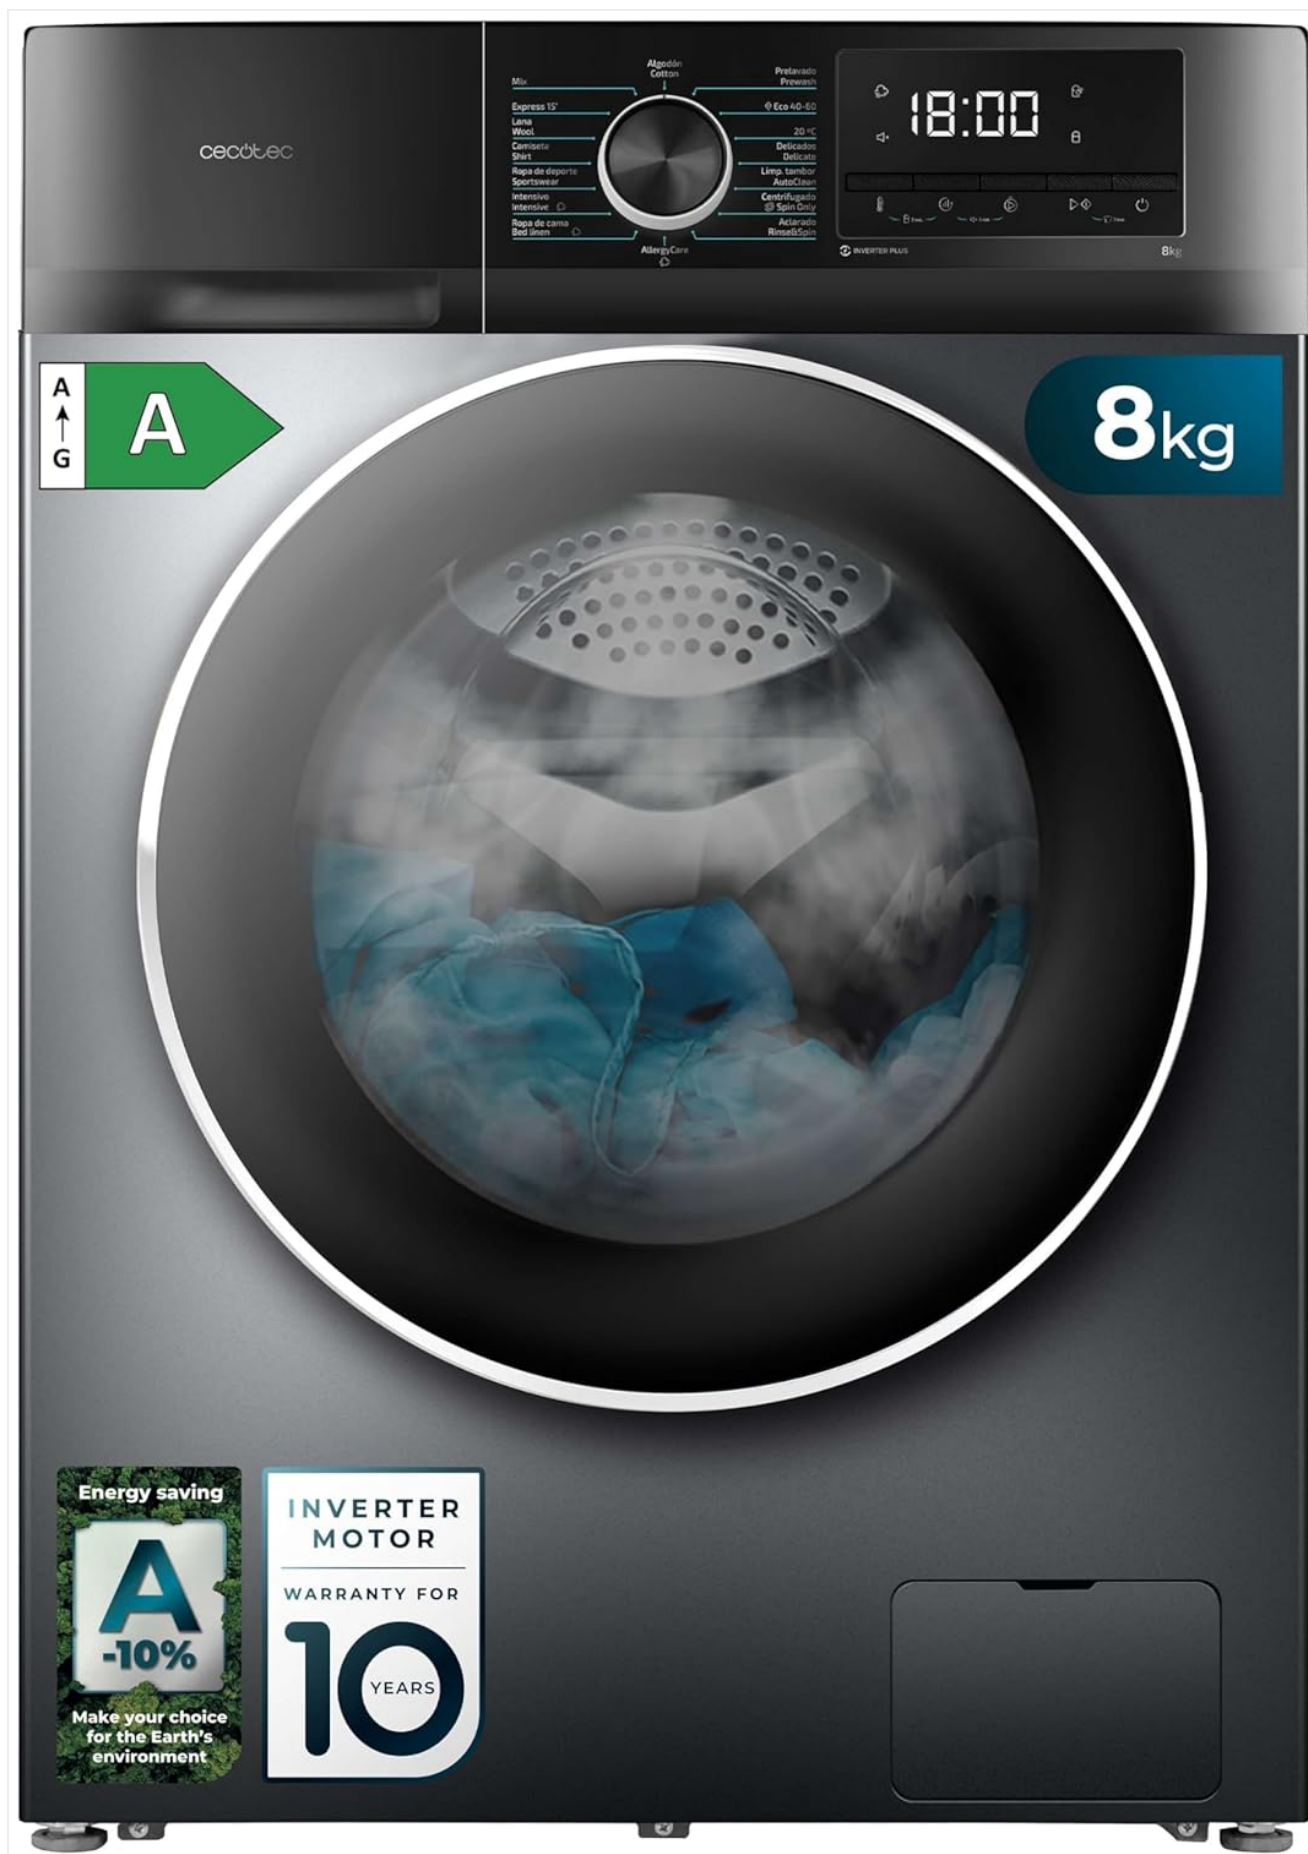

Front view of the Cecotec Bolero Dresscode 8500 Inverter Steel Washing Machine.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

General Safety

- Read all instructions before using the appliance.
- Do not allow children to play on or in the appliance. Close supervision is necessary when the appliance is used near children.
- Do not operate the appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Do not install or store this appliance where it will be exposed to the weather or to freezing temperatures.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.

Electrical Safety

- Ensure the power supply matches the voltage requirements specified on the appliance's rating label.
- Do not use extension cords or ungrounded adapters.
- Always unplug the appliance from the power outlet before cleaning or performing any maintenance.

Installation Safety

- The appliance must be properly installed and grounded in accordance with local codes and ordinances.
- Remove all transport bolts and packing materials before use. Failure to do so can cause severe vibration and noise.
- Ensure the appliance is level to prevent excessive vibration and noise during operation.

3. SETUP AND INSTALLATION

Unpacking

Carefully remove the washing machine from its packaging. Inspect for any damage during transit.

Removing Transport Bolts

Before operating the washing machine, it is crucial to remove the transport bolts located at the rear of the appliance. These bolts secure the drum during transport and must be removed to prevent damage and excessive vibration during operation. Refer to the diagram in the full instruction manual for exact locations.

Placement

Place the washing machine on a firm, level surface. Ensure there is adequate space around the appliance for ventilation and access.

Leveling the Appliance

Adjust the leveling feet at the bottom of the washing machine until the appliance is perfectly stable and level. Use a spirit level to verify.



Dimensions of the washing machine: 85 cm height, 60 cm width, 52 cm depth.

Water and Electrical Connections

- Connect the water inlet hose to a cold water tap and to the corresponding inlet on the washing machine. Ensure connections are tight to prevent leaks.
- Position the drain hose into a suitable drain pipe or sink, ensuring it is securely fixed and allows for proper drainage.
- Plug the power cord into a grounded electrical outlet.

4. OPERATING INSTRUCTIONS

Control Panel Overview

The washing machine features an intuitive control panel with a central knob for program selection and a clear LED display for cycle information and settings.



Detailed view of the control panel, showing the program selection knob and digital display.

Loading Laundry

Open the washing machine door and load your laundry. Do not overload the machine; ensure there is enough space for clothes to tumble freely. The maximum capacity is 8 kg.



A user loading laundry into the front-load washing machine.

Adding Detergent and Additives

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent to the main wash compartment and fabric softener to its designated compartment. Close the drawer gently.

Program Selection

Turn the program selection knob to choose one of the 16 available wash programs. The LED display will show the selected program and its default settings.

- **Common Programs:** Mixed, Cotton, Super fast, Eco 40-60, Wool, Delicate.
- **Specialized Programs:** Prewash, Shirts, Sport, Intensive, Bed, Anti-allergic.
- **Utility Programs:** Spin/Drain, Spin, Drum cleaning, Cotton 20°C.

Starting a Wash Cycle

After selecting the program and adjusting any desired options (temperature, spin speed), press the Start/Pause button to begin the cycle.

- **Delay Start:** Use this function to postpone the start of the wash cycle, allowing it to finish at a more convenient time.

- **Stop&Go:** This feature allows you to pause the wash cycle to add or remove items, then resume from where it left off.
- **Kid Lock:** Activate the child lock function to prevent accidental changes to settings during operation.

End of Cycle

Once the wash cycle is complete, the machine will signal the end. Open the door and remove your clean laundry.

5. KEY FEATURES

Inverter Motor Plus

The Inverter Plus Motor ensures high-quality performance by significantly reducing vibrations and noise during operation. This advanced motor technology also contributes to greater energy savings, making the appliance more efficient and durable.



Illustration of the Inverter Motor Plus and its connection to the drum.

SteamMax Function

 
This innovative function envelops your laundry with steam, effectively sterilizing garments and assisting in the removal of stubborn stains and unpleasant odors. It provides a deeper clean and helps refresh fabrics.



Visual representation of the SteamMax function at work on clothing.

Pearl Drum

The unique Pearl Drum features a snowflake-like texture designed to enhance the drying process and improve the gliding of garments within the drum. This gentle design helps protect fabrics while ensuring thorough washing.

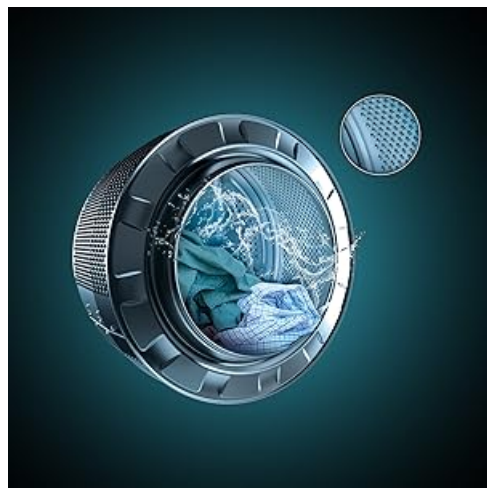

Close-up of the Pearl Drum's unique textured surface.

Drum Clean Function

Maintain optimal hygiene with the Drum Clean function, which helps keep the washing machine drum free from bacteria and unpleasant odors, ensuring fresh and clean laundry every time.



Diagram showing the internal cleaning process of the Drum Clean function.

Energy Efficiency Class A

This washing machine boasts superior energy efficiency, achieving an A-class rating with an additional 10% saving. Its innovative technology optimizes each cycle for impeccable, fast washing with reduced energy consumption, benefiting both your household and the environment.



6. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

Cleaning the Detergent Dispenser

Periodically remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue.

Cleaning the Drum

Utilize the dedicated "Drum Clean" program regularly to prevent the buildup of bacteria and odors inside the drum.

Cleaning the Filter

Locate the drain pump filter, usually at the bottom front of the machine. Open the cover, drain any residual water, and carefully remove and clean the filter of lint and debris. Reinstall securely.

7. TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Door not closed properly; Program not selected.	Check power connection; Ensure door is securely latched; Select a wash program.
Excessive vibration/noise	Transport bolts not removed; Machine not level; Uneven load.	Remove transport bolts; Adjust leveling feet; Redistribute laundry inside the drum.
Water leakage	Hoses not properly connected; Detergent drawer clogged.	Check and tighten hose connections; Clean detergent drawer.
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Straighten drain hose; Clean drain pump filter.
Poor washing results	Incorrect detergent dosage; Overloading; Wrong program selected.	Use correct detergent amount; Do not overload; Select appropriate program for fabric type.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Cecotec
Model Number	02467
Capacity	8 Kilograms
Max Spin Speed	1400 rpm
Energy Efficiency Class	A

Feature	Specification
Product Dimensions (H x W x D)	85 cm x 60 cm x 52 cm
Weight	57.2 Kilograms
Control Type	Knob
Loading Type	Front Load
Material	Stainless Steel (Drum)
Number of Programs	16

9. WARRANTY AND SUPPORT

Your Cecotec Bolero Dresscode 8500 Inverter Steel Washing Machine comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the duration of coverage and what is covered.



For technical assistance, spare parts, or any inquiries regarding your appliance, please contact Cecotec customer support. Contact details can typically be found on the official Cecotec website or on your warranty documentation.




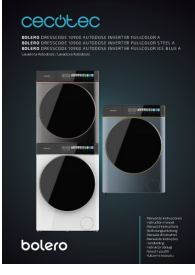
What's in the Box:

- 1 x Cecotec Bolero Dresscode 8500 Inverter Steel Washing Machine
- 1 x Instruction Manual (this document)

[gen_bottom_of_page]

Related Documents - 02467

	<p>Cecotec Bolero DressCode Lavadoras: Manual de Instrucciones y Guía de Uso</p> <p>Manual completo de instrucciones para las lavadoras Cecotec Bolero DressCode (modelos 7610, 8610, 9610, 10610 Inverter). Incluye guías de instalación, operación, seguridad, mantenimiento y especificaciones técnicas.</p>
	<p>Manual de Usuario Lavadora Cecotec Bolero DressCode 8500 Inverter A / Steel A</p> <p>Manual de usuario completo para las lavadoras Cecotec Bolero DressCode 8500 Inverter A y Steel A. Incluye instrucciones de seguridad, instalación, funcionamiento, mantenimiento, solución de problemas y especificaciones técnicas.</p>

	<p>Cecotec Bolero Dresscode Dry Inverter Clothes Dryer User Manual</p> <p>User manual and product information for the Cecotec Bolero Dresscode Dry Inverter series of clothes dryers, including models 8400 and 9400, in standard and steel finishes. Learn about features, operation, and maintenance.</p>
	<p>Manual de Usuario Lavadora Cecotec DRESSCODE 8500 INVERTER A / STEEL A</p> <p>Manual de usuario completo para las lavadoras Cecotec DRESSCODE 8500 INVERTER A y STEEL A, que cubre seguridad, instalación, funcionamiento, mantenimiento y solución de problemas. Disponible en varios idiomas.</p>
	<p>Manual de Usuario Lavadora Cecotec Bolero Dresscode Inverter</p> <p>Este documento es el manual de usuario para la serie de lavadoras Cecotec Bolero Dresscode Inverter, incluyendo los modelos 8400, 9400 y 10400. Proporciona instrucciones completas sobre instalación, funcionamiento, seguridad, mantenimiento y resolución de problemas.</p>
	<p>Cecotec Bolero DressCode 10900 Autodose Inverter: Manual de Usuario y Guía de Instrucciones</p> <p>Descubra el manual de usuario para la lavadora Cecotec Bolero DressCode 10900 Autodose Inverter. Encuentre instrucciones detalladas, guías de seguridad y especificaciones técnicas para su correcto funcionamiento y mantenimiento.</p>