

[Manuals.plus](#) /

> [Cecotec](#) /

> Cecotec Conga Rockstar Multicyclonic Compact X-Treme Bagless Cylinder Vacuum Cleaner User Manual

Cecotec 08600

Cecotec Conga Rockstar Multicyclonic Compact X-Treme Bagless Cylinder Vacuum Cleaner

Model: 08600

INTRODUCTION

Thank you for choosing the Cecotec Conga Rockstar Multicyclonic Compact X-Treme Bagless Cylinder Vacuum Cleaner. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the power supply voltage matches the rating label on the vacuum cleaner.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Unplug the vacuum cleaner from the power outlet when not in use and before cleaning or maintenance.
- Do not use the vacuum cleaner to pick up flammable or combustible liquids, hot ashes, or sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not operate the vacuum cleaner with a damaged cord or plug.
- This appliance is for household use only.

PACKAGE CONTENTS

Verify that all components are present upon unpacking:

- Cecotec Conga Rockstar Multicyclonic Compact X-Treme Vacuum Cleaner Unit
- Metal telescopic tube
- Flexible hose
- Floor brush

- 2-in-1 accessory for furniture and corners
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the main parts of your vacuum cleaner.



Figure 1: Main unit of the Cecotec Conga Rockstar Multicyclonic Compact X-Treme vacuum cleaner with hose and floor brush attached.

- **Main Unit:** Contains the motor, dust tank, and filters.
- **Dust Tank:** 2-liter capacity, bagless design for easy emptying.
- **Flexible Hose:** Connects to the main unit and the telescopic tube.
- **Metal Telescopic Tube:** Adjustable length for comfortable cleaning.
- **Floor Brush:** Suitable for various floor types.
- **2-in-1 Accessory:** Combines a crevice tool and a dusting brush for versatile cleaning.
- **Power Cord:** 6.2-meter action radius.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Attach Flexible Hose:** Insert the larger end of the flexible hose into the suction inlet on the main unit until it clicks securely into place.
3. **Assemble Telescopic Tube:** Connect the metal telescopic tube to the handle end of the flexible hose. Adjust the length of the telescopic tube by pressing the release button and extending or retracting it to a comfortable height.
4. **Attach Cleaning Head:** Connect the desired cleaning head (e.g., floor brush or 2-in-1 accessory) to the end of the telescopic tube.
5. **Power Connection:** Extend the power cord and plug it into a suitable electrical outlet.

OPERATING INSTRUCTIONS

General Operation

1. **Power On:** Press the power button located on the main unit to start the vacuum cleaner.
2. **Vacuuming:** Guide the cleaning head over the surface to be cleaned. The vacuum offers 20 kPa of suction power for effective cleaning.
3. **Using Accessories:**
 - **Floor Brush:** Ideal for hard floors and carpets.
 - **2-in-1 Accessory:** Use the brush for dusting furniture, curtains, or delicate surfaces. Slide the brush back to use the crevice tool for narrow gaps, corners, and edges.
4. **Power Off:** Press the power button again to turn off the vacuum cleaner.
5. **Cord Rewind:** Gently press the cord rewind button (if available) to retract the power cord. Always guide the cord to prevent whipping.



Figure 2: The vacuum cleaner effectively cleaning dirt from a wooden floor.



Figure 3: The telescopic tube allows for extended reach, useful for cleaning high areas like light fixtures.



Figure 4: The versatile 2-in-1 accessory for cleaning furniture and tight corners.

Portability and Storage

The compact and lightweight design makes the vacuum easy to transport and store.



Figure 5: The lightweight design allows for easy portability, even up stairs.



Figure 6: Compact storage of the vacuum cleaner when not in use.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dust Tank

1. **Disconnect Power:** Always unplug the vacuum cleaner before performing any maintenance.
2. **Remove Dust Tank:** Locate the dust tank release button/latch and remove the dust tank from the main unit.
3. **Empty Contents:** Hold the dust tank over a waste bin and open the bottom flap to empty the collected dirt and debris.
4. **Reattach:** Close the flap and reattach the dust tank to the main unit, ensuring it clicks securely into place.

Cleaning/Replacing Filters

The vacuum cleaner uses a cartridge filter system. Clean filters regularly to maintain suction power.



Figure 7: Location of the filter compartment for cleaning or replacement.

1. **Access Filters:** Open the filter compartment, usually located near the dust tank or at the rear of the unit.
2. **Remove Filters:** Carefully remove the pre-motor and exhaust filters.
3. **Clean Filters:** Tap the filters gently to remove loose dust. For a more thorough clean, rinse them under cold running water. Do not use detergents.
4. **Dry Filters:** Allow filters to air dry completely for at least 24 hours before reinserting them. Do not use a hairdryer or other heating devices.
5. **Reinstall:** Once completely dry, reinsert the filters into their compartments and close the cover securely.
6. **Replacement:** Replace filters every 6-12 months, or more frequently with heavy use, to ensure optimal performance.

Cleaning the Exterior

Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

Before contacting customer support, try these common troubleshooting steps:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Not plugged in; no power at outlet; power button not pressed.	Check power cord connection; test outlet with another appliance; press power button firmly.
Low suction power.	Full dust tank; clogged hose/tube/brush; dirty filters.	Empty dust tank; check for and remove blockages; clean or replace filters.
Unusual noise.	Blockage in hose/tube/brush; foreign object in motor area.	Turn off and unplug. Check for and remove blockages. If noise persists, contact support.
Dust escaping from vacuum.	Dust tank not properly closed; filters not installed correctly or damaged.	Ensure dust tank is securely closed. Check filter installation and condition; replace if damaged.

SPECIFICATIONS

Feature	Detail
Model Number	08600

Feature	Detail
Power	800 W
Suction Power	20 kPa
Dust Tank Capacity	2 Liters
Action Radius	6.2 meters
Filter Type	Cartridge
Special Features	Bagless, Ultra-light, Compact
Included Components	Metal tube, 2-in-1 accessory for furniture and corners
Dimensions (L x W x H)	37.8 x 27.5 x 25.6 cm
Weight	3 Kilograms
Power Source	Corded Electric
Recommended Surface	All floor types

WARRANTY AND SUPPORT

Cecotec products are manufactured to high-quality standards. For information regarding warranty coverage, technical support, or spare parts availability, please refer to the warranty card included with your purchase or visit the official Cecotec website.

Spare parts availability: 10 Years.

For further assistance, please contact Cecotec customer service.