

Cecotec 04741

Cecotec PrecisionCare 5-in-1 Multigrooming Trimmer User Manual

Model: 04741

1. Product Overview

The Cecotec PrecisionCare 5-in-1 Multigrooming Trimmer is a versatile grooming device designed for both facial and body hair removal. It features multiple interchangeable heads and is equipped with durable stainless steel blades and a long-lasting lithium battery. Its waterproof design allows for easy cleaning and use in various conditions.





Image 1.1: The Cecotec PrecisionCare 5-in-1 Multigrooming Trimmer with its main shaving head attached.

2. Safety Instructions

Please read these safety instructions carefully before using the device to prevent injury or damage.

- Keep the device away from children.
- Do not disassemble, repair, or modify the device yourself. Contact authorized service personnel for any repairs.
- Ensure the charging cable is not damaged. Do not use the device if the cable or plug is damaged.
- Only use the charger provided with the device.
- Do not immerse the charging adapter in water or other liquids.
- This device is waterproof (IPX5 rated) and can be cleaned under running water. However, do not submerge the entire device for extended periods.
- Avoid using the device on irritated or broken skin.

- Clean the blades regularly to maintain hygiene and performance.

3. Package Contents

Verify that all components are present in the package:

- Cecotec PrecisionCare 5-in-1 Multigrooming Trimmer unit
- Laminated shaving head
- Nose and ear trimmer head
- Facial shaving head
- Adjustable guide comb
- Body shaving head with sensitive skin protection
- Charging cable
- Cleaning brush
- User manual



Image 3.1: All included heads and the adjustable guide comb for the trimmer.

4. Setup and Charging

4.1 INITIAL CHARGING

Before first use, fully charge the trimmer. Connect the charging cable to the device and plug the adapter into a power outlet. The LED indicators will show the charging status. A full charge provides approximately 90 minutes of cordless operation.

4.2 ATTACHING/REMOVING HEADS

1. To attach a head: Align the desired head with the trimmer body and push it down until it clicks into place.
2. To remove a head: Hold the trimmer body firmly and gently pull the head upwards to detach it.

5. Operating Instructions

Ensure the device is charged before use. Press the power button to turn the trimmer on or off.

5.1 USING THE FACIAL SHAVING HEAD

Attach the facial shaving head. For best results, hold the trimmer at a right angle to your skin and move it against the direction of hair growth. Stretch the skin with your free hand to ensure a smooth shave.



Image 5.1: A user demonstrating the facial shaving head for precise grooming.

5.2 USING THE BODY SHAVING HEAD

Attach the body shaving head, especially the one with sensitive skin protection for delicate areas. Move the trimmer gently over the desired body area. The silicone strip helps protect sensitive skin during use.



Image 5.2: The body shaving head being used for grooming chest hair.

5.3 USING THE NOSE AND EAR TRIMMER HEAD

Carefully insert the nose and ear trimmer head into your nostril or ear canal. Move it gently in a circular motion to trim unwanted hair. Do not insert too deeply.

5.4 USING THE ADJUSTABLE GUIDE COMB

Attach the adjustable guide comb to the facial shaving head. Adjust the comb to your desired hair length setting. This is ideal for maintaining beard length or precise trimming.

6. Cleaning and Maintenance

Regular cleaning ensures optimal performance and hygiene of your trimmer.

1. Turn off the trimmer and detach the head after each use.
2. Use the provided cleaning brush to remove any loose hairs from the blades and the trimmer body.
3. Rinse the detached head and the trimmer body under running water. The device is IPX5 waterproof.
4. Allow all parts to air dry completely before reattaching the head or storing the device.
5. Do not use abrasive cleaners or harsh chemicals on the device.



Image 6.1: The trimmer's ergonomic design allows for comfortable handling during use and cleaning.

7. Troubleshooting

If you encounter issues with your trimmer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully.

Problem	Possible Cause	Solution
Poor trimming performance.	Blades are clogged with hair or dull.	Clean the blades thoroughly. If blades are dull, consider contacting support for replacement parts.
Device stops during use.	Battery is low.	Recharge the trimmer.
Irritation after shaving.	Incorrect technique or sensitive skin.	Ensure proper technique (e.g., stretching skin, moving against hair growth). Use the body shaving head with sensitive skin protection.

8. Specifications

Feature	Detail
Brand	Cecotec
Model Number	04741
Power Source	Battery powered (1 Lithium-ion, included)
Battery Life	Up to 90 minutes
Blade Material	Stainless steel
Water Resistance	IPX5 (Water resistant)
Color	Black
Included Components	Laminated shaving head, nose and ear head, facial shaving head, adjustable guide comb, body shaving head with sensitive skin protection

9. Warranty and Support

For warranty information, technical support, or to purchase replacement parts, please refer to the official Cecotec website or contact their customer service department. Keep your proof of purchase for warranty claims.

Related Documents - 04741

	Cecotec PrecisionCare Multigrooming Trimmer User Manual Comprehensive user manual for the Cecotec PrecisionCare Multigrooming Trimmer, covering safety instructions, operation, cleaning, maintenance, and technical specifications.
---	---

	<p><u>Bamba PrecisionCare Skull Head Shaver User Manual</u></p> <p>User manual for the Cecotec Bamba PrecisionCare Skull head shaver, covering safety instructions, operation, cleaning, maintenance, head replacement, technical specifications, disposal, and warranty information.</p>
	<p><u>Cecotec Bamba PrecisionCare 7500 Power Blade User Manual</u></p> <p>This user manual provides comprehensive guidance for the Cecotec Bamba PrecisionCare 7500 Power Blade beard trimmer. It details safety instructions, operation, cleaning and maintenance procedures, technical specifications, and warranty information to ensure optimal use and longevity of the device.</p>
	<p><u>Cecotec Bamba PrecisionCare Wet&Dry Hair Trimmer User Manual</u></p> <p>Comprehensive user manual for the Cecotec Bamba PrecisionCare Wet&Dry hair trimmer, covering safety instructions, operation, cleaning, maintenance, technical specifications, and warranty information.</p>
	<p><u>Cecotec PrecisionCare Power Blade: Manual de Instrucciones y Guía de Uso</u></p> <p>Manual completo de instrucciones para el cortapelos Cecotec PrecisionCare Power Blade. Aprenda sobre seguridad, operación, limpieza, mantenimiento y especificaciones técnicas para un uso doméstico óptimo.</p>
	<p><u>Cecotec BAMBA PrecisionCare Power Blade Titanium Hair Clipper User Manual</u></p> <p>User manual for the Cecotec BAMBA PrecisionCare Power Blade Titanium corded hair clipper, detailing safety, operation, maintenance, specifications, and warranty information.</p>