

Cecotec 04945

Cecotec Cecofry Mist 7000 Air Fryer User Manual

Model: 04945 | Brand: Cecotec

1. INTRODUCTION

Thank you for choosing the Cecotec Cecofry Mist 7000 Air Fryer. This versatile 4-in-1 appliance combines the functions of an air fryer, steam cooker, fermenter, and dehydrator, offering a wide variety of culinary possibilities. With its 7-liter capacity and 1700W power, it allows for quick and efficient cooking of various dishes. This manual provides essential information for safe operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your appliance.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always place the appliance on a stable, heat-resistant surface, away from walls or other appliances to allow for proper ventilation.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Close supervision is necessary when the appliance is used by or near children.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool down completely before handling.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use accessories not recommended by the manufacturer, as this may cause injuries.
- Do not place the appliance near hot gas or electric burners, or in a heated oven.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for anything other than its intended use.
- The appliance is intended for household use only.
- Always ensure the basket is properly inserted before operating.

- Be aware of hot steam when using the steaming function.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Cecofry Mist 7000 Air Fryer.



Main Unit: The primary body of the air fryer, housing the heating element, fan, and control panel. This image shows the air fryer with its basket partially pulled out, revealing cooked fries inside.



Control Panel: Located on the front, featuring a digital display and touch controls for temperature, time, and cooking modes. This image provides a clear front view of the appliance, highlighting the digital display and touch interface.



Air Outlet: Located at the back of the unit for hot air exhaust. Ensure this area is not blocked during operation. This image shows the rear of the air fryer, indicating the air outlet.



Cooking Basket: The removable basket where food is placed for cooking. It features a non-stick coating for easy cleaning. This image displays the cooking basket pulled out, containing ribs ready for cooking.



Water Tank: Located on top, used for the steaming function. Has a capacity of 1.4 liters. This image illustrates a person pouring water into the top-mounted water tank.

4. SETUP AND FIRST USE

4.1 Unpacking

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Check that all components are present and undamaged.

4.2 Cleaning Before First Use

1. Wipe the exterior of the appliance with a damp cloth.
2. Wash the cooking basket and any removable accessories with hot, soapy water. Rinse thoroughly and dry completely.
3. Do not use abrasive cleaning agents or scouring pads.

4.3 Initial Operation (Burn-in)

It is recommended to run the air fryer empty for about 10-15 minutes on its highest temperature setting (200°C) during the first use. This helps to burn off any manufacturing residues and eliminate initial odors. Ensure good ventilation during this process.

5. OPERATING INSTRUCTIONS

5.1 Basic Air Frying

1. Place the appliance on a stable, heat-resistant surface.

2. Pull out the cooking basket and place your ingredients inside. Do not overfill the basket.
3. Slide the basket back into the appliance until it clicks into place.
4. Plug the power cord into a grounded electrical outlet.
5. Press the power button to turn on the appliance.
6. Select the desired air frying mode or manually set the temperature (40-200°C) and time using the touch controls.
7. Press the start button to begin cooking. The appliance will automatically pause if the basket is pulled out during operation.
8. Some recipes may require shaking or flipping ingredients halfway through cooking for even results.
9. Once cooking is complete, the appliance will beep. Carefully pull out the basket and transfer the food.



The Cecofry Mist 7000 Air Fryer ready for use on a kitchen counter, with various prepared foods nearby.



A user interacting with the intuitive touch control panel to set cooking parameters.

5.2 Steaming Function

1. Ensure the water tank is filled with clean water (up to 1.4 L capacity).
2. Place ingredients suitable for steaming into the cooking basket.
3. Select one of the 4 available steaming modes or manually set the desired temperature and time.
4. Press start. The appliance will generate steam to cook your food.
5. Use caution when opening the basket during or after steaming due to hot steam.



Filling the 1.4L water tank for the steaming function.

5.3 Fermentation and Dehydration

The Cecofry Mist 7000 also offers fermentation and dehydration capabilities. Refer to specific recipes or guidelines for optimal temperature and time settings for these functions. These modes typically operate at lower temperatures over longer durations.

- **Fermentation:** Ideal for making yogurt or proofing dough. Maintain a consistent low temperature.
- **Dehydration:** Perfect for drying fruits, vegetables, or jerky. Uses low heat and consistent airflow to remove moisture.

5.4 Pre-Heat and Descale Functions

- **Pre-Heat Function:** Use this function for better cooking results, especially for items that benefit from immediate high heat.
- **Descale Function:** This function is designed to clean internal conduits, particularly important for maintaining the efficiency of the steaming function and preventing mineral buildup.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your air fryer.

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. **Cooking Basket and Accessories:** Wash with hot, soapy water. For stubborn food residues, soak the basket for a few minutes before cleaning. The non-stick coating should be cleaned with a soft sponge to avoid damage.
3. **Exterior:** Wipe the exterior with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
4. **Interior:** Wipe the interior with a damp cloth. If necessary, use a soft brush to clean the heating element, ensuring the appliance is unplugged and cool.
5. **Water Tank:** Empty and rinse the water tank after each use, especially after steaming. Use the descaling function periodically to remove mineral deposits.
6. Ensure all parts are completely dry before storing or next use.

7. TROUBLESHOOTING

If you encounter issues with your Cecofry Mist 7000, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance not properly assembled.	Ensure the power cord is securely plugged into a working outlet. Check if the basket is fully inserted.
Food is not cooked evenly.	Basket is overfilled; food not shaken/flipped.	Do not overfill the basket. Shake or flip ingredients halfway through cooking.
White smoke coming from the appliance.	Greasy residue from previous use; fatty ingredients.	Clean the basket and interior thoroughly. For fatty foods, drain excess fat during cooking.
Appliance produces little or no steam.	Water tank is empty; mineral buildup.	Refill the water tank. Run the descaling function to clear mineral deposits.
Unpleasant odor during first use.	Manufacturing residues burning off.	This is normal for first use. Ensure good ventilation. The odor will dissipate.

If the problem persists, please contact Cecotec customer support.

8. TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Cecotec
Model Number	04945
Color	Black / 7L / Steam
Dimensions (L x W x H)	44 x 53 x 20.3 cm
Capacity	7 Liters
Power	1700 Watts
Voltage	220 Volts (AC)
Material	Plastic
Special Features	4-in-1 Versatility: Fry, Steam, Ferment, Dehydrate
Water Tank Capacity	1.4 Liters
Temperature Range	40 - 200 °C
Spare Parts Availability	10 Years





9. WARRANTY AND SUPPORT



Cecotec products are manufactured to the highest quality standards. This product comes with a standard manufacturer's

warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support, spare parts, or warranty claims, please contact Cecotec customer service. Contact information can typically be found on the official Cecotec website or on your purchase receipt.

Online Resources: For additional recipes, tips, and FAQs, visit the official Cecotec website:www.cecotec.com

Related Documents - 04945

	<p>Cecofry Experience Window 6000 Air Fryer User Manual</p> <p>Comprehensive user manual for the Cecofry Experience Window 6000 air fryer, covering safety instructions, operation, cleaning, maintenance, troubleshooting, and technical specifications.</p>
	<p>Cecotec Cecofry Full Inox 5500 Pro & Cecofry Full InoxBlack 5500 Pro User Manual</p> <p>Comprehensive user manual for the Cecotec Cecofry Full Inox 5500 Pro and Cecofry Full InoxBlack 5500 Pro air fryers, covering safety instructions, operation, cleaning, maintenance, and troubleshooting.</p>
	<p>Cecofry&Grill Duoheat 8000: Manual de Instrucciones y Uso</p> <p>Descubra el Cecofry&Grill Duoheat 8000, la freidora de aire digital de Cecotec con doble resistencia. Este manual proporciona instrucciones detalladas sobre su funcionamiento, seguridad, limpieza y mantenimiento para una experiencia culinaria óptima.</p>
	<p>Cecofry Supreme 8000 Air Fryer User Manual</p> <p>Comprehensive user manual for the Cecotec Cecofry Supreme 8000 air fryer, covering safety instructions, operation, cleaning, troubleshooting, and technical specifications.</p>

	<p>Cecofry Experience Window 6000: Посібник користувача від Cecotec</p> <p>Повний посібник користувача для аерофритюрниці Cecofry Experience Window 6000 від Cecotec. Дізнайтеся про безпечне використання, експлуатацію, чищення, технічні характеристики та усунення несправностей.</p>
	<p>Cecofry&Grill Duoheat 4000/6500: Manual de Instrucciones Cecotec</p> <p>Manual de instrucciones para la freidora de aire Cecofry&Grill Duoheat 4000 y 6500 de Cecotec. Incluye guías de seguridad, funcionamiento, limpieza, mantenimiento y solución de problemas.</p>

Documents - Cecotec – 04945



[\[pdf\]](#) User Manual Instructions Troubleshooting Guide Specifications Warranty

Descargar manual de usuario Cecofry Mist 7000 Freidora aire Cecotec cecofry mist user cdn cecotec cloud media files |||

CECOFRY MIST 7000 Freidora de aire con vapor/Air fryer with steam Manual de instrucciones Instructio ... el dispositivo. Rellene el depsito con agua 6.

ESPECIFICACIONES TCNICAS Referencia del producto: **04945** Producto: Freidora de aire Cecofry Mist 7000 44 CECOFRY MIST 7000 ESPAOL Potencia: 1700 W V... lang:it **score:28** filesize: 2.72 M page_count: 73 document date: 2023-09-11



[\[pdf\]](#) Accessories

Catálogo Freidoras Dietéticas 2023 ENcdn cecotec cloud s3 amazonaws media IFA2023 EN |||

CECOFRY AIR FRYERS. The New Frito, the revolution is back. The Cecotec air fryers, which have chan ... even cooking of all your dishes. COMPOSITION: Air fryer Basket Instruction manual x x kg 8435484**049450** Box 18435484**049457** Master **04945** 76 Cecofry Full InoxBlack 5500 Connected Pack Digital ai... lang:en **score:11** filesize: 28.02 M page_count: 49 document date: 2023-08-21