

Cecotec 08233

Cecotec EnergySilence 600 Woodstyle Pedestal Fan

MODEL: 08233

Brand: Cecotec

IMPORTANT SAFETY INSTRUCTIONS

Please read this manual carefully before using the appliance and keep it for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the fan is placed on a stable, flat surface to prevent tipping.
- Do not insert fingers or any objects into the fan grille when it is operating.
- Unplug the fan from the power outlet before cleaning or performing any maintenance.
- Keep the power cord away from heated surfaces and do not run it under carpets.
- This appliance is for indoor use only. Do not use outdoors or in wet conditions.
- Do not operate the fan with a damaged cord or plug. Contact qualified service personnel for repair.

PRODUCT OVERVIEW

The Cecotec EnergySilence 600 Woodstyle Pedestal Fan is designed to provide powerful and quiet airflow for your comfort. It features a robust motor, adjustable height, and an oscillation function to distribute air effectively.





Figure 1: Fully assembled Cecotec EnergySilence 600 Woodstyle Pedestal Fan, showcasing its design and airflow.

SETUP AND ASSEMBLY

Follow these steps to assemble your Cecotec EnergySilence 600 Woodstyle Pedestal Fan:

1. **Base Assembly:** Attach the main pole to the circular base. Ensure it is securely fastened using the provided screws or locking mechanism.
2. **Telescopic Pole Adjustment:** Insert the upper telescopic pole into the lower pole. Adjust the height to your desired level (between 90 cm and 125 cm) and secure it with the height adjustment knob.
3. **Motor Unit Attachment:** Mount the fan motor unit onto the top of the telescopic pole. Ensure it clicks into place or

is secured with the designated screw.

4. **Grille and Blade Installation:** Carefully attach the rear grille to the motor unit. Then, place the fan blades onto the motor shaft, securing them with the retaining cap. Finally, attach the front grille and secure it with the clips or screws provided.

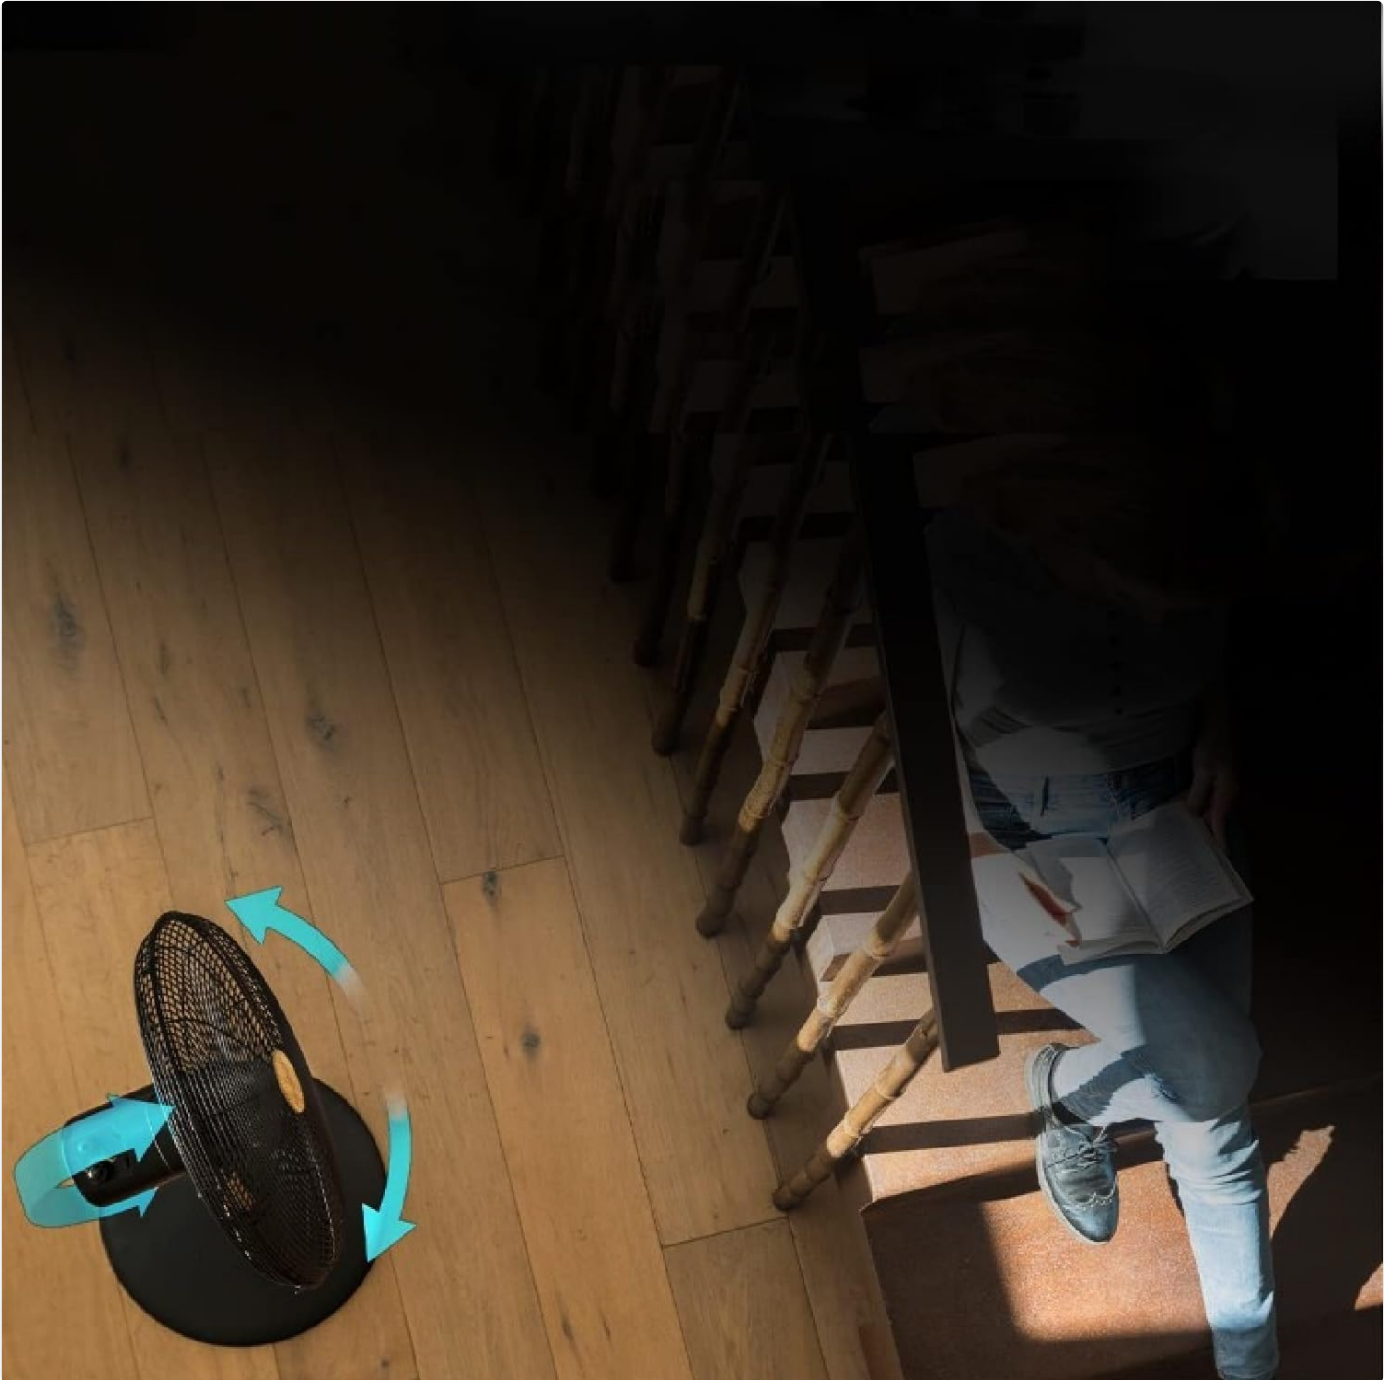


Figure 2: Illustration of the fan's adjustable height feature, allowing customization from 90 cm to 125 cm.

Once assembled, ensure all connections are tight and the fan is stable before plugging it into a power outlet.

OPERATING INSTRUCTIONS

Your Cecotec fan offers simple controls for optimal comfort.

- **Power On/Off:** Plug the fan into a standard electrical outlet. Use the control knob located on the motor unit to turn the fan on or off.
- **Speed Selection:** Rotate the control knob to select one of the three available speeds:
 - **Low:** For gentle airflow and minimal noise.

- **Medium:** For moderate cooling.
- **High:** For maximum airflow and rapid cooling.
- **Oscillation Function:** To activate the automatic oscillation, press down the oscillation pin located on top of the motor unit. The fan head will sweep from side to side, distributing air across a wider area. Pull the pin up to stop oscillation and direct airflow in a fixed direction.
- **Adjusting Tilt:** The fan head can be manually tilted up or down to direct airflow precisely where needed. Gently push or pull the fan head to adjust its angle.



Figure 3: Close-up view of the control knob on the fan's motor unit, used for power and speed selection.



Figure 4: The fan operating with its oscillation feature, effectively circulating air within a living space.

MAINTENANCE AND CARE

Regular cleaning and proper care will ensure the longevity and efficient operation of your fan.

- **Cleaning:**

- Always unplug the fan before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- To clean the fan blades and inside the grilles, you may need to carefully remove the front grille. Refer to the assembly instructions for reverse steps. Use a soft brush or vacuum cleaner to remove dust and debris.
- Ensure all parts are completely dry before reassembling and plugging in the fan.

- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging to protect it from dust and damage.

- **Motor Lubrication:** The fan motor is permanently lubricated and requires no additional lubrication.

TROUBLESHOOTING

If you encounter any issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply; fan unplugged; power outlet faulty; control knob not set to ON.	Check if the fan is properly plugged into a working outlet. Ensure the control knob is turned to a speed setting (Low, Medium, or High).
Weak airflow.	Fan speed set too low; grilles or blades are dirty.	Increase the fan speed. Clean the fan grilles and blades to remove dust buildup.
Unusual noise or rattling.	Loose parts; fan not on a stable surface; debris inside the grille.	Ensure all assembly screws are tight. Place the fan on a flat, stable surface. Unplug and check for any foreign objects inside the grilles or around the blades.
Oscillation not working.	Oscillation pin not pressed down.	Press the oscillation pin down firmly to engage the oscillation function.

If the problem persists after trying these solutions, please contact Cecotec customer support or your retailer for assistance.

SPECIFICATIONS

- **Model:** EnergySilence 600 Woodstyle
- **Model Number:** 08233
- **Brand:** Cecotec
- **Power:** 50 W
- **Fan Diameter:** 16 inches (40 cm)
- **Number of Blades:** 4
- **Speed Settings:** 3 (Low, Medium, High)
- **Oscillation:** Automatic
- **Adjustable Height:** 90 cm to 125 cm
- **Dimensions (assembled):** Approximately 42 cm (depth) x 42 cm (width) x 134 cm (height)
- **Weight:** 5.7 kg
- **Power Source:** Electric Cord
- **Product ASIN:** B0BPZP1TY1

WARRANTY AND CUSTOMER SUPPORT

This Cecotec product is covered by a manufacturer's warranty. For detailed information regarding the warranty period, terms, and conditions, please refer to the warranty card included with your product or visit the official Cecotec website.

For technical assistance, spare parts, or any inquiries not covered in this manual, please contact Cecotec customer support. Keep your purchase receipt and product model number (08233) handy when contacting support.

You can find contact information for Cecotec customer service on their official website or through your retailer.

Documents - Cecotec – 08233



[\[pdf\]](#) User Manual Instructions

ENERGYSILENCE 600 WOODSTYLE 610 Producto EnergySilence Woodstyle Steelstyle 620 Retrostyle

Potencia 50 W Voltaje y frecuencia 220 240 V~ 60 Hz Cecotec 8233 CZ EN DE dwn alza cz manual 131345 |||

ENERGYSILENCE 600 WOODSTYLE ENERGYSILENCE 610 STEELSTYLE

ENERGYSILENCE 620 RETROSTYLE Ventilador de ... en el cable durante la

limpieza del producto. 6. ESPECIFICACIONES TCNICAS Referencia del producto:

08233/08234/08235 Producto: EnergySilence 600 Woodstyle/EnergySilence 610

Steelstyle/EnergySilence 6...

lang:it **score:27** filesize: 1.63 M page_count: 29 document date: 2022-12-20



[\[pdf\]](#) Catalog

Catalogo Ventiladores de pie 2023 CECOTEC EN cdn cecotec cloud s3 amazonaws media IFA2023 |||

COOLING Stand fans Index Adjustable speed 4 2 in 1 5 Minimum consumption 6

Smart control 7 ... tion manual 220-240 V-, 50/60 Hz 55 W 8435484058759 Box

18435484058756 Master 05875 16 8435484**082334** Box 18435484**082331** Master

08233 Discover the range 17 EnergySilence 610 Steelstyle St...

lang:en **score:14** filesize: 9.11 M page_count: 21 document date: 2023-03-01



[\[pdf\]](#)

C T ES Agosto 23 CECOTEC cdn cecotec cloud s3 amazonaws media IFA2023 |||

CATLOGO GENERAL IFA 2023 Introduccin de la compaa CECOTEC es una compaa

joven y disruptiva que, en ... ucciones GARANTA: 3 aos VENTILACIN Enero 23 58 x

14 x 45 cm, 7.15 kg caja 40 uds/palet 8435484**082334** caja **08233** EnergySilence 610

Steelstyle Ventilador de pie con 50 W y acabado en acero, 16...

lang:es **score:8** filesize: 88.75 M page_count: 2028 document date: 2023-09-01