

**Cecotec IN-DMI-HO17330054**

# Cecotec Energysilence 2600 Sunflower 3in1 Standing Fan User Manual

Model: IN-DMI-HO17330054 / 08243

## INTRODUCTION

---

Thank you for choosing the Cecotec Energysilence 2600 Sunflower 3in1 Standing Fan. This versatile and portable cooling solution is designed to provide optimal airflow and comfort in various indoor settings. Its innovative 3-in-1 design allows it to function as a standing fan, a desk fan, or a compact, easily transportable unit. This manual provides essential information for safe operation, assembly, maintenance, and troubleshooting to ensure you get the most out of your fan.



Figure 1: The Cecotec Energysilence 2600 Sunflower 3in1 Standing Fan showcasing its adaptability across different heights and orientations, alongside its remote control.

## IMPORTANT SAFETY INSTRUCTIONS

---

Please read these instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the fan is placed on a stable, flat surface to prevent it from tipping over.
- Do not insert fingers or any objects into the fan grille when it is operating.
- Keep the fan away from water or other liquids. Do not use it in damp or wet environments.
- Unplug the fan from the power source before cleaning or performing any maintenance.
- Do not use the fan if the power cord or plug is damaged. Contact qualified service personnel for repair.

- This appliance is for indoor use only. Do not use outdoors.
- Keep out of reach of children and pets.
- Do not cover the fan during operation. Ensure adequate ventilation around the unit.

## PACKAGE CONTENTS

---

Carefully unpack the box and ensure all items are present and in good condition. If any items are missing or damaged, contact your retailer.

- Cecotec Energysilence 2600 Sunflower 3in1 Fan Unit
- Adjustable Telescopic Pole (multiple sections)
- Base Plate
- Remote Control
- Power Adapter
- User Manual



Figure 2: Exploded view illustrating the main components of the fan, including the fan head, base, and various pole sections for height adjustment.

## SETUP AND ASSEMBLY

---

The Cecotec Energysilence 2600 Sunflower fan offers multiple configurations. Follow these steps for assembly:

### 1. Desk Fan Configuration:

- Attach the fan head directly to the base plate. Ensure it clicks securely into place.
- This configuration is ideal for use on desks or tabletops.

### 2. Standing Fan Configuration:

- Select the desired number of telescopic pole sections. The fan supports multiple heights.
- Screw the chosen pole sections together firmly.
- Attach one end of the assembled pole to the base plate and the other end to the fan head. Ensure all

connections are secure.

- The fan can be adjusted to various heights for floor standing use.

### 3. Compact Storage/Portability:

- To store or transport, detach the fan head from the pole/base.
- The telescopic pole sections can be collapsed and stored within the base unit for a highly compact form factor.



Figure 3: Illustration of the assembly process, demonstrating how the telescopic pole connects to the base for height adjustment.



Figure 4: The fan in its compact desk configuration, suitable for tabletop use.

## OPERATING INSTRUCTIONS

---

The fan can be operated using the touch controls on the unit or the included remote control.

### Controls:

- **Power Button:** Press to turn the fan ON or OFF.
- **Speed Adjustment:** Cycle through different fan speeds (e.g., Low, Medium, High, or numerical levels 1-12).
- **Oscillation Button:** Activate or deactivate horizontal oscillation. The fan can also oscillate vertically.
- **Mode Button:** Select different operating modes (e.g., Normal, Sleep, Eco).
- **Timer Button:** Set a timer for automatic shut-off.

### Features:

- **Adjustable Airflow:** The fan head can be manually tilted vertically to direct airflow precisely.
- **Oscillation:** Automatic horizontal oscillation distributes air across a wider area. Vertical oscillation may also be available depending on the model.
- **Quiet Operation:** Designed for low noise levels, especially at lower speeds.
- **Battery Powered:** The fan can operate on battery power, offering portability. Monitor the battery indicator for charge level.



Figure 5: The fan in operation, demonstrating its use in a typical indoor setting.



Figure 6: The fan's versatility shown through its three distinct height configurations.

## MAINTENANCE AND CARE

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your fan.

- **Cleaning the Exterior:**

- Always unplug the fan before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure no water enters the motor housing or electrical components.

- **Cleaning the Fan Grille and Blades:**

- Dust can accumulate on the grille and blades, affecting airflow.
- Use a vacuum cleaner with a brush attachment or a soft, dry cloth to remove dust from the front and rear grilles.

- For deeper cleaning, consult the product's specific instructions on how to safely remove the front grille to access the blades.

• **Storage:**

- When not in use for extended periods, store the fan in a cool, dry place.
- Utilize its compact storage feature by collapsing the pole sections into the base.

**TROUBLESHOOTING**

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply; Battery depleted; Power button not pressed.	Ensure the power adapter is securely plugged in. Charge the battery if operating wirelessly. Press the power button firmly.
Weak airflow.	Fan speed too low; Grille/blades are dusty; Obstruction.	Increase fan speed. Clean the fan grille and blades. Ensure nothing is blocking the air intake or output.
Fan makes unusual noise.	Loose parts; Obstruction inside the grille; Fan not on a stable surface.	Check for any loose components. Unplug and inspect the grille for foreign objects. Place the fan on a flat, stable surface.
Remote control not working.	Dead batteries; Obstruction between remote and fan; Remote not pointed correctly.	Replace remote control batteries. Ensure a clear line of sight to the fan's receiver. Point the remote directly at the fan.

If the problem persists after trying these solutions, please contact customer support.

**SPECIFICATIONS**

Feature	Detail
Brand	Cecotec
Model Number	IN-DMI-HO17330054
Model Name	08243
Product Dimensions	33 x 33 x 134 cm (max height)
Item Weight	5 kg
Power / Wattage	22 watts
Power Source	Battery Powered
Electric Fan Design	Floor Fan (3-in-1 convertible)

Feature	Detail
Control Method	Touch, Remote
Indoor/Outdoor Usage	Indoor

## WARRANTY AND SUPPORT

Cecotec products are manufactured to the highest quality standards. This product is covered by a manufacturer's warranty against defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, warranty service, or to purchase replacement parts, please visit the official Cecotec website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.

*Note: Warranty terms and conditions may vary by region.*

