

## Cecotec Bolero DressCode 7500 Inverter Steel A

# Cecotec Bolero Dresscode 7500 Inverter Steel A 7 kg Front-Load Washing Machine User Manual

Model: Bolero DressCode 7500 Inverter Steel A

## 1. INTRODUCTION

Thank you for choosing the Cecotec Bolero Dresscode 7500 Inverter Steel A washing machine. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read it thoroughly before first use and keep it for future reference.

## 2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

### 2.1 General Safety

- Ensure the power supply matches the voltage specified on the rating plate.
- Do not install or store the appliance where it will be exposed to weather or freezing temperatures.
- Do not wash items that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Keep the area around the appliance clear of flammable materials.
- Do not allow children to play on or in the appliance. Close supervision is necessary when the appliance is used near children.
- Unplug the appliance from the power supply before cleaning or performing any maintenance.

### 2.2 Electrical Safety

- Do not operate any appliance with a damaged cord or plug, or if it has been dropped or damaged in any manner.
- Do not pull the power cord to disconnect the appliance. Grasp the plug firmly and pull to disconnect.
- Do not use extension cords or ungrounded adapters.

## 3. PRODUCT OVERVIEW

Familiarize yourself with the main components and control panel of your washing machine.



Figure 3.1: Front view of the Cecotec Bolero Dresscode 7500 Inverter Steel A washing machine, showing the control panel, detergent dispenser, and drum door.

### 3.1 Main Components

- **Drum:** The internal part where laundry is washed. Features a Pearl Drum texture for gentle and effective cleaning.
- **Control Panel:** Located at the top, it includes the program selector dial, digital display, and function buttons.
- **Detergent Dispenser:** Compartments for pre-wash, main wash detergent, and fabric softener.
- **Door:** Front-loading door for loading and unloading laundry.
- **Inverter Plus Motor:** Energy-efficient motor designed for quiet operation and reduced vibrations, especially during spinning.

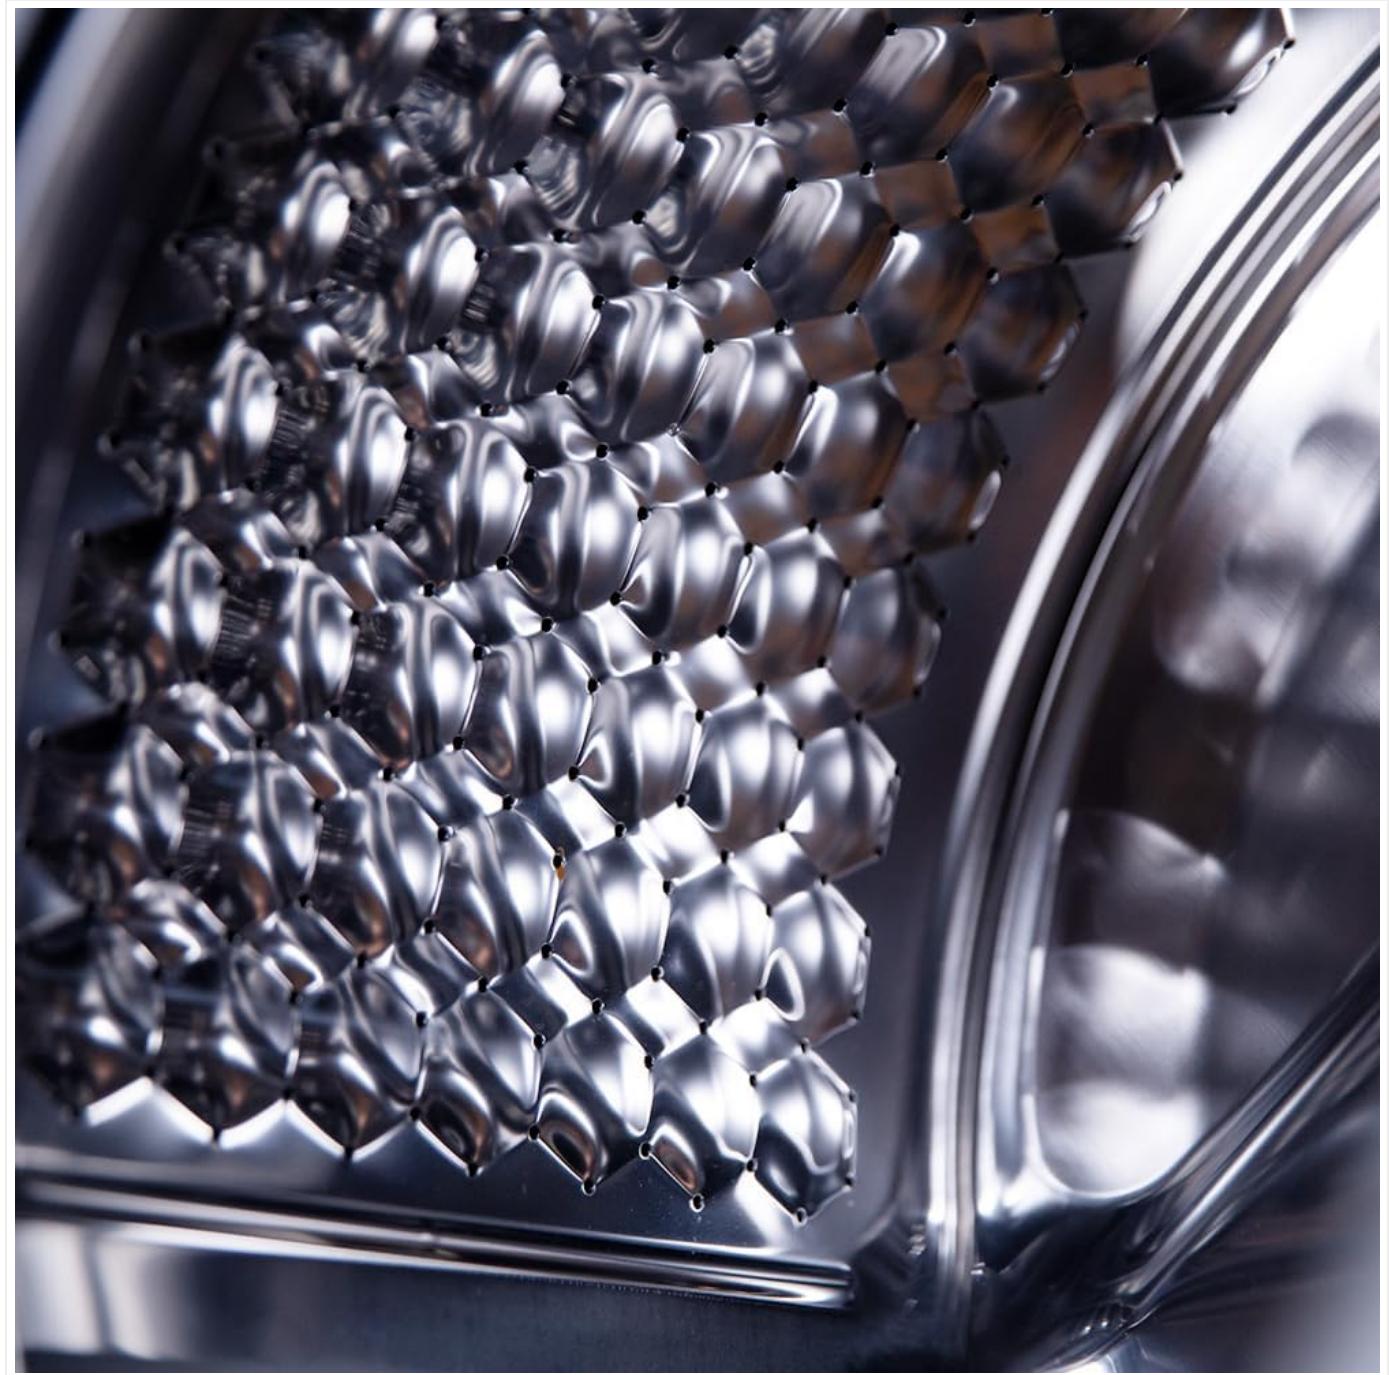


Figure 3.2: Close-up view of the Pearl Drum interior, designed to protect fabrics during washing.

### 3.2 Control Panel

The control panel allows you to select programs and customize wash settings.



Figure 3.3: A hand adjusting the program selection dial on the washing machine's control panel.

- **Program Selector Dial:** Used to choose from 16 available wash programs.
- **Digital Display:** Shows remaining time, error codes, and selected options.
- **Function Buttons:** Buttons for additional features like Delay Start, temperature adjustment, and spin speed selection.

## 4. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine.

### 4.1 Unpacking

- Remove all packaging materials, including the polystyrene base and any protective film.
- Remove the transport bolts from the rear of the appliance. Keep them for future transport if needed.

### 4.2 Positioning and Leveling

- Place the washing machine on a firm, level floor.

- Adjust the adjustable feet at the bottom of the appliance to ensure it is perfectly level and stable. Use a spirit level to check.

## 4.3 Water and Drain Connection

- Connect the inlet hose to a cold water tap with a  $\frac{3}{4}$ -inch thread. Ensure the connection is tight to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining.

## 4.4 Electrical Connection

- Plug the power cord into a grounded electrical outlet.
- Ensure the outlet is easily accessible.

## 4.5 First Use

- Before washing clothes for the first time, run an empty cycle (e.g., a quick wash program) without laundry or detergent to clean the drum and internal components.

# 5. OPERATING INSTRUCTIONS

---

Follow these steps for effective and efficient washing.

## 5.1 Preparing Laundry

- Sort laundry by fabric type, color, and degree of soiling.
- Check garment care labels for washing instructions.
- Empty pockets and close zippers and hooks to prevent damage.



Figure 5.1: Loading laundry into the washing machine.

## 5.2 Adding Detergent and Additives

- Pull out the detergent dispenser drawer.
- Add appropriate amounts of detergent to the main wash compartment (II) and fabric softener to the softener compartment (flower symbol). If using pre-wash, add detergent to compartment (I).
- Close the dispenser drawer gently.

## 5.3 Selecting a Program

- Turn the Program Selector Dial to choose one of the 16 available programs. The selected program will be displayed on the screen.
- **Available Programs include:** Mix, Cotton, Super Quick, Eco 40-60, Wool, Pre-wash, T-shirts, Sport, Intensive, Bedding, Anti-allergy, Spin/Drain, Spin, Drum Clean, Delicate, Cotton 20°C.
- **SteamMax:** This feature uses steam to penetrate fabrics for enhanced cleaning and freshness.
- **Allergy Care:** Sterilizes laundry by 99.9% with steam before washing, effective even with cold water, ensuring germ and

bacteria-free clothes.

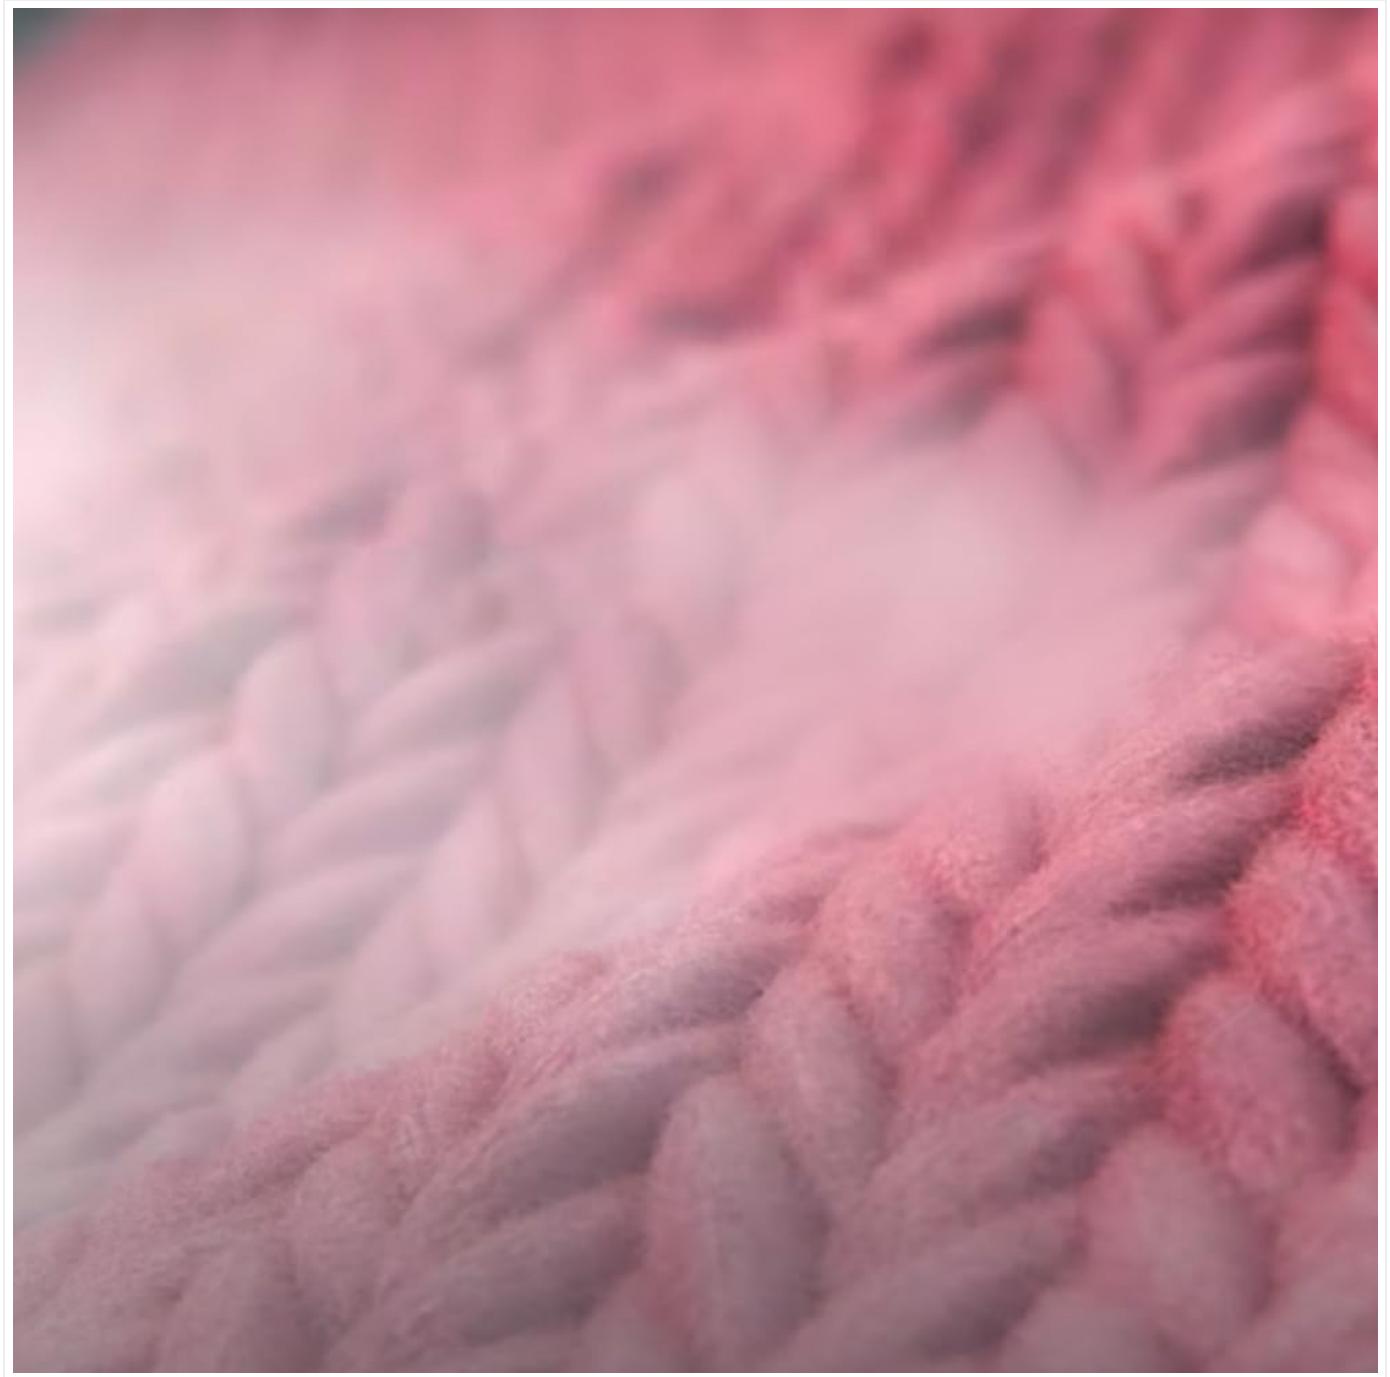


Figure 5.2: Visual representation of the SteamMax function, showing steam penetrating fabric.

## 5.4 Customizing Settings

- Use the function buttons to adjust temperature, spin speed, or activate special features like Delay Start.
- **Delay Start:** Allows you to program the washing machine to finish its cycle at a later time, up to 24 hours.



Figure 5.3: Setting the Delay Start function on the control panel.

## 5.5 Starting and Ending a Cycle

- Press the Start/Pause button to begin the wash cycle.
- The display will show the remaining time.
- Once the cycle is complete, the machine will signal with an audible alert (if enabled) and the display will show "End".
- Open the door and remove your laundry.

## 6. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the lifespan of your appliance.

### 6.1 Cleaning the Detergent Dispenser

- Pull out the dispenser drawer completely.
- Remove any removable parts and rinse them under running water.

- Clean the drawer housing with a brush.
- Reassemble and reinsert the drawer.

## 6.2 Drum Clean Function

- The washing machine features a "Drum Clean" program designed to clean the drum itself, preventing bacteria, dirt, and odors.
- Run this program periodically, especially if you notice any unpleasant smells.

## 6.3 Cleaning the Filter

- Locate the drain pump filter, usually at the bottom front of the machine.
- Place a shallow container underneath to catch any residual water.
- Carefully open the cover and unscrew the filter.
- Remove any lint, coins, or foreign objects.
- Clean the filter under running water and screw it back in securely.

## 6.4 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

## 7. TROUBLESHOOTING

---

Before contacting customer service, try these simple solutions for common issues.

Problem	Possible Cause	Solution
Machine does not start.	No power; Door not closed properly; Program not selected.	Check power plug and fuse; Ensure door is firmly closed; Select a program and press Start.
Water is not filling.	Water tap closed; Inlet hose kinked; Water pressure too low.	Open water tap; Straighten hose; Check household water pressure.
Machine is vibrating excessively.	Transport bolts not removed; Machine not level; Laundry unevenly distributed.	Remove transport bolts; Adjust leveling feet; Redistribute laundry in the drum.
Water leaks.	Hose connections loose; Detergent dispenser overflowing.	Tighten hose connections; Do not overfill detergent dispenser.
Unpleasant odors.	Bacteria buildup in drum; Detergent residue.	Run the "Drum Clean" program; Clean detergent dispenser.

## 8. SPECIFICATIONS

---

Key technical specifications for your Cecotec Bolero Dresscode 7500 Inverter Steel A washing machine.

Feature	Value
Model Name	Bolero DressCode 7500 Inverter Steel A
Brand	Cecotec
Capacity	7 Kilograms

Feature	Value
Energy Efficiency Class	A
Product Dimensions (D x W x H)	50.5D x 59W x 85.5H centimeters
Item Weight	58.1 Kilograms
Special Features	Inverter, SteamMax, Pearl Drum, Allergy Care, Delay Start
Access Location	Front Load
Color	Steel   Series 500
Recommended Uses	Domestic
Included Components	2 x Washing Machine (Note: This might be a packaging error or for bulk purchase, typically 1 unit is included)



Figure 8.1: Dimensional drawing of the washing machine, showing approximate measurements.

## 9. WARRANTY AND SUPPORT


Your Cecotec Bolero Dresscode 7500 Inverter Steel A washing machine comes with a warranty to ensure your peace of mind.

- **Inverter Motor Warranty:** The Inverter Plus motor is backed by a 10-year warranty, highlighting its durability and reliability.
- For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official Cecotec website.
- For technical support, spare parts, or service requests, please contact Cecotec customer service through their official channels.

## Related Documents

	<p><a href="#"><u>Manual de Instrucciones: Cecotec Bolero Dresscode 8300/9300 Inverter Max A Lavadora</u></a> Guía completa de instrucciones para las lavadoras Cecotec Bolero Dresscode 8300 y 9300 Inverter Max A. Aprenda sobre instalación, funcionamiento, mantenimiento y solución de problemas para optimizar el uso de su electrodoméstico.</p>
	<p><a href="#"><u>Manual de Usuario Lavadora Cecotec Bolero DressCode 8500 Inverter A / Steel A</u></a> Manual de usuario completo para las lavadoras Cecotec Bolero DressCode 8500 Inverter A y Steel A. Incluye instrucciones de seguridad, instalación, funcionamiento, mantenimiento, solución de problemas y especificaciones técnicas.</p>
	<p><a href="#"><u>Cecotec Bolero DressCode 10900 Autodose Inverter: Manual de Usuario y Guía de Instrucciones</u></a> Descubra el manual de usuario para la lavadora Cecotec Bolero DressCode 10900 Autodose Inverter. Encuentre instrucciones detalladas, guías de seguridad y especificaciones técnicas para su correcto funcionamiento y mantenimiento.</p>
	<p><a href="#"><u>Cecotec Bolero DressCode Lavadoras: Manual de Instrucciones y Guía de Uso</u></a> Manual completo de instrucciones para las lavadoras Cecotec Bolero DressCode (modelos 7610, 8610, 9610, 10610 Inverter). Incluye guías de instalación, operación, seguridad, mantenimiento y especificaciones técnicas.</p>

Documents - Cecotec – Bolero DressCode 7500 Inverter Steel A

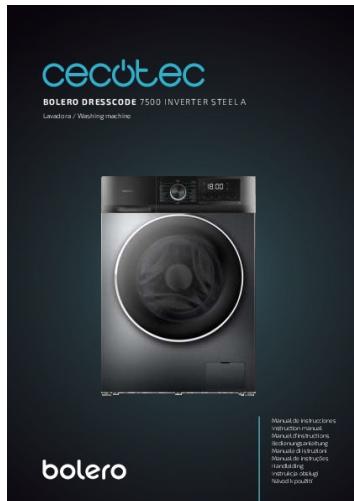


### [pdf] User Manual Instructions

Descargar manual Bolero DressCode 7500 Inverter Steel A Lavadora de 7 kg clase Cecotec bolero dresscode inverter steel a user es cdn cecotec cloud media files |||

## BOLERO DRESSCODE 7500 INVERTER STEEL A Lavadora / Washing machine

Manual de instrucciones Instructio ... el siguiente cdigo QR tambin se encuentra en la etiqueta energtica : Modelo Referencia Cdigo QR Bolero DressCode 7500 Inverter Steel A 02795 Panel de control Selector programas Gire el selector...

lang:it score:69 filesize: 6.27 M page\_count: 115 document date: 2023-09-11

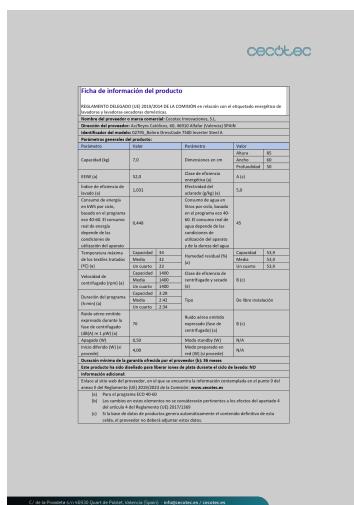

### [pdf]

02795 Roberto Cortina Ficha de producto Bolero DressCode 7500 Inverter Steel A Lavadora 7 kg clase Cecotec bolero dresscode inverter steel a productenergyinformation 0 spec url es cdn cecotec cloud media files |||

Ficha de informacin del producto REGLAMENTO DELEGADO UE 2019/2014 DE LA COMISIN en relacin con el ... I proveedor: Av/Reyes Catlicos, 60, 46910 Alfafar Valencia SPAIN Identificador del modelo: 02795\_Bolero DressCode 7500 Inverter Steel A Parmetros generales del producto: Parmetro Valor Parmetro...

lang:es score:29 filesize: 210.37 K page\_count: 1 document date: 2023-09-05



### [pdf]

Catlogo Bolero Lavadoras 2023 CECOTEC EN 1cdn cecotec cloud s3 amazonaws media IFA2023 1 ||| BOLERO DRESSCODE Washing machines Efficient washing that takes care of your world. Bolero DressCod ... 220-240 V- 50 Hz 1850 W 8435484024655 Box 18435484024652 Master 02465 Discover the range 23 Bolero DressCode 7500 Inverter Steel A 7-kg washing machine, steel capacity and 1400 rpm, inverter p...

lang:en score:27 filesize: 12.05 M page\_count: 27 document date: 2023-09-01